


Cat Slope Assist makes grading easy by automatically maintaining a blade angle without the need for an external Laser or GPS reference. This guide describes how to enable the **Cat Slope Assist** Basic Mode which allows the operator to enjoy the benefits of **Cat Slope Assist** without changing operating style.

Step 1: Enter the **Cat Slope Assist** Basic Screen

Press the  Button



Home Screen

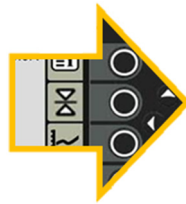

Cat Slope Assist Basic Screen

Step 2: Activate **Cat Slope Assist**

Press the **Yellow Button** on the Dozer Control



Step 3: Enjoy **Cat Slope Assist**

Run the dozer like you normally would. The blade will automatically maintain the blade angles displayed on the **Cat Slope Assist** Basic Screen.

Disable: **Cat Slope Assist**

Press the **Yellow Button** on the Dozer Control



OR



Home Screen