

Cat[®] Grade Control for Wheel Tractor Scrapers Quick Reference

Using the Keypad

- 1) **Help Key** – Press HELP key and any flashing button to receive information about each function on the display panel. Press HELP to cancel.
- 2) **Keypad** – One light – “System” active. Both lights – “Automatic Control”. For each “sequence” (Dig-Haul-Unload-Return), press and hold three seconds to save new bowl and apron positions.
- 3) Ready to Dig
- 4) Ready to Haul
- 5) Ready Bowl Unload
- 6) Ready to Return
- 7) Load Assist
- 8) Cat Grade Control Select
- 9) Cat Grade Control Increment
- 10) Cat Grade Control Decrement



Safety Interlocks

- ▶ For Sequence Assist, parking brake must be OFF.
- ▶ For Auto Grade Control, machine must be in Forward gear.
- ▶ For Auto Load Assist, machine must be in 2nd gear or Load Sequence.

Using the Controls



Joystick Controls

- 1) Sequence Assist mode select button
- 2) Load Assist/Grade Control Auto/Man button

For complete operating instructions, refer to the OMM (SEBU8473-01)



Scan with your Smart Phone to view instructional videos!

Don't have a QR reader? Go to <http://gettag.mobi>