

Cat® Grade Control Display Quick Reference

Using the Display



This quick reference card is to familiarize you with using the grade display. Please refer to the individual machine OMMs for complete operating instructions on using the Cat® Grade Control system.

- | | |
|--|---|
| 1) Offsets – indicates operator applied offsets | 8) Arrow keys – used to enter text |
| 2) Softkeys – indicates grade control functions | 9) OK – used to “accept” a menu choice |
| 3) Hard keys – selects grade control functions | 10) USB port – used to transfer data |
| 4) Next key – move through menus | 11) Menu key – access setup/settings menus |
| 5) Zoom in (+) – zoom in to view machine | 12) Power on/off key – turns display on/off |
| 6) Zoom out (-) – zoom out to view entire site | 13) Light Bar – grade display indicators |
| 7) Escape – cancels a menu choice | 14) Auto/Man indicator – state of automatics |

Troubleshooting

If system is not functioning:

- 1) Check to make sure a “design” is selected and machine is in design area
- 2) Go to “diagnostics” screen and check the following:
 - GPS Mode is RTK (Fixed)
 - 5 or more satellites are available
 - Data Link is reporting “information received” a large percentage of the time

If system is still not functioning, see machine OMM diagnostics section.

***For complete operating instructions, refer to the following OMMs:
TTT (SEBU8359-00), WTS (SEBU8293-00)***



Scan with your Smart Phone to view instructional videos!

Don't have a QR reader? Go to <http://gettag.mobi>