

Machine Safety -Before Operations -Waste Industry

SAFETY.CAT.COM"

Discussion Date:
Employee Participants:

The material in this document is provided for informational purposes only and not as a comprehensive or exhaustive resource on this topic. This material has been compiled from a multitude of sources believed to be accurate; however, Caterpillar Inc. assumes no responsibility for the accuracy or currency of this information and encourages you to consult experts in this area for more information. In no event does the content of this document supersede any applicable local, state, or federal statutes or regulations.

Toolbox Talks are intended to facilitate health and safety discussions on the job site. For additional Toolbox Talks, please visit SAFETY.CAT.COM™

TOPIC: Machine Safety—Before Operations

Pre-Start Procedures

- Clear all personnel and obstacles from the machine path.
- Turn battery disconnect switch to "ON."
- Clean and secure all windows and doors.
- Adjust mirrors for optimum vision.
- If equipped with rearward vision cameras, make sure they are working correctly
- Check back up alarm operation before starting machine
- Adjust seat for pedal operation and operator's height and weight.
- Inspect and fasten seatbelt or harness.
- If equipped with CMS, check for proper function of all indicator lights, warning lights, and horns
- Start engine from operator's compartment only.

After Starting Machine

- Allow engine to warm up at low idle.
- If equipped with EMS, conduct monitoring system test (if applicable) by activating the monitoring system switch, observe all lights and warnings and listen for action alarm to sound.
- Check panel indicator lights and gauges frequently.
- Check transmission oil level once it comes to operating temperature.
- If operating a rubber-tired machine, perform the proper brake checks according to the Operations and Maintenance Manual Before moving the machine.

Preparing to Move

- Sound horn according to site regulations (allowing three to five seconds after to enable anyone to get out of the way). Visually inspect the area during that time.
- Lower the dump body or raise all lowered implements.
- Push on the service brake pedal and disengage parking brake.
- Unlock transmission and move control lever to desired gear.
- Release the service brake pedal; smoothly accelerate and safely govern machine speed.

SAFETY.CAT.COM™ http://safety.cat.com/toolbox

