


Cat® GRADE with Slope Assist™

for Dozers



SIMPLE BLADE CONTROL – NO ADDED HARDWARE OR GPS SIGNAL NEEDED

- Cat® GRADE with Slope Assist™ makes just about any dozer job faster and easier – build pads, spread truck dumps, build slopes/embankments and so much more.
- Maintains blade angles so you get better surface quality – even with a less experienced operator.
- Finish jobs up to 39% faster, with fewer passes, up to 82% fewer operator inputs and less rework.
- No base station or laser needed, no additional hardware, software or equipment to buy, nothing to remove from the machine at the end of the day.
- Next Gen* Slope Assist features a larger, more intuitive operator interface that is easy to use.
- Works seamlessly alongside 3D GPS systems for transitions, cleanup, simple design plans/changes, areas where GPS signal may be lost/unavailable.

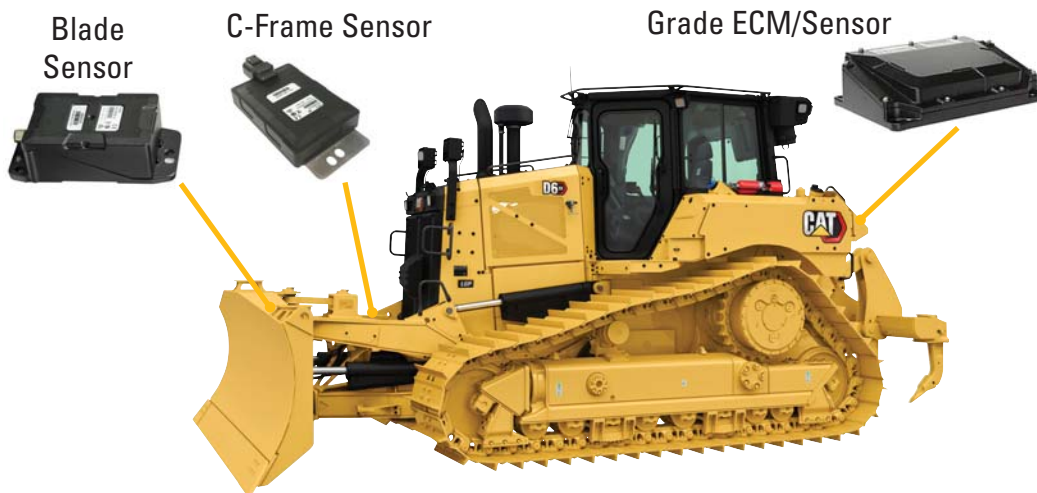

Next Gen Operator Interface



Liquid Crystal Display



*Next Gen GRADE with 3D available on a growing range of Cat dozers. Please consult your Cat dealer for specific model availability.



> MAINTAIN BLADE ANGLE. SIMPLY.

- Slope Assist is a simple, built-in blade control system you can use for most of the work you do with your dozer.
- Basic and Advanced modes let you choose the right features to maximize your productivity.
- Updated Next Gen Slope Assist lets you choose to control mainfall or cross slope separately, or control both.
- Easily switch between manual and automatic mode with the push of a button.
- Change your blade position any time – release the control and the dozer will maintain your new blade position.
- Accurate to within 1% of mainfall/ blade slope.
- Get onboard HELP and detailed instructions at the press of a button.

> FULLY INTEGRATED.

- Slope Assist sensors are incorporated into the blade so components are protected for durability.
- No slope angle indicator needed – mainfall slope and blade cross slope show right on the main display.

> BASIC OR ADVANCED.

- Basic Mode – push the Auto button on the joystick, move the blade to the desired position and Slope Assist will maintain that position.
- Mainfall automatically lifts or lowers blade to maintain desired slope.
- Blade Cross Slope automatically tilts blade to maintain desired blade cross slope.
- Advanced Mode gives you more features to help you work from existing planes.
- Recall Value places and controls blade to consistent value with each auto initiation.
- Swap Slope reverses slope values when changing directions.
- Match Slope lets you put the blade on the ground and push a button to match recall value to the existing slope.
- Increment/Decrement – joystick buttons adjust mainfall or blade cross slope away from corresponding recall value.

> LEARN MORE.

- Consult your local Cat dealer for specific details and availability by dozer model.
- Slope Assist is supported by your Cat dealer or SITECH® technology partner.

www.cat.com

CAT, CATERPILLAR, LET'S DO THE WORK, their respective logos, "Caterpillar Yellow", the "Power Edge" and Cat "Modern Hex" trade dress as well as corporate and product identity used herein, are trademarks of Caterpillar and may not be used without permission.

SITECH is a trademark of Trimble Navigation Limited, registered in the United States and in other countries.

AEXQ2387-01
Replaces AEXQ2387
Global
© 2019 Caterpillar
All Rights Reserved



GRADE

