

# ASSEMBLY


Cover Group

<- NEW MODEL

INV1250 Cover Group

IN

OUT

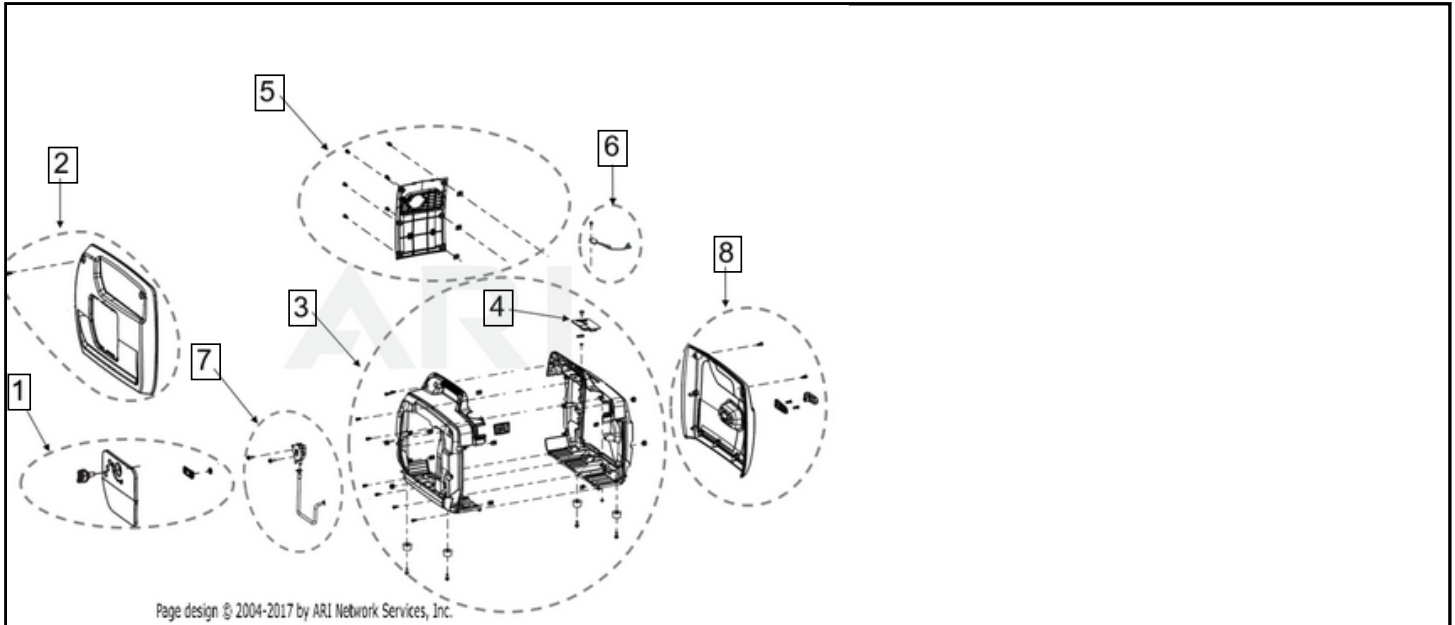

Page design © 2004-2017 by ARI Network Services, Inc.

Click and drag to move diagram view

Tag	Part #	Description	USD	CAD
1	589-6133	Service Door Group   Includes maintenance door knob, left maintenance door, and hardware	Call Us	Call Us
2	589-6134	Right Cover Group   Includes left cover board and hardware	Call Us	Call Us
3	589-6135	Outer Frame Group   Includes left and right shell, fuel tank rubber sleeve, feet, front panel decorated plate, spark plug maintenance door, and hardware	Call Us	Call Us
4	589-6164	Spark Plug Maintenance Door   Spark Plug Maintenance Door	Call Us	Call Us
5	589-6136	Rear Cover Group   Includes muffler side cover, and hardware	Call Us	Call Us
6	589-6137	Voltage Regulator Group   Includes voltage regulator and hardware	Call Us	Call Us
7	589-6138	Fuel Pump Group   Includes gasoline pump assembly, fuel line, and hardware	Call Us	Call Us
8	589-6139	Left Cover Group   Includes right cover board, starting rope guide subassembly, recoil starter cable handle, and hardware	Call Us	Call Us