

ASSEMBLY


Crankcase Group

<- NEW MODEL

INV4000 E *Crankcase Group*

IN

OUT

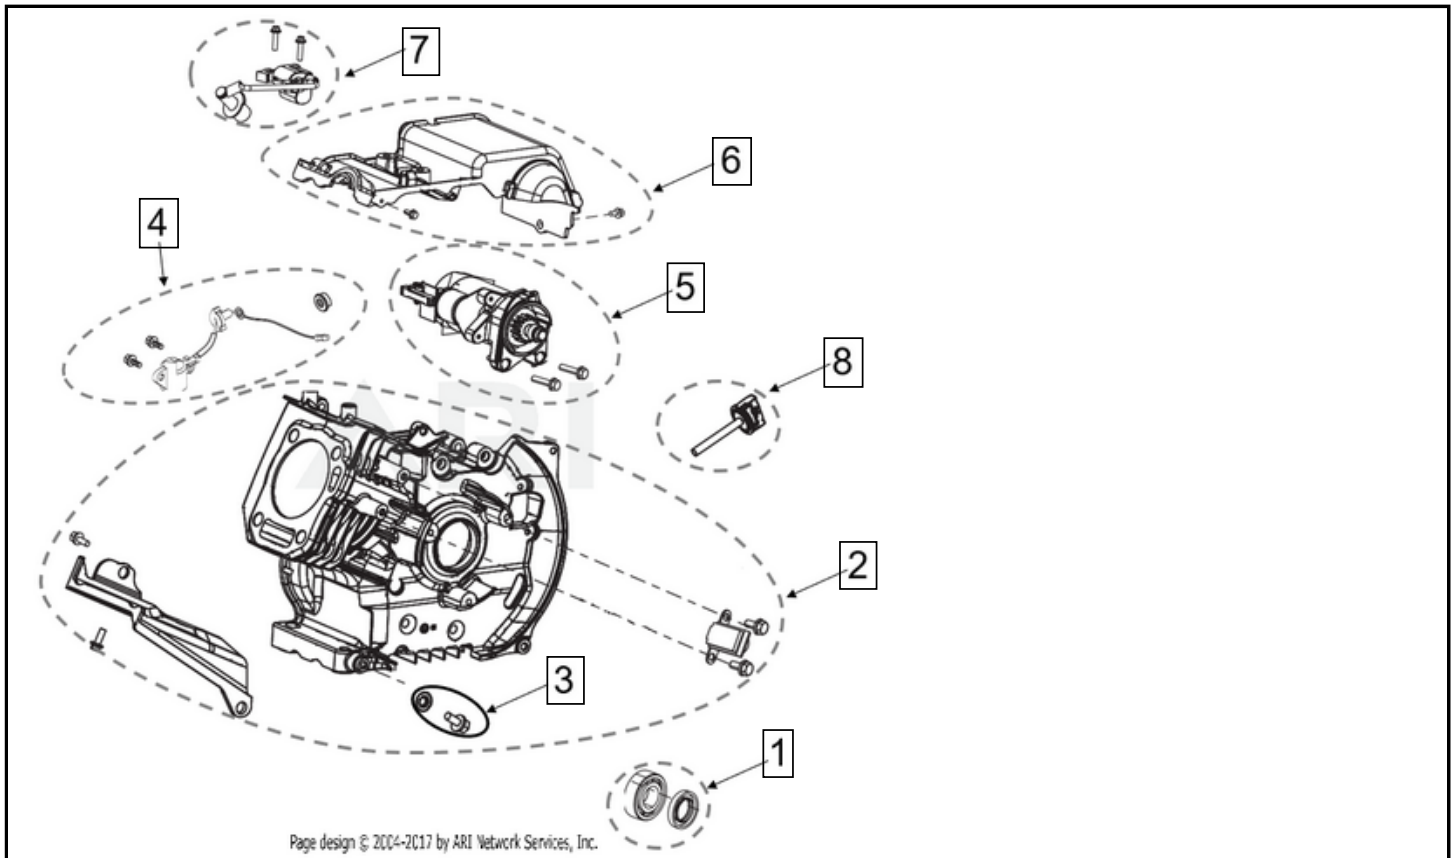

Click and drag to move diagram view

Tag	Part #	Description	USD	CAD
1	589-6167	Crankshaft Bearing Group Includes crankshaft bearing and seal	Call Us	Call Us
2	589-6168	Crankcase Group Includes crankcase, oil seals, and bearings	Call Us	Call Us
3	501-5404	Oil Drain Plug Group Includes oil drain plug and washer	Call Us	Call Us
4	589-6169	Oil Level Sensor Group Includes Oil level sensor and mounting hardware	Call Us	Call Us
5	589-6170	Starter Group Includes Staring Assembly and Hardware	Call Us	Call Us
6	589-6171	Starter Shield Group Includes Shield and hardware	Call Us	Call Us
7	589-6172	Ignition Coil Group Includes Ignition coil and hardware	Call Us	Call Us
8	501-5076	Oil Level Gauge Oil Cap/ Dipstick	Call Us	Call Us