

ASSEMBLY


Cover Group ▾

<- NEW MODEL

INV2000 *Cover Group*

IN

OUT

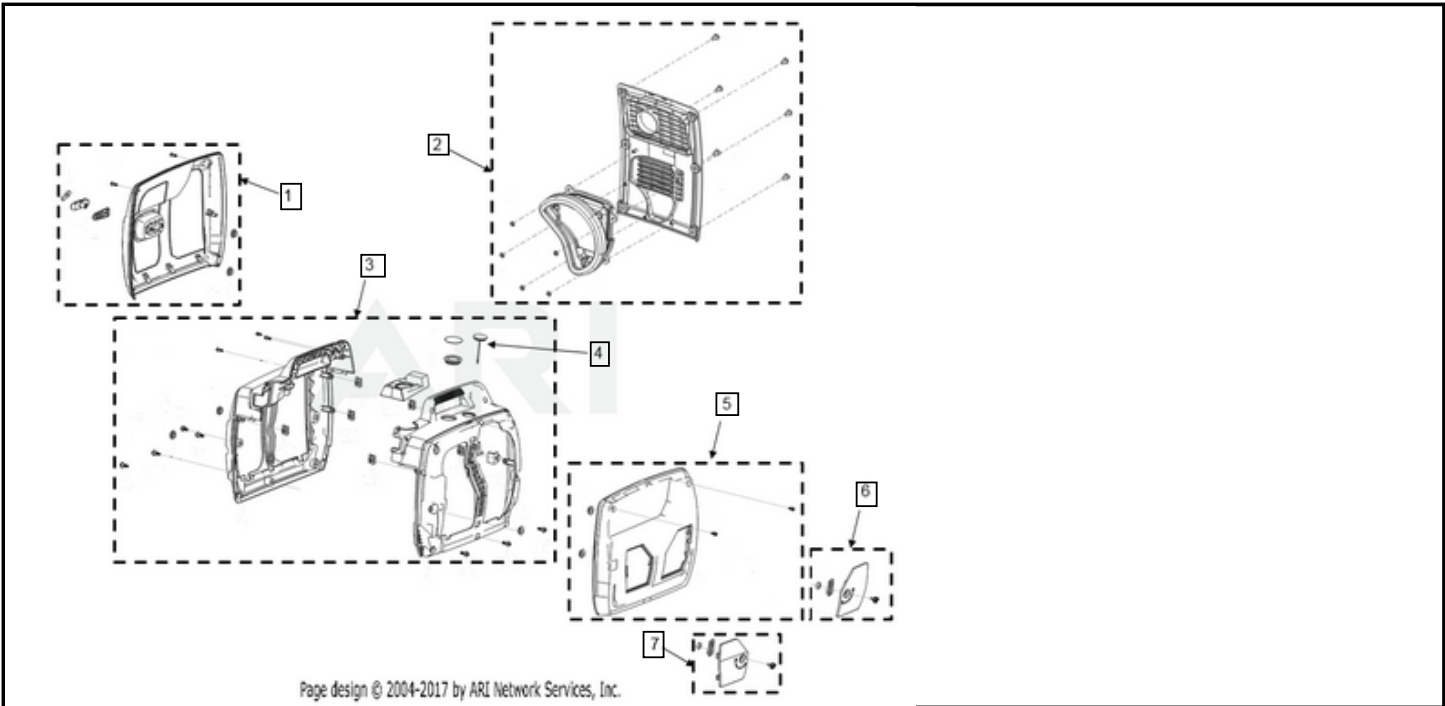

Page design © 2004-2017 by ARI Network Services, Inc.

Click and drag to move diagram view

Tag	Part #	Description	USD	CAD
1	517-9223	Left Cover Group Includes left cover, recoil guide, recoil plate, recoil handle, and mounting hardware.	Call Us	Call Us
2	517-9218	Muffler Cover Group Includes muffler side cover, rubber cushion, clips, and bolts.	Call Us	Call Us
3	517-9222	Central Cover Group Includes left and right inner shells, spark plug cover, trim panel, fuel level view panel, and mounting hardware.	Call Us	Call Us
4	517-9224	Spark Plug Cover Spark plug cover for INV2000	Call Us	Call Us
5	517-9221	Right Cover Group Includes right cover and mounting hardware.	Call Us	Call Us
6	517-9220	Right Door Group Includes right service door, knob, stopper, and spring.	Call Us	Call Us
7	517-9219	Left Door Group Includes left service door, knob, stopper, and spring.	Call Us	Call Us