

338-3456 Starter

QTY	UNIT	PART	PART DESCRIPTION	QTY	UNIT	PART	PART DESCRIPTION
13	PC	0S-1597	BOLT	1	PC	4M-1896	BUSHING
1	PC	1H-1023	SEAL-O RING	5	PC	5J-5314	BOLT
3	PC	1H-2629	STRIP-INSULATION	1	PC	5M-3034	LOCKNUT
1	PC	1M-9968	BUSHING-BEARING	1	PC	6N-3279	INSULATOR
1	PC	1M-9971	SPACER	1	PC	6N-3826	DRIVE AS-MOTOR
3	PC	1S-7446	SCREW-PAN HEAD	4	PC	6V-1322	BOLT-HEX HEAD
2	PC	1T-0808	WASHER	6	PC	6V-8188	NUT-HEX
1	PC	2D-6392	SEAL-O-RING	6	PC	7F-3488	SHOE-POLE
1	PC	2F-6678	SEAL-LIP TYPE	4	PC	7L-2894	GASKET
2	PC	2H-3429	RING-RETAINING	1	PC	7M-0324	COIL AS-FIELD
2	PC	2J-8163	SEAL-O RING	1	PC	7M-0325	INSULATOR-COIL
1	PC	3E-7771	HOUSING AS	1	PC	7M-0326	CONNECTOR
1	PC	3L-3380	BUSHING	1	PC	7M-0327	WASHER-THRUST
1	PC	3N-3763	TERMINAL KT	1	PC	7M-8651	ARMATURE AS
12	PC	3R-8797	SCREW AS	6	PC	7X-0562	WASHER-HARD
1	PC	3R-8801	CLAMP-BOOT	1	PC	7X-3373	BOLT
1	PC	3T-3418	FRAME AS-END	1	PC	8C-3089	SEAL-O-RING
1	PC	3T-3422	WIRE AS-STARTER	3	PC	8C-9660	WASHER
3	PC	3T-3423	CUP	2	PC	8F-1434	LOCKWASHER
3	PC	3T-3424	PLUG-FELT	10	PC	8T-0328	WASHER-HARD
6	PC	3T-3434	PLUG	4	PC	8T-4205	WASHER-HARD
6	PC	3T-9494	SPRING-BRUSH	1	PC	9G-4101	BUSHING-END
6	PC	3T-9524	BRUSH AS	2	PC	9H-3757	WASHER
1	PC	3T-9525	PLATE AS-BRUSH	9	PC	9S-2544	SCREW-HEX HD
6	PC	4B-2049	NUT	4	PC	045-4065	SCREW-MACHINE
1	PC	4L-2729	WASHER	1	PC	125-6535	COVER-STARTER
4	PC	4M-1831	PLUG-STARTER	1	PC	338-3453	SOLENOID AS
1	PC	4M-1853	LEVER AS-SHIFT	1	PC	351-8955	SEAL-O-RING
1	PC	4M-1854	SHAFT-LEVER				