

Monarch[®]

PICKLEBALL

PICKLEBALL LAUNCHER



TABLE OF CONTENTS

SECTION	PAGE
FRONT PAGE	1
TABLE OF CONTENTS AND SAFETY NOTICE	2
ASSEMBLY INSTRUCTION AND PARTS LIST	3
INSTRUCTION CONTENTS	4
HOW TO PLAY	5
WARRANTY	6

IMPORTANT SAFETY NOTICE:

WARNING

1. To reduce risk of injury, keep face out of the ball path – balls can shoot out from the opening at any time. NEVER place any body parts or foreign objects into the machine.
2. NEVER add balls while the launcher is running. ALWAYS shut off the machine when re-loading with pickleballs.
3. ALWAYS stand at least 12 ft away from the launcher while it is running. Standing on the opposite side of the net is highly recommended. Use the launcher in an open area.
4. Use ONLY for pickleball practice with standard sized pickleballs. NEVER use balls intended for other sports with this launcher.
5. This product is not intended for use by children under age 14. Adults only must use the Pickleball Launcher.
6. ALWAYS shut off the launcher prior to reloading with more pickleballs.
7. Never use this product in wet or rainy conditions. Doing so may lead to product damage or malfunction.
8. Always shut off the launcher when leaving it unattended and prior to performing maintenance or repairs.
9. Shut off the launcher and store in a dry location when not in use. Do not store heavy objects above the machine.

BEFORE YOU BEGIN

Thank you for selecting the Monarch Pickleball launcher. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number

1-877-846-9997

Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE

 
INSTRUCTIONS

PICKLEBALL LAUNCHER


Monarch
PICKLEBALL

PLEASE KEEP THESE INSTRUCTIONS

Parts Check that all accessories are intact before assembly.

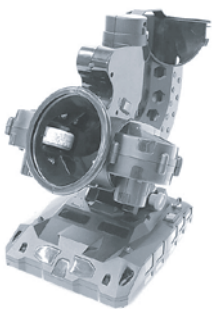

Machine 1pc

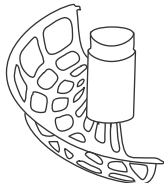 


Track 6pcs



Top Track 1pc



 AC Adapter 1pc

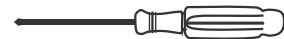


Screwdriver 1pc

● Assembly Instructions


Machine and tracks connection assembly required*

*Assembly by adults only

 - 1** Connect Track 1 to the machine.
- 2** Connect track 2 to track 1 and so on if necessary.
- 3** Connect the Top Track

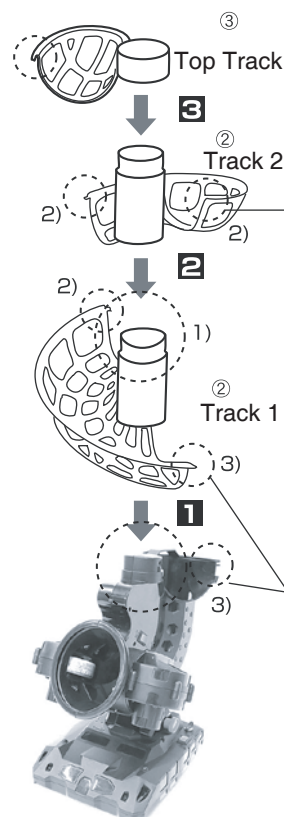


 Pay attention to the buckles, which must be fastened together when assembling tracks.

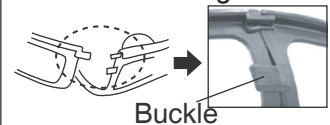

Buckle

 Pay attention to the concave and convex parts of the tracks and when they are connected to each other when assembling the tracks.

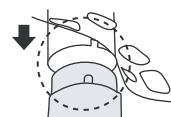


INSTRUCTIONS CONT.

■ Battery Box


The battery box is located at the bottom of machine.

Screw holes as shown.

 Use screw driver to execute.

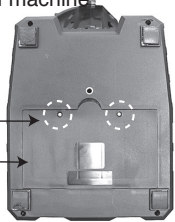


Adjust track shape

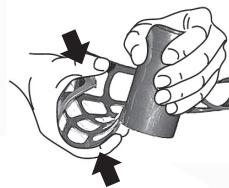 

Gently squeeze the tracks if tracks out of shapes

● How to assemble the batteries

 - Insert batteries according to the positive "+" and negative "-".

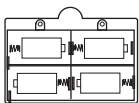


- Slide door cover back and tighten screws after assembling.

⚠ PRECAUTIONS FOR BATTERY INSTALLATION

- The battery installation must be performed by an adult.
- DO NOT mix different types of batteries.
- DO NOT mix new and old batteries.
- Remove batteries if not using the machine for a long period of time.
- Please install "+" and "-" properly.

● Stand to side of the machine near power switch

 
- Ensure there are no balls in the ball launcher before turning the machine on.

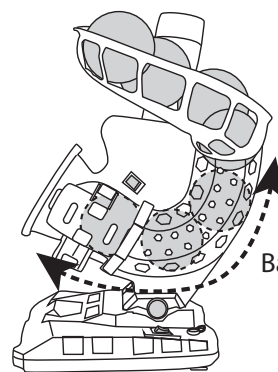

Ball Launcher

- Make sure to turn off machine before taking balls out of the machine.

 ● Ball Launch Distance: 4~13m

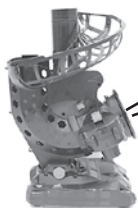

Launch distance may vary depending on the battery capacity.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

 
- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



DRILLS PICKLEBALL LAUNCHER


Monarch
PICKLEBALL

RETURN SERVICE

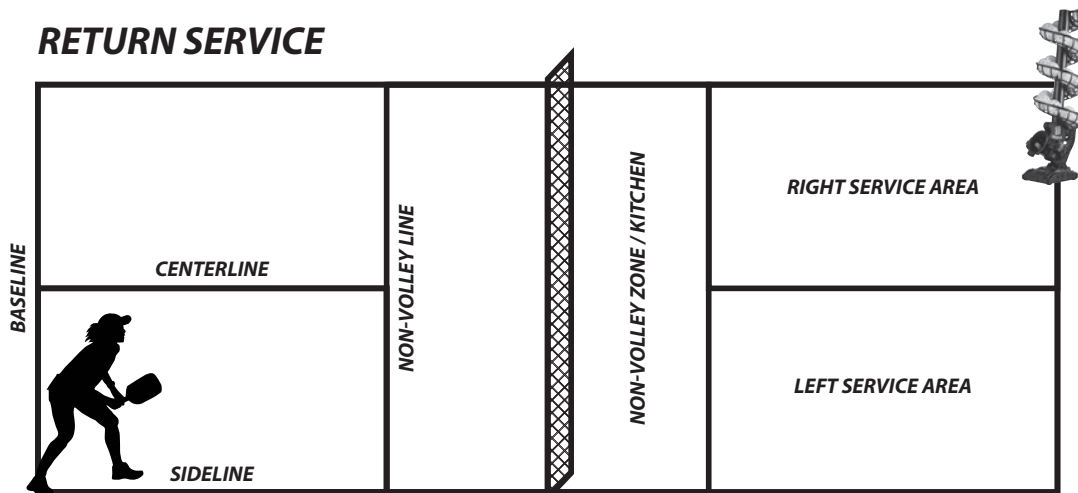


Place machine in opposite service box. A legal service return can land anywhere inside the court except the Non-Volley Zone/Kitchen.

 VOLLEY

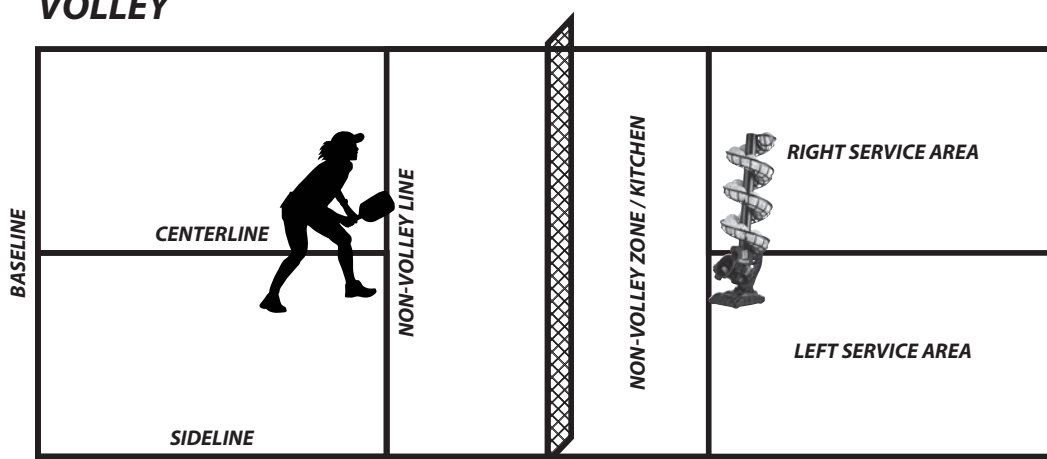

Place machine close to the non-volley line aimed directly at the player standing at the non-volley line on the opposite side of the net. Practice volleying by counter attacking balls being simulated by the machine.

 3RD SHOT DROP

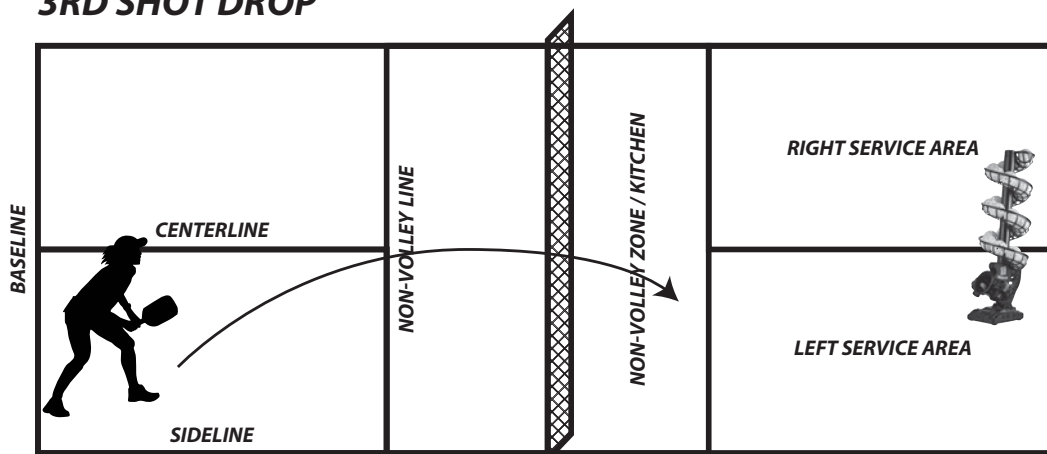

Place machine near the back line, aimed at the player standing on the opposite side of the net. To practice 3rd drop shot, return the simulated ground stroke into the opposite non-volley zone.

LIMITED WARRANTY

DICK'S LIMITED WARRANTY

Who is Covered?

This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How to Make a Warranty Claim

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

What DICK'S Will Do to Correct the Problem

Once you make a valid warranty claim, DICK'S will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.