

DSG21004

DSG

2-IN-1 TRAINER

OWNER'S MANUAL



DICK'S Sporting Goods 345 Court Street Coraopolis, PA 15108

TABLE OF CONTENTS

SECTION	PAGE
BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICE	2
IMPORTANT CARE AND MAINTENANCE	2
PARTS LIST	3
ASSEMBLY INSTRUCTIONS	4-7
LIMITED WARRANTY	8

BEFORE YOU BEGIN

Thank you for selecting the 2-IN-1 TRAINER. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number
1-877-846-9997
Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE



IMPORTANT SAFETY NOTICE

IMPORTANT SAFETY MESSAGE: Read these instructions before using this product. This product is intended to be used by a single user during baseball and softball training drills. To avoid serious injury during assembly, disassembly, use, adjustment and/or movement of the DSG 2-IN-1 TRAINER, the following warnings and instructions **MUST** be observed at all times:



WARNING

Important Instructions for Safe Assembly and Use




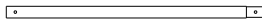 



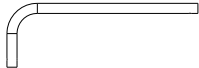 








1. This product is **NOT FOR USE BY CHILDREN UNDER AGE 13**. Keep children and pets away from equipment at all times. **DO NOT** leave children unattended in the same room with the product.
2. Adult assembly (2 adults) required for assembly, disassembly, adjusting, and moving the trainer. All components must be properly assembled prior to use.
3. **WARNING: PINCH POINT.** Keep hands clear of moving parts and hinges while folding or adjusting the frame.
4. **WARNING: PINCH POINT.** Exercise caution while pressing pushpin to assemble and disassemble the metal frame.
5. **ALWAYS** anchor the trainer prior to use. Drive all ground stakes completely into the ground on a flat surface. An unsecured trainer can cause serious injury. Players may trip on anchors that are not fully driven into the ground.
6. Adults only should move the trainer and handle steel ground stakes.
7. The trainer should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
8. Bungee cord **BUNGEE CORD WITH HOOK** are under tension during assembly, use, and disassembly. **EXERCISE EXTREME CAUTION** during assembly and disassembly, as the cords may rebound unexpectedly.
9. **NEVER** climb on or hang from the trainer. The trainer is not intended to be weight bearing and will collapse if significant weight is applied.
10. **DO NOT** put arms, head, or other body parts in holes or net. Entrapment and/or strangulation can occur.
11. **WARNING: Sharp elements inside.** To avoid injury, do not grasp metal ground spike by sharp end when handling.



IMPORTANT! CARE AND MAINTENANCE

1. **DO NOT** leave the 2-IN-1 TRAINER outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds. Screen could come loose and hit players.
2. Inspect all parts before using the product for signs of wear or failure. If parts are worn or damaged, **DO NOT** use. Contact Customer Service for replacement parts.
3. Examine your 2-IN-1 TRAINER regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.
4. To extend the life of the product, unit should be stored indoors when not in use. Net should be removed during extended storage.
5. Keep away from fire and heat sources.

  2-IN-1 TRAINER PARTS LIST

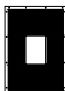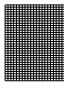
Part #	Description	Photo	Qty
1	L-SHAPED POLE WITH ONE CRIMPED END 24"		2
2	L-SHAPED POLE 24"		2
3	MAIN FRAME SIDE POLE WITH TWO CRIMPED ENDS 28"		2
4	MAIN FRAME SIDE POLE WITH ONE CRIMPED END 28"		2
5	BASE ASSEMBLY L-SHAPED POLE 29"		2
6	ADJUSTABLE SUPPORT POLE 36"		2
7	L-SHAPED POLE WITH ONE CRIMPED END 24.5"		1
8	L-SHAPED POLE 24.5"		1
9	BUNGEE CORD WITH HOOK (LONG)		16
10	BUNGEE CORD WITH HOOK (SHORT)		28
11	BOLTS AND NUTS 2-1/2"		4
12	BOLTS AND NUTS 2-1/8"		2
13	TARGET RIBBON		1
14	GROUND STAKE		4
15	TARGET TARP		1
16	NET		1

ASSEMBLY INSTRUCTIONS


IMPORTANT: DURING ASSEMBLY BE SURE THAT ALL PUSH-PINS ARE SECURE AS SEEN IN BELOW FIGURE.



 
1. CONNECT POLE (PART# 1) AND POLE 2 (PART# 2) TO FORM A "U" SHAPE FOR ONE TOP AND TWO BOTTOM PARTS OF THE PITCHBACK AS IN BELOW FIGURE.

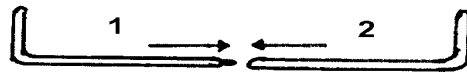

 
2. CONNECT MAIN FRAME SIDE POLES 3 (PART# 3) AND 4 (PART# 4) TO FIT TOGETHER AS IN BELOW FIGURE.

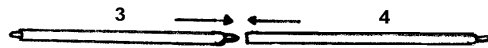


3. TO MAKE THE MAIN FRAME, USE ONE OF THE ASSEMBLED "U" SHAPE POLES (AS STEP 1. FIGURE) AND PLACE AN ASSEMBLED MAIN FRAME SIDE POLE (AS ABOVE FIGURE). SLIDE 4 LONG BUNGEE CORD WITH HOOK (PART# 9) AND 6 SHORT BUNGEE CORD WITH HOOK (PART# 10) EVENLY ONTO THE TOP POLE. THEN SLIDE 8 SHORT BUNGEE CORD WITH HOOK (PART# 10) ON THE SIDE POLE AS BELOW FIGURE SHOWN).

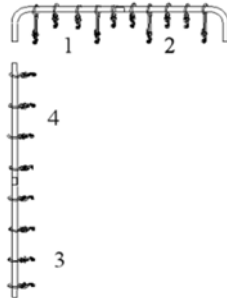


4. PLACE ANOTHER "U" SHAPED POLE (AS STEP 1. FIGURE) ON THE OPEN END AS IN BELOW FIGURE. REMEMBER TO SPREAD REST BUNGEE CORD WITH HOOK EVENLY: 4 LONG BUNGEE CORD WITH HOOK (PART# 9) AND 6 SHORT BUNGEE CORD WITH HOOK (PART# 10) EVENLY ONTO THE BOTTOM POLE. THEN SLIDE 8 SHORT BUNGEE CORD WITH HOOK (PART# 10) ON ANOTHER SIDE POLE AS BELOW FIGURE SHOWN). CONNECT THEM ALL TOGETHER AS BELOW FIGURE SHOWN.

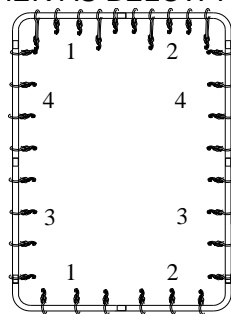


TO MAKE THE BASE ASSEMBLY, USE THE LAST “U” SHAPED ASSEMBLY (AS STEP 1. FIGURE) AND CONNECT WITH BASE ASSEMBLY L-SHAPED POLE 5 ON BOTH SIDES. PLEASE REFER TO FIGURE BELOW. ALSO, SLIDE 4 LONG BUNGEE CORD WITH HOOK (PART# 9) ON THE BASE “U” SHAPE FRAME AND 4 STEEL GROUND STAKES (PART# 14) ON THE BASE ASSEMBLY POSITIONED AS SHOWN IN BELOW FIGURE.

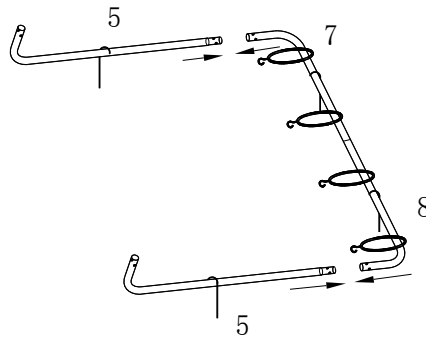


5. TO CONNECT MAIN FRAME TO BASE ASSEMBLY, PLACE THE MAIN FRAME BETWEEN THE OPEN ENDS OF THE BASE ASSEMBLY. MAKE SURE TO LINE UP THE PRE-DRILLED HOLES ON THE FRAME. ATTACH BOLTS AND NUTS (PART# 11) ON BOTH SIDES TO SECURE AS IN BELOW FIGURE.

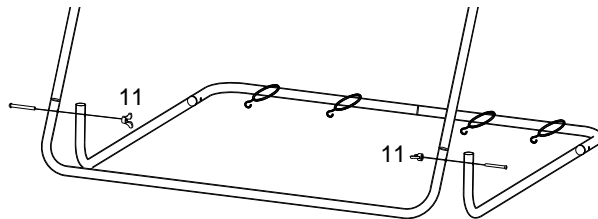

6. ATTACH ADJUSTABLE SUPPORT POLE 6 (PART# 6) TO THE OUTSIDE OF THE FRAME USING PART# 11 BOLTS AND NUTS AS IN BELOW FIGURE.

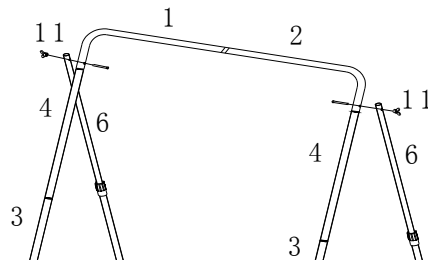


7. PLACE 4 LONG BUNGEE CORD WITH HOOK (PART# 9) ON EACH OF THE ADJUSTABLE SUPPORT POLES, PART# 6. ATTACH THE BOTTOM PART OF ADJUSTABLE SUPPORTS TO THE LEFT AND RIGHT SIDE OF THE BASE "U" SHAPE POLE (PART# 7 , PART# 8) AT WHERE YOU CAN SEE THE PRE-DRILLED HOLES AND ATTACH BOLTS AND NUTS (PART# 12) ON BOTH SIDES TO SECURE AS IN BELOW FIGURE.

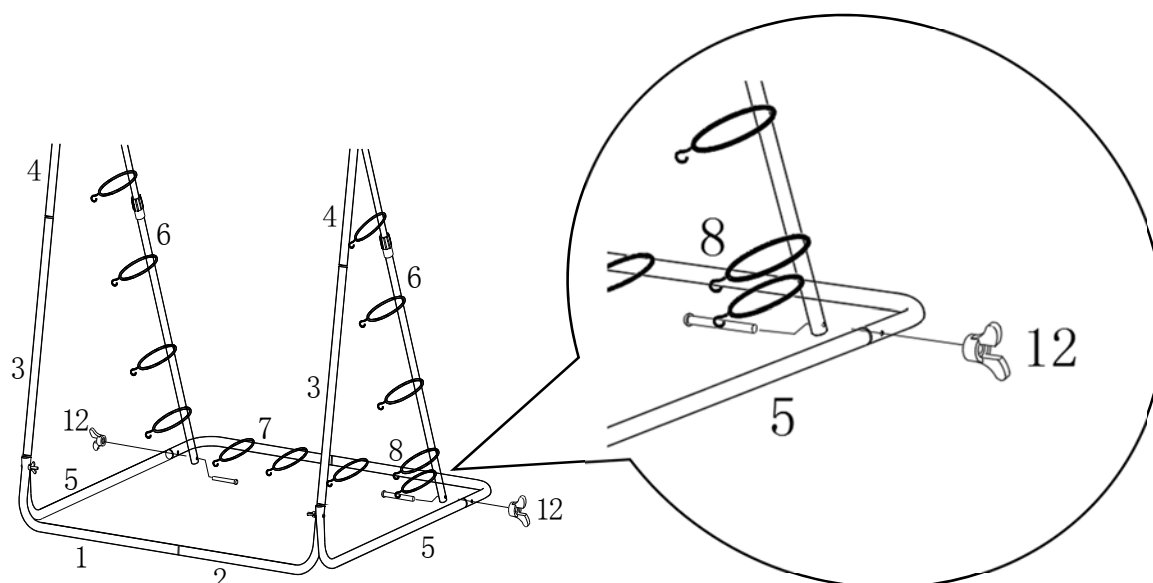

MAKE SURE THE ADJUSTABLE SUPPORT POLES (PART# 6) ARE ATTACHED INSIDE THE BASE "U" SHAPE POLE (PART# 7, PART# 8).


8. SPREAD THE NET ON THE FLOOR AS IN BELOW FIGURE. LOCATE THE RED TABS, WHICH INDICATE THE TOP CORNERS OF THE NET.

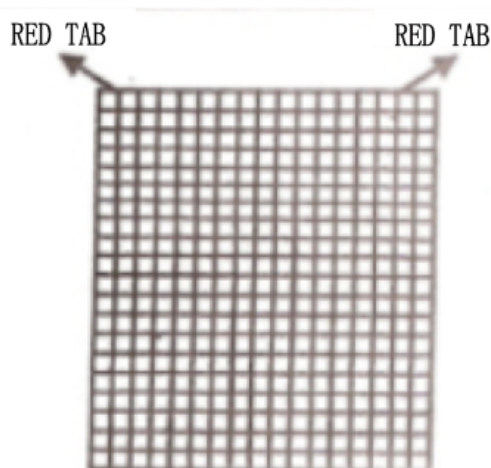


9. SPREAD AND STRETCH THE NET EVENLY AROUND THE FRAME BY USING THE BUNGEE CORD WITH HOOK (PART# 9 AND PART# 10) AS IN BELOW FIGURE. HOOK 6 SHORT BUNGEE CORD WITH HOOK (PART# 10) FROM THE TOP AND BOTTOM U-SHAPE FRAMES, AND 8 SHORT BUNGEE CORD WITH HOOK (PART# 10) FROM EACH OF THE MAIN FRAME POLE TO THE NET. **IMPORTANT: DO NOT EXTEND ADJUSTABLE SUPPORT POLE, PART# 6, BEYOND BOTTOM (10TH) INDICATION MARK.**




10. ATTACH TARGET RIBBON (PART# 13) BY WEAVING THROUGH NET AND TYING OFF AT ENDS AS IN BELOW FIGURE.

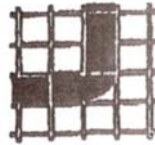

11. SPREAD AND STRETCH THE TARGET TARP EVENLY AROUND THE ADJUSTABLE SUPPORT POLES BY USING THE LONG BUNGEE CORD WITH HOOK (PART# 9) AS IN BELOW FIGURE. HOOK 4 LONG BUNGEE CORD WITH HOOK (PART# 9) FROM THE TOP AND BASE U-SHAPE FRAMES, AND ANOTHER 4 LONG BUNGEE CORD WITH HOOK (PART# 9) FROM EACH OF THE ADJUSTABLE SUPPORTING POLE, PART# 6, TO THE TARGET TARP.

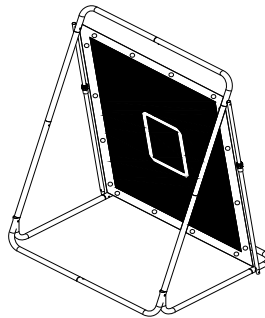

12. POSITION FRAME AS REQUIRED AND FINALLY FIX TO THE GROUND USING THE STEEL GROUND STAKES (PART# 14) AS IN BELOW FIGURE.

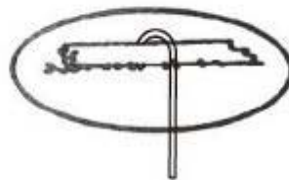

DICK'S LIMITED WARRANTY

Who is Covered?

This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How to Make a Warranty Claim

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

What DICK'S Will Do to Correct the Problem

Once you make a valid warranty claim, DICK'S will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.