

DSG21005



5 POSITION VARSITY REBOUNDER

OWNER'S MANUAL



DICK'S Sporting Goods 345 Court Street Coraopolis, PA 15108

TABLE OF CONTENTS

SECTION	PAGE
BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICE	2
IMPORTANT CARE AND MAINTENANCE	2
PARTS LIST	3
ASSEMBLY INSTRUCTIONS	4-6
LIMITED WARRANTY	7

BEFORE YOU BEGIN

Thank you for selecting the 5 Position Varsity Rebounder. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number
1-877-846-9997
Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE



IMPORTANT SAFETY NOTICE

IMPORTANT SAFETY MESSAGE: Read these instructions before using this product. This product is intended to be used by a single user during baseball and softball training drills. **To avoid serious injury** during assembly, disassembly, use, adjustment and/or movement of the DSG 5 Position Varsity Rebounder, **the following warnings and instructions MUST be observed at all times:**



WARNING

Important Instructions for Safe Assembly and Use



 

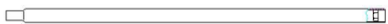 









1. This product is **NOT FOR USE BY CHILDREN UNDER AGE 13**. Keep children and pets away from equipment at all times. DO NOT leave children unattended in the same room with the product.
2. Adult assembly (2 adults) required for assembly, disassembly, adjusting, and moving the rebounder. All components must be properly assembled prior to use.
3. **WARNING: PINCH POINT.** Keep hands clear of moving parts and hinges while folding or adjusting the frame.
4. **WARNING: PINCH POINT.** Exercise caution while pressing pushpin to assemble and disassemble the metal frame.
5. **ALWAYS** anchor the rebounder prior to use. Drive all ground stakes completely into the ground on a flat surface. An unsecured rebounder can cause serious injury. Players may trip on anchors that are not fully driven into the ground.
6. Adults only should move the rebounder and handle steel ground stakes.
7. The rebounder should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
8. Bungee cord net loops are under tension during assembly, use, and disassembly. **EXERCISE EXTREME CAUTION** during assembly and disassembly, as the cords may rebound unexpectedly.
9. **NEVER** climb on or hang from the rebounder. The rebounder is not intended to be weight bearing and will collapse if significant weight is applied.
10. **DO NOT** put arms, head, or other body parts in holes or net. Entrapment and/or strangulation can occur.
11. **WARNING: Sharp elements inside.** To avoid injury, do not grasp metal ground spike by sharp end when handling.

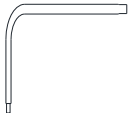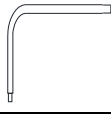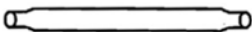

IMPORTANT! CARE AND MAINTENANCE

1. **DO NOT** leave the 5 Position Varsity Rebounder outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds. Screen could come loose and hit players.
2. Inspect all parts before using the product for signs of wear or failure. If parts are worn or damaged, DO NOT use. Contact Customer Service for replacement parts.
3. Examine your 5 Position Varsity Rebounder regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.
4. To extend the life of the product, unit should be stored indoors when not in use. Net should be removed during extended storage.
5. Keep away from fire and heat sources.

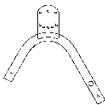5 POSITION VARSITY REBOUNDER PARTS LIST

Part #	DESCRIPTION	PHOTO	NUMBER OF PARTS
1	L-shaped pole 29.2"		4
2	L-shaped pole 25.3"		2
3	I-shaped pole 28.7"		3
4	I-shaped pole 9"		2
5	Threaded center pole – Female 25"		1
6	Threaded center pole – Male 26"		1
7	Plug pins (with lanyard and hook assembly)		2
8	Net		1
9	Net loops		36
10	Target ribbon		1
11	Steel ground stakes 9"		4
12 L	Y-adjustment bracket		1
12R	Y-adjustment bracket		1
13	Hex bolt M8x 50		6 Pre-assembled (4)

ASSEMBLY INSTRUCTIONS

⚠ WARNING

Two adults should set up the rebounder to safely manage net loops that are under tension.

ADULTS ONLY should assemble, disassemble or adjust the pitch back.

NOTICE: During assembly be sure that all push pins are secure, as shown in Figure A

- 1) Connect pole 3 and both poles 1 to form a U-shaped frame component, as shown in Figure B. Repeat this step for the second set of poles 1 and 3. These U-shaped frame components make the top and bottom part of the front side of frame assembly.
- 2) Place six pieces of net loops, spread evenly, onto each side of the U-shaped frame components (top and bottom parts for the front side of frame assembly), as shown in Figure C.
- 3) Place the I shaped pole, part number 4, in between the bracket on the Y adjustment bracket, part number 12L/12R. Insert a hex bolt, part number 13, through the top center hole of the bracket and the center hole in the I shaped pole. Thread washer and nut on bolt and tighten.
- 4) Align and hold the adjustable tube of the Y-shaped adjustment bracket to the center position, as shown in Figure E. Insert the plug pin (with lanyard and hook assembly) through the center hole on the adjustment bracket. Open the hook and insert through the hole in the pin to lock the pin in place.

⚠ WARNING

Always lock the plug pin with the hook to avoid inadvertent removal of pin.

- 5) Repeat step 3 and 4 for the other Y-shaped adjustment bracket.
- 6) Connect the Y-shaped adjustment brackets to the end of the top U-shaped frame component, as shown in Figure F.

Figure A



Figure B

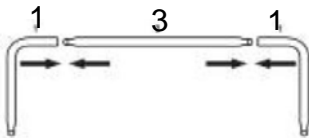


Figure C

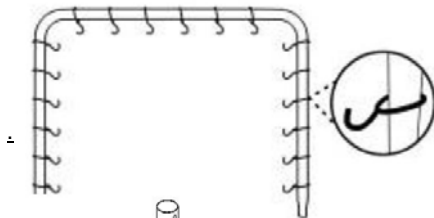


Figure D

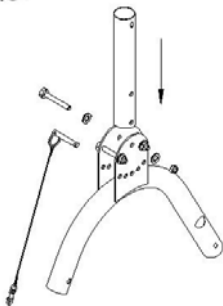


Figure E

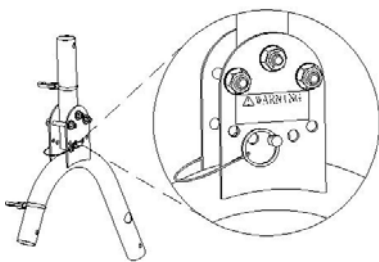


Figure F

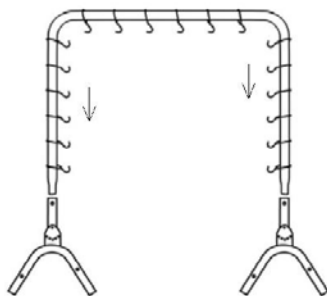


Figure G



Figure H

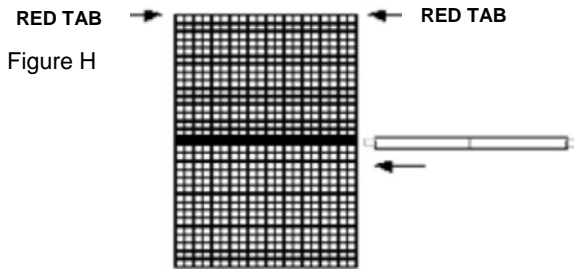


Figure I

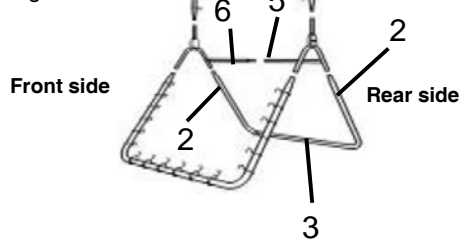


Figure J

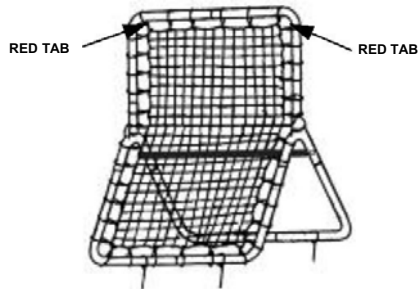


Figure K

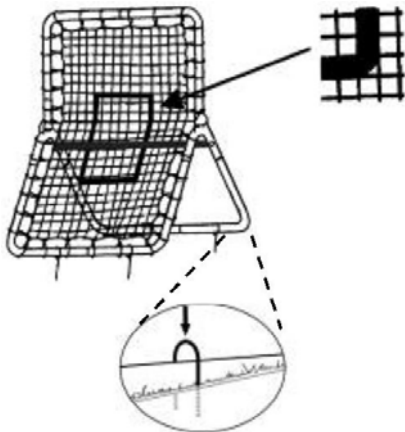


Figure L



7) Connect poles 2 and pole 3 to form the bottom part of rear frame.

8) Screw pole 6 into 5, as shown in Figure G, to form the center pole assembly.

9) Spread the net on the floor. Slide the center pole assembly into the net sleeve (located on the middle rear portion of the net), as shown in Figure H.

NOTICE: Two people are required to complete the following steps

10) Connect the assembled center pole to the Y-adjustment bracket holes, as shown in Figure I. The center pole should be on the rear side of the assembly. The black tarpaulin sleeve should face the rear of the pitch back.

11) Connect the U-frame assembly from step 7 to the rear side of the bracket, as shown in Figure I. The rear side is the side where the center pole was connected.

12) Connect the remaining U-frame assembly with bungee cord net loops onto the front side of the bracket, as shown in Figure I.



Net loops are under tension.

13) Spread and stretch the net around the frame by using the attached net loops, as shown in Figure J.

14) Attach target ribbon to the net by weaving through the netting. Target ribbon should be positioned in the center of the net and should be 18 net squares high by 12 net squares wide.

15) Position frame as required and fix it to ground using steel ground stakes, as shown in Figure L.



Always anchor the Trainer. An unsecured trainer can fall over causing serious injury.

Carefully follow instructions below to avoid laceration or crushing injuries.

- 1) Keep hands away from hinge area,
- 2) Unhook the plug pin that is used to adjust the trainer angle. Hold the upper frame at the green label with one hand, as shown in Figure M. Pull the plug pin out
- 3) Repeat steps 1 and 2 for the other bracket.
- 4) Move the top frame to desired angle and re-insert the pin completely through the appropriate hole on the Y-adjustment bracket.
- 5) Open the hook and insert through the hole on the other end of pin, to lock the pin in place, as shown in Figure N.
Always keep pins locked when using the trainer.
- 6) Repeat steps 4 and 5 for the other adjustment bracket.
- 7) **TO DISASSEMBLE OR STOW:** Repeat steps 1-3 and bring the top frame down slowly before disassembling the unit.



ADULTS ONLY should disassemble or adjust the trainer.

Figure M

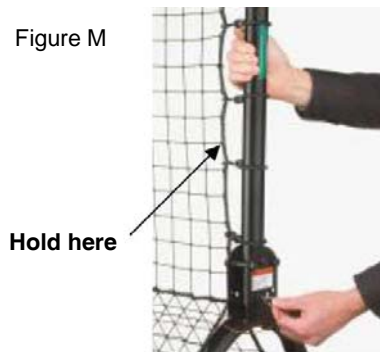


Figure N



DICK'S LIMITED WARRANTY

Who is Covered?

This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How to Make a Warranty Claim

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

What DICK'S Will Do to Correct the Problem

Once you make a valid warranty claim, DICK'S will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.