



ADJUSTABLE YOUTH REBOUNDER

OWNER'S MANUAL



DICK'S Sporting Goods 345 Court Street Coraopolis, PA 15108

TABLE OF CONTENTS

| SECTION | PAGE |
|--------------------------------|------|
| BEFORE YOU BEGIN | 1 |
| IMPORTANT SAFETY NOTICE | 2 |
| IMPORTANT CARE AND MAINTENANCE | 2 |
| PARTS LIST | 3 |
| ASSEMBLY INSTRUCTIONS | 4 |
| LIMITED WARRANTY | 5 |

BEFORE YOU BEGIN

Thank you for selecting the ADJUSTABLE YOUTH REBOUNDER. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged Parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number
1-877-846-9997
Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE



IMPORTANT SAFETY NOTICE

IMPORTANT SAFETY MESSAGE: Read these instructions before using this product. This product is intended to be used by a single user during baseball and softball training drills. To avoid serious injury during assembly, disassembly, use, adjustment and/or movement of the DSG ADJUSTABLE YOUTH REBOUNDER, the following warnings and instructions **MUST** be observed at all times.

WARNING

Important Instructions for Safe Assembly and Use


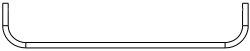 

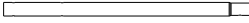 

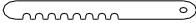 






 
1. This product is **NOT FOR USE BY CHILDREN UNDER AGE 6**. Adult supervision during use is required. Never leave the product unattended. Unsupervised children can be injured.
2. Adult assembly (2 adults) required for assembly, disassembly, adjusting, and moving the trainer. All components must be properly assembled prior to use.
3. **WARNING: PINCH POINT.** Keep hands clear of moving Parts and hinges while folding or adjusting the frame.
4. **WARNING: PINCH POINT.** Exercise caution while pressing pushpin to assemble and disassemble the metal frame.
5. **ALWAYS** anchor the rebounder prior to use. Drive all ground stakes completely into the ground on a flat surface. An unsecured trainer can cause serious injury. Players may trip on anchors that are not fully driven into the ground.
6. Adults only should move the rebounder and handle steel ground stakes.
7. The rebounder should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
8. Bungee cord net loops are under tension during assembly, use, and disassembly. **EXERCISE EXTREME CAUTION** during assembly and disassembly, as the cords may rebound unexpectedly.
9. **NEVER** climb on or hang from the rebounder. The rebounder is not intended to be weight bearing and will collapse if significant weight is applied.
10. **DO NOT** put arms, head, or other body Parts in holes or net. Entrapment and/or strangulation can occur.
11. **WARNING: Sharp elements inside.** To avoid injury, do not grasp metal ground spike by sharp end when handling.



IMPORTANT! CARE AND MAINTENANCE

1. **DO NOT** leave the rebounder outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds. Screen could come loose and hit players.
2. Inspect all Parts before using the product for signs of wear or failure. If Parts are worn or damaged, **DO NOT** use. Contact Customer Service for replacement Parts.
3. Examine your rebounder regularly for wear and tear. Discontinue use immediately if any defect or damaged Parts are found.
4. To extend the life of the product, unit should be stored indoors when not in use. Net should be removed during extended storage.
5. Keep away from fire and heat sources.

ADJUSTABLE YOUTH REBOUNDER PARTS LIST
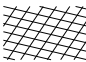
| Part # | Description | Photo | SIZE: 54"x36" |
|--------|------------------------------|---|---------------|
| | | | Qty |
| 1 | Steel tube 0.86"x25.9" |  | 2 |
| 2 | Steel tube 0.86"x38.3" |  | 1 |
| 3 | Steel tube 0.98"x20.6" |  | 2 |
| 4 | Steel tube 0.98"x25" |  | 2 |
| 5 | Steel tube 0.98"x36" |  | 2 |
| 6 | Adjustable Saw plate 7.2" |  | 2 |
| 7 | Bolts and nuts M6X40 |  | 2 |
| 8 | Bolts and nuts M6X40 |  | 2 |
| 9 | Bolts and nuts M6X60 |  | 2 |
| 10 | Net loops |  | 20 |
| 11 | Ground Stakes |  | 4 |
| 12 | Target Ribbon |  | 1 |
| 13 | Perimeter Net |  | 1 |

ASSEMBLY INSTRUCTIONS

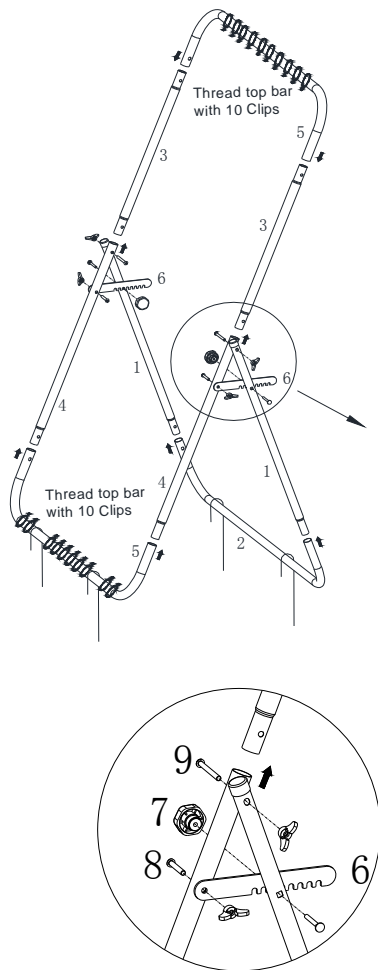 


Figure 1. Frame Assembly

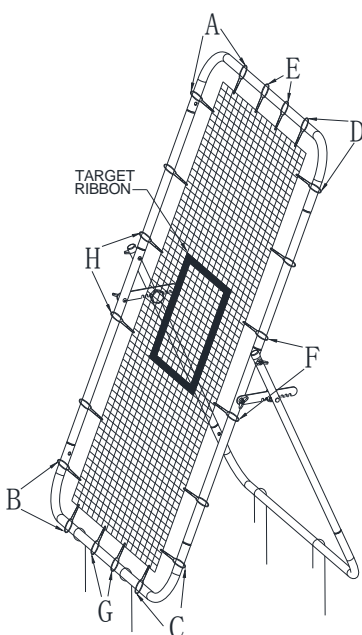 


Figure 2. Frame Assembly

1) Slide 10pcs of Part #10 onto top Part #5. Repeat this step for bottom Part #5. Follow Figure 1 to assemble the rest of the frame.

2) To assemble front frame, take 2 of Part#3 and connect each one to Top Part#5. Take 2 of Part #4 and connect to Bottom Part #5. Connect each side of Part #3 and Part #4 together.

3) Connect Part #6 using Part #8 and connect that to Part #4 (repeat this step for the other side of the frame). The front frame assembly is complete.

4) To assemble rear frame, take 2 of Part #1 and connect each one to Part #2. Connect Part #7 to Part #1. Connect assembled rear frame to each side of Part#4 by using Part #9. Use Part #6 to adjust rebounder surface to desired angle by placing the proper slot on Part #6 to Part #7. Make sure both Part #7 are securely tightened once the assembly completed. The frame assembly is complete.

⚠ WARNING

Net loops are under tension.

NOTE:

Study net clip configuration. This represents the best clip positioning for optimum performance.

5) Follow letter sequences start as shown in Figure 2. Start with A by attaching the net to both top and side net loops. Skip one net square between top and side in each corner and connect the net to the loop. Repeat this procedure for other corners. Make sure that each corner of the net is attached to two net loops (as fig. A.B.C.D). Space the remaining net loops evenly along each side. Attach net to net loops E, F, G, and H closest to the center of each side. Attach the net to all remaining net loops.

6) Attach the target ribbon to the net by weaving the ribbon through the net. The ribbon is secured by tying the ends together.

7) To securely assemble the unit, place the unit in open area suitable for play. To keep the unit in position, push the 4 ground stakes into ground as shown in Figure 2.

⚠ WARNING

Always anchor the trainer. An unsecured trainer can fall over causing serious injury.

DICK'S LIMITED WARRANTY

Who is Covered?

This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement Parts that were not provided by DICK'S.
- Defects or damage caused by using third-Party Parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How to Make a Warranty Claim

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

What DICK'S Will Do to Correct the Problem

Once you make a valid warranty claim, DICK'S will either:

- Return or exchange the product; or
- Provide a free replacement Part, if applicable; or
- Repair the product for free, if applicable.

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.