

DSG21029



INSTANT L-SCREEN OWNER'S MANUAL



DICK'S Sporting Goods 345 Court Street Coraopolis, PA 15108

TABLE OF CONTENTS

SECTION	PAGE
BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICE	2
IMPORTANT CARE AND MAINTENANCE	2
PARTS LIST	3
ASSEMBLY INSTRUCTIONS	4-9
LIMITED WARRANTY	10

BEFORE YOU BEGIN

Thank you for selecting the DSG INSTANT L-SCREEN. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number
1-877-846-9997
Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE



IMPORTANT SAFETY NOTICE

Read these instructions before using this product. This product is intended to be used by a single user during Baseball and Softball training drills. **To avoid serious injury** during assembly, disassembly, use, adjustment and/or movement of the DSG INSTANT L-SCREEN, **the following warnings and instructions MUST be observed at all times:**

WARNING

Important Instructions for Safe Assembly and Use

1. This product is **NOT FOR USE BY CHILDREN UNDER AGE 13**. Keep children and pets away from equipment at all times. **DO NOT** leave children unattended in the same room with the product.
2. Adult assembly (2 adults) required for assembly, disassembly, adjusting, and moving the screen. All components must be properly assembled prior to use.
3. **WARNING: Impact Hazard.** Net poles are under tension. When attaching and detaching the net, always maintain a firm grip on the pole and net to prevent injury.
4. **WARNING: PINCH POINT.** Keep hands clear of moving parts and hinges while folding or adjusting the frame.
5. **WARNING: PINCH POINT.** Exercise caution while pressing pushpin to assemble and disassemble the metal frame.
6. Always anchor the screen prior to use. Drive all ground stakes completely into the ground on a flat surface. An unsecured screen can cause serious injury. Players may trip on anchors that are not fully driven into the ground.
7. Adults only should move the screen and handle steel ground stakes.
8. The screen should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
9. Bungee cord net loops are under tension during assembly, use, and disassembly. **EXERCISE EXTREME CAUTION** during assembly and disassembly, as the cords may rebound unexpectedly.
10. This product should only be used with baseballs, softballs, and practice balls.
11. **NEVER** climb on or hang from the L-SCREEN. The screen is not intended to be weight bearing and will collapse if significant weight is applied.
12. **DO NOT** put arms, head, or other body parts in holes in net. Entrapment and/or strangulation can occur.



IMPORTANT! CARE AND MAINTENANCE

1. **DO NOT** leave the L-SCREEN outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds. Screen could come loose and hit players.
2. Inspect all parts before using the product for signs of wear or failure. If parts are worn or damaged, **DO NOT** use. Contact Customer Service for replacement parts.
3. Examine your L-SCREEN regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.
4. To extend the life of the product, unit should be stored indoors when not in use. Net should be removed during extended storage.
5. Keep away from fire and heat sources.

INSTANT L-SCREEN PARTS LIST

Part #	Description	Qty	Remark
1	Bag	1	
2	L-Screen Net	1	
3	Pole A	1	
4	Pole B	1	
5	Pole C	3	
6	Pole D (couplings end)	3	
7	End Legs	2	
8	Bungee Cord	2	
9	Stake	2	
10	Bungee Cord	3	
11	Hook and Loop Strap	4	

ASSEMBLY INSTRUCTIONS

Note: This L-Screen can be used for both Baseball and Softball. Follow instructions accordingly.

Baseball L-Screen Assembly Instructions

1. JOIN POLES "A" (Part # 3) AND "B" (Part #4) TOGETHER (FIG. A). THEN ATTACH BOTH END LEGS (Part #7) (FIG. B).



2. LAY L-SCREEN NET (Part #2) ON GROUND ABOVE ASSEMBLED BASE.



3. INSERT POLE "C" (1-Part #5) INTO OPENING ON END LEG (Part #7). SLIDE SHORT SIDE OF L- SCREEN NET SLEEVE (Part #2) OVER POLE "C" (Part #5).



4. LOOP WHITE ROPE LOOP OVER TOP OF POLE "C" (Part #5) SO THAT WHITE ROPE LOOP IS SECURELY AROUND POLE GROOVE. SIDE ONE OF THE L-SCREEN IS COMPLETE.




5. INSERT POLE "D" (1-Part #6) INTO OPPOSITE END LEG WITH COUPLING END FACING UP. SLIDE SLEEVE ON L-SCREEN NET (Part #2) OVER POLE "D" (1-Part #6).



6. INSERT POLE "C" (1-Part #5) INTO THE COUPLING END OF POLE "D" (Part #6). LOOP WHITE ROPE LOOP OVER TOP OF POLE "C" (Part #5) SO THAT WHITE ROPE LOOP IS SECURELY AROUND POLE GROOVE. SIDE TWO OF THE L-SCREEN IS COMPLETE.



7. INSERT POLE "D" (1-Part #6) INTO OPENING ON POLE "B" (PART #4).

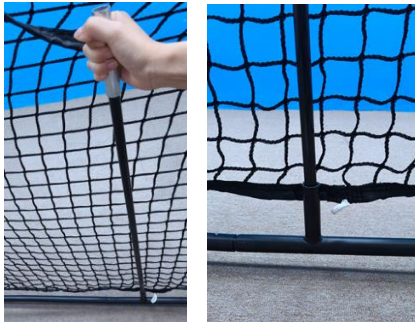


8. SLIDE POLE "C" (1-Part #5) THROUGH CENTER SLEEVE ON L-SCREEN NET (Part #2) WITH METAL TOP FACING UP. INSERT POLE "C" INTO COUPLING END OF POLE "D" (Part #6) LOOP WHITE ROPE LOOP OVER TOP OF POLE "C" (Part #5) SO THAT WHITE ROPE LOOP IS SECURELY AROUND POLE GROOVE.




9. SECURE HOOK AND LOOP STRAPS (Part #11) TO POLES "A" AND "B" (Part #3 AND #4) EVENLY ACROSS THE BOTTOM OF FRAME.




10. SLIDE BUNGEE CORD (1-Part #10) THROUGH WHITE NET LOOP ON SIDE BOTTOM OF L- SCREEN. LOOP BUNGEE CORD BACK THROUGH ITSELF AND PULL TIGHT. HOOK BUNGEE CORD ONTO THE METAL HOOK ON END LEG. REPEAT FOR OPPOSITE SIDE.

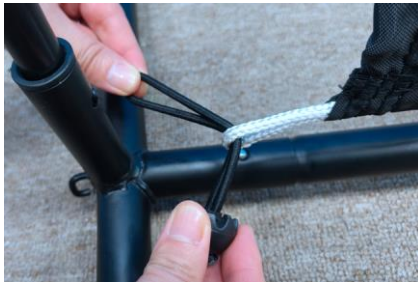

11. SLIDE BUNGEE CORD (1-Part #10) THROUGH WHITE NET LOOP IN CENTER BOTTOM OF L- SCREEN. WRAP BUNGEE CORD AROUND THE UPRIGHT TUBE ON POLE "B" (Part #4) AND SECURE.

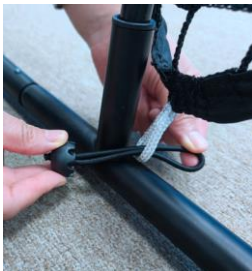

12. SECURE FLAP ON L-SCREEN NET TO CREATE THE BASEBALL OPENING. BASEBALL L- SCREEN IS NOW COMPLETE.

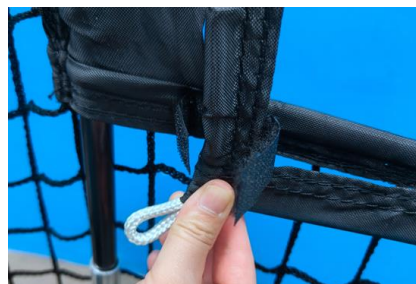

Softball L-Screen Assembly Instructions

1. JOIN POLES "A" (Part # 3) AND "B" (Part #4) TOGETHER (FIG. A). THEN ATTACH BOTH END LEGS (Part #7) (FIG. B).



2. LAY L-SCREEN NET (Part #2) ON GROUND ABOVE ASSEMBLED BASE.



3. INSERT POLE "D" (1-Part #6) INTO OPENING ON END LEG (Part #7) WITH COUPLING SIDE FACING UP.



4. SLIDE POLE "C" (1-Part #5) INTO SHORT SIDE OF L-SCREEN NET SLEEVE (Part #2) THEN INSERT POLE "C" (Part #5) INTO COUPLING END OF POLE "D" (Part #6).



5. LOOP WHITE ROPE LOOP OVER TOP OF POLE "C" (Part #5) SO THAT WHITE ROPE LOOP IS SECURELY AROUND POLE GROOVE. SIDE ONE OF THE L-SCREEN IS COMPLETE.




6. INSERT POLE "D" (1-Part #6) INTO OPPOSITE END LEG WITH COUPLING END FACING UP. SLIDE SLEEVE ON L-SCREEN NET (Part #2) OVER POLE "D" (1-Part #6).



7. INSERT POLE "C" (1-Part #5) INTO THE COUPLING END OF POLE "D" (Part #6). LOOP WHITE ROPE LOOP OVER TOP OF POLE "C" (Part #5) SO THAT WHITE ROPE LOOP IS SECURELY AROUND POLE GROOVE. SIDE TWO OF THE L-SCREEN IS COMPLETE.



8. INSERT POLE "D" (1-Part #6) INTO OPENING ON POLE "B" (PART #4).

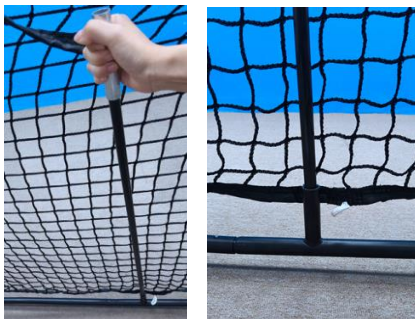

9. SLIDE POLE "C" (1-Part #5) THROUGH CENTER SLEEVE ON L-SCREEN NET (Part #2) WITH METAL TOP FACING UP. INSERT POLE "C" INTO COUPLING END OF POLE "D" (Part #6) LOOP WHITE ROPE LOOP OVER TOP OF POLE "C" (Part #5) SO THAT WHITE ROPE LOOP IS SECURELY AROUND POLE GROOVE.



10. SECURE HOOK AND LOOP STRAPS (Part #11) TO POLES "A" AND "B" (Part #3 AND #4) EVENLY ACROSS THE BOTTOM OF FRAME.



11. SLIDE BUNGEE CORD (1-Part #10) THROUGH WHITE NET LOOP ON SIDE BOTTOM OF L- SCREEN. LOOP BUNGEE CORD BACK THROUGH ITSELF AND PULL TIGHT. HOOK BUNGEE CORD ONTO THE METAL HOOK ON END LEG. REPEAT FOR OPPOSITE SIDE.



12. SLIDE BUNGEE CORD (1-Part #10) THROUGH WHITE NET LOOP IN CENTER BOTTOM OF L- SCREEN. WRAP BUNGEE CORD AROUND THE UPRIGHT TUBE ON POLE "B" (Part #4) AND SECURE.



DICK'S LIMITED WARRANTY

Who is Covered?

This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How to Make a Warranty Claim

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

What DICK'S Will Do to Correct the Problem

Once you make a valid warranty claim, DICK'S will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.