

LTT0006



SOCCER STARTER GOAL SET OWNER'S MANUAL



DICK'S Sporting Goods 345 Court Street Coraopolis, PA 15108

TABLE OF CONTENTS

SECTION	PAGE
BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICE	2
IMPORTANT CARE AND MAINTENANCE	2
PARTS LIST	3
ASSEMBLY INSTRUCTIONS	4-6
LIMITED WARRANTY	7

BEFORE YOU BEGIN

Thank you for selecting the LOTTO SOCCER STARTER GOAL SET. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number
1-877-846-9997
Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE



IMPORTANT SAFETY NOTICE

Read these instructions before using this product. This product is intended to be used by a single user during soccer drills. To avoid serious injury during assembly, disassembly, use, adjustment and/or movement of the LOTTO SOCCER STARTER GOAL SET, the following warnings and instructions **MUST** be observed at all times:

WARNING

Important Instructions for Safe Assembly, Use, and Maintenance:








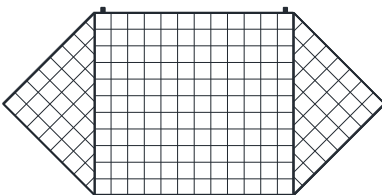
1. This product is not intended for children under age 13. Adult supervision during use is required. Never leave the product unattended. Unsupervised children can be injured.
2. Two adults required for assembly, disassembly, adjusting and moving the goal. All components must be properly assembled prior to use.
3. The goal should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
4. **NEVER** climb on or hang from the goal. The goal is not intended to be weight bearing and will collapse if significant weight is applied.
5. **DO NOT** put arms, head, or other body parts in holes or net. Entrapment and/or strangulation can occur.
6. **WARNING:** Sharp elements inside. To avoid injury, do not grasp metal ground spike by sharp end when handling.
7. **ALWAYS** anchor the goal prior to use. Drive all ground stakes completely into the ground on a flat surface. An unsecured backstop can cause serious injury. Players may trip on anchors that are not fully driven into the ground.
8. Adults only should adjust the goal and handle ground stakes.
9. **WARNING: CHOKING HAZARD** – Small parts. Not for children under 3 years.



IMPORTANT! CARE AND MAINTENANCE

1. **DO NOT** leave the goal outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds.
2. To extend the life of the product, unit should be stored indoors when not in use. Remove and properly store net when goal is not in use.
3. Examine your goal regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.
4. Keep away from fire and heat sources.

SOCCER STARTER GOAL SET PARTS LIST

Part #	Description	PHOTO	Qty
1	Left Corner Tube (26.0"X9.6")		4
2	Right Corner Tube (24.0"X9.6")		4
3	Connection Tube (20.6")		4
4	Left Base Corner Tube (28.3"X9.6")		2
5	Right Base Corner Tube (28.3"X9.6")		2
6	Ground Stakes		8
7	Hook & Loop Strap		60
8	NET		2

ASSEMBLY INSTRUCTIONS

⚠ WARNING

This product requires adult assembly. Be sure that all Push Pins are secured tightly.

Step 1: Spread the Net (8) and Hook & Loop Straps (7) on the floor as shown in **Figure 1**.
*Note: Locate the 2 Red Tabs at the top of the net corners and place those in the upper left and upper right corners when facing the net as showing in Figure 1.

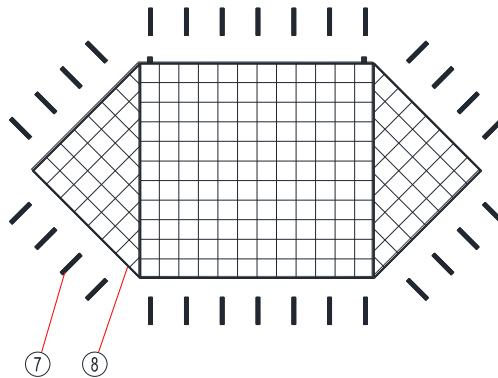


Figure 1

Step 2: Assemble the frame in accordance with pole numbers as shown in Figure 2-8 following the steps below. **MAKE SURE THAT ALL PUSH PINS ARE TIGHTLY SECURED.**

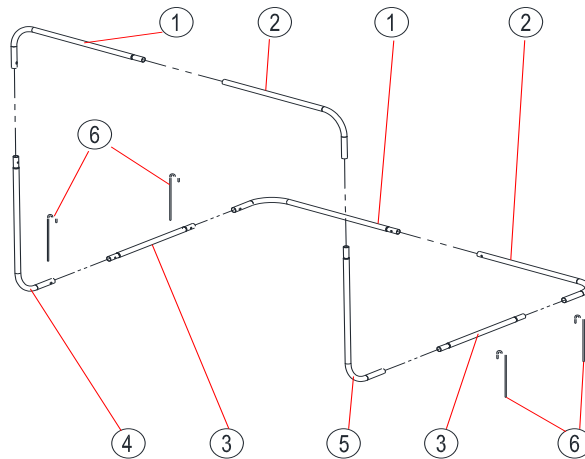


Figure 2
(Exploded Diagram)

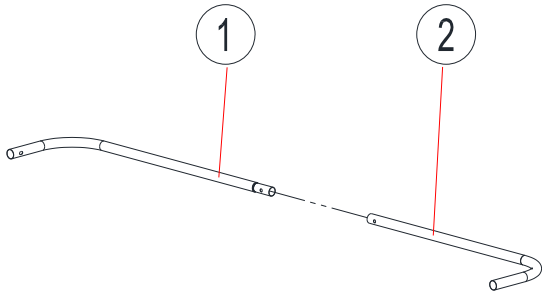


Figure 3

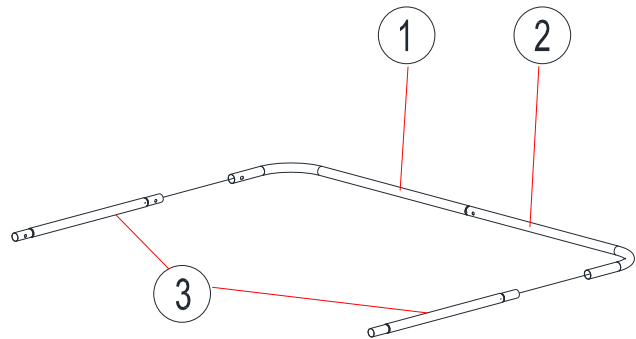


Figure 4

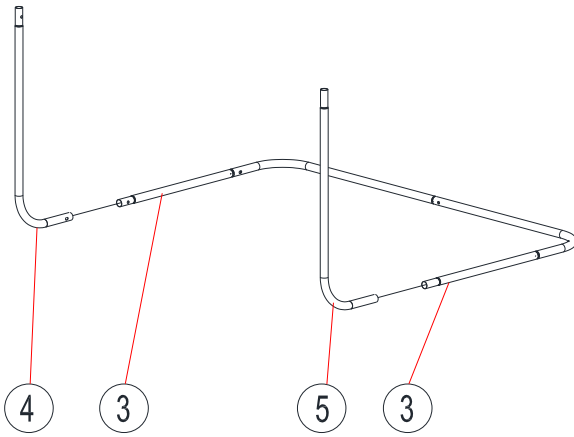


Figure 5

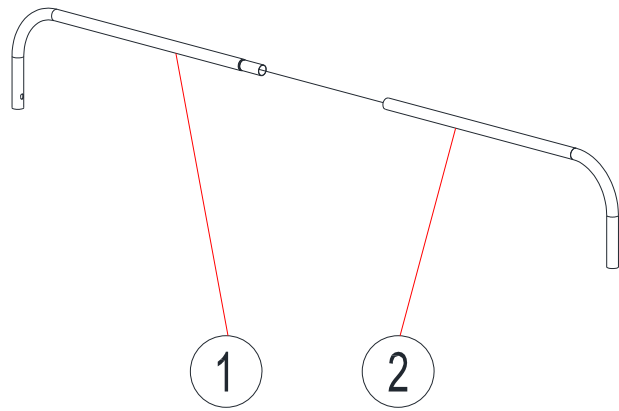


Figure 6

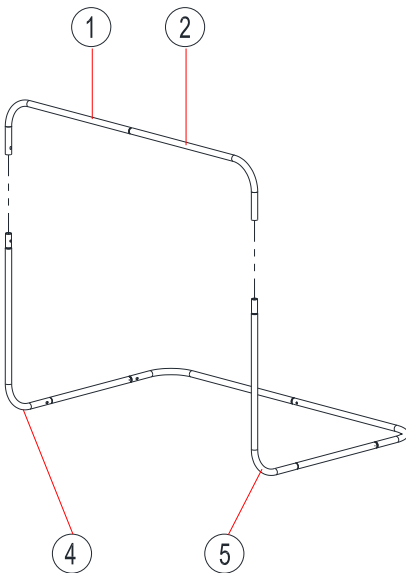


Figure 7

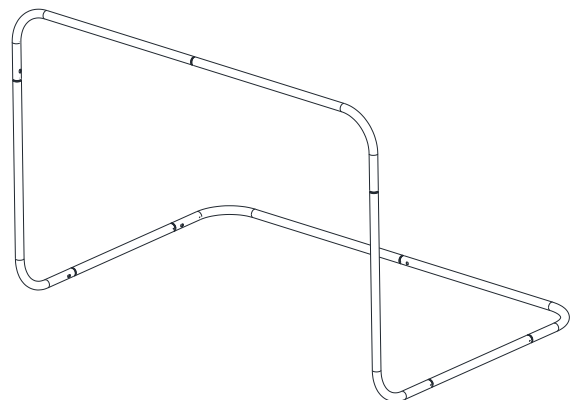


Figure 8

⚠ WARNING

ENSURE THAT ALL PUSH PINS ARE TIGHTLY SECURED PRIOR TO USE.

Net Assembly: Use Hook & Loop Straps (7) to attach the Net (8) onto the assembled frame per Figure 9 shown.

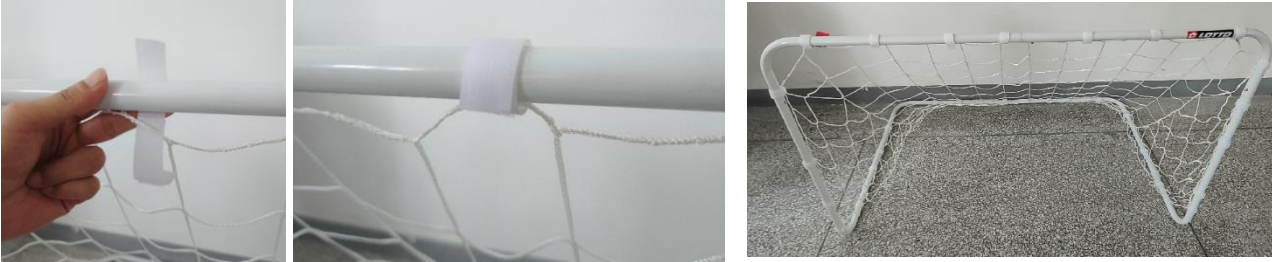


Figure 9

MAKE SURE THAT ALL PUSH PINS ARE TIGHTLY SECURED.

DICK'S LIMITED WARRANTY

Who is Covered?

This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How to Make a Warranty Claim

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

What DICK'S Will Do to Correct the Problem

Once you make a valid warranty claim, DICK'S will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.