



LOTTO 12'X6' PORTABLE SOCCER GOAL OWNER'S MANUAL

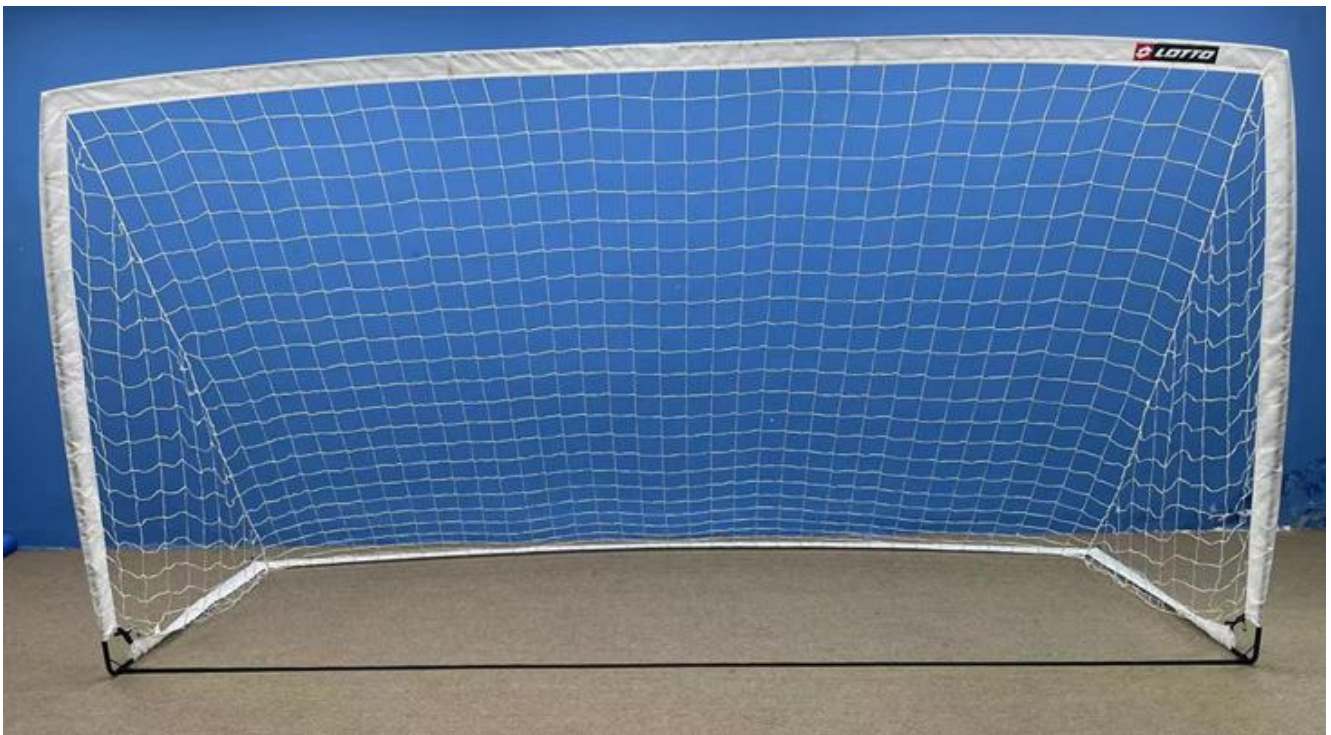


TABLE OF CONTENTS

| SECTION | PAGE |
|--------------------------------|------|
| BEFORE YOU BEGIN | 1 |
| IMPORTANT SAFETY NOTICE | 2 |
| IMPORTANT CARE AND MAINTENANCE | 2 |
| PARTS LIST | 3 |
| ASSEMBLY INSTRUCTIONS | 4-7 |
| LIMITED WARRANTY | 8 |

BEFORE YOU BEGIN

Thank you for selecting LOTTO 12'X6' PORTABLE SOCCER GOAL. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number
1-877-846-9997
Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE



IMPORTANT SAFETY NOTICE

Read these instructions before using this product. This product is intended to be used by a single user during soccer training drills. To avoid serious injury during assembly, disassembly, use, adjustment and/or movement of the LOTTO 12'X6' PORTABLE SOCCER GOAL, the following warnings and instructions **MUST** be observed at all times:

WARNING

Important Instructions for Safe Assembly, Use, and Maintenance:

1. This product is not intended for children under age 13. Adult supervision during use is required. Never leave the product unattended. Unsupervised children can be injured.
2. Two adults required for assembly, disassembly, adjusting, and moving the Portable Goal. All components must be properly assembled prior to use.
3. **WARNING: Sharp elements inside.** To avoid injury, do not grasp metal ground spike by sharp end when handling.
4. Always anchor the goal prior to use. Drive all ground stakes completely into the ground on a flat surface. An unsecured goal can cause serious injury. Players may trip on anchors that are not fully driven into the ground.
5. Adults only should move the goal or handle steel ground stakes.
6. The Portable Goal must be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
7. **NEVER** climb on or hang from the Portable Goal. The goal is not intended to be weight bearing and will collapse if significant weight is applied.
8. **DO NOT** put arms, head, or other body parts in holes or net. Entrapment and/or strangulation can occur.
9. Exercise caution when people are near the sides of the goal. Poles may move if hit with a ball.



IMPORTANT! CARE AND MAINTENANCE

1. **DO NOT** leave product outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds. The product and anchors may come loose and hit players, causing serious injury.
2. To extend the life of the product, unit should be stored indoors when not in use. Net should be removed during extended storage.
3. Examine the product regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.
4. Keep away from fire and heat sources.

12'X6' PORTABLE SOCCER GOAL PARTS LIST

| Part # | Description | Photo | Qty |
|--------|---|--|-----|
| 1 | Set of 6 poles held together with flexible tether |  | 1 |
| 2 | Set of 8 poles held together with flexible tether |  | 1 |
| 3 | 2 curved elbow pieces attached by webbing strap |  | 1 |
| 4 | Metal Ground Stakes |  | 4 |
| 5 | Net |  | 1 |
| 6 | Storage Bag |  | 1 |

ASSEMBLY INSTRUCTIONS

WARNING

To avoid injury, two adults are required for assembly and disassembly of the LOTTO 12'X6' Portable Soccer Goal. Exercise extreme caution when disassembling, as goal may collapse suddenly when parts are removed.

1. Take the goal out of the bag and connect the 6-piece pole set together (Part #1) as well as the 8-piece pole set together (Part #2) and align them as pictured below.



2. Spread the net open (Part #5) and place the short sleeve and long sleeve between the poles as pictured below. Be sure the short sleeve is closest to the 6-piece pole, and the long sleeve is closest to the 8-piece pole.



3. Slip the shorter sleeve onto the end of the 6-piece pole set. Shortly after, slip the longer sleeve onto the end of the 8-piece pole set.



4. Continue to slide both the short and long sleeves over both pole sets simultaneously.



5. Slide both sleeves completely over both pole sets.



6. Take the connected elbow pieces (Part #3) and attach to both ends of the larger 8-piece pole set.



7. Use 2 people to raise the larger 8-piece pole frame into the air, perpendicular to the ground while leaving the smaller 6-piece pole frame flat on the ground.



8. With the larger pole frame now raised, you can attach the other end of the elbow (Part #3) onto the end of the smaller frame.




9. Once the elbows are attached and the goal is standing on its own, loop the straps together to secure the net down.



10. The goal is now completely assembled.



11. **For stability:** If the intended purpose of this goal is for indoor use, place sandbags or other weighted objects on the four corners of the goal. If the intended purpose of this goal is for outdoor use, push two metal ground stakes (Part #4) into the ground through the opening of the back loops (loop location indicated by the red arrows). Push the remaining two metal spikes around the base of the metal elbow piece (elbow location indicated by the green arrows).

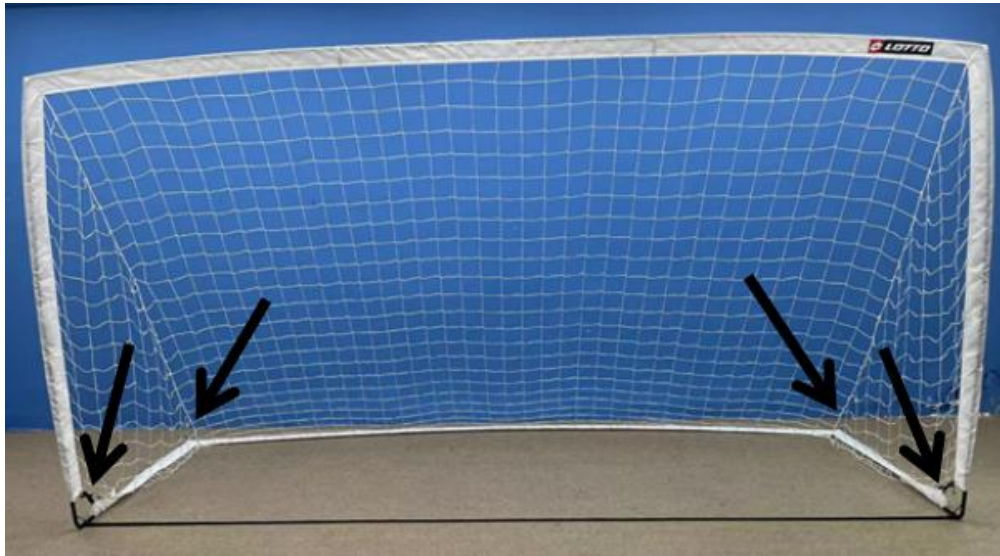

12. **Exercise extreme caution during disassembly, as goal may collapse suddenly when parts are removed.** To disassemble the goal, reverse the steps above and place the parts into the storage bag for later use. When disassembling the elbow pieces (Part #3), user should lift the pieces up and away from themselves.

DICK'S LIMITED WARRANTY

Who is Covered?

This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How to Make a Warranty Claim

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

What DICK'S Will Do to Correct the Problem

Once you make a valid warranty claim, DICK'S will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.