



## **3-IN-1 SOCCER TRAINER OWNER'S MANUAL**



DICK'S Sporting Goods 345 Court Street Coraopolis, PA 15108

## TABLE OF CONTENTS

| SECTION                        | PAGE |
|--------------------------------|------|
| BEFORE YOU BEGIN               | 2    |
| IMPORTANT SAFETY NOTICE        | 3    |
| IMPORTANT CARE AND MAINTENANCE | 3    |
| PARTS LIST                     | 4    |
| ASSEMBLY INSTRUCTIONS          | 5-7  |
| LIMITED WARRANTY               | 8    |

## BEFORE YOU BEGIN

Thank you for selecting the LOTTO 3-IN-1 SOCCER TRAINER. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

**Toll-Free Customer Service Number**

**1-877-846-9997**

**Mon. – Fri. 9 a.m. – 5 p.m. EST**

RETAIN THESE INSTRUCTIONS FOR FUTURE USE



## IMPORTANT SAFETY NOTICE

Read these instructions before using this product. This product is intended to be used by a single user during soccer training drills. To avoid serious injury during assembly, disassembly, use, adjustment and/or movement of the LOTTO 3-in-1 Soccer Trainer, the following warnings and instructions **MUST** be observed at all times:

### **WARNING**

 
 
 

 
 
 
 






 


- This product is not intended for children under age 13. Adult supervision during use is recommended. Never leave the product unattended. Unsupervised children can be injured.
- Two adults required for assembly, disassembly, adjusting and/or moving the 3-in-1 Soccer Trainer. All components must be properly assembled prior to use.
- Always anchor the trainer prior to use. Drive all ground stakes completely into the ground on a flat surface. An unsecured goal can cause serious injury. Players may trip on anchors that are not fully driven into the ground.
- The 3-in-1 Soccer Trainer should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
- Bungee cord net loops and metal hooks are under tension. **EXERCISE EXTREME CAUTION** during assembly and disassembly, as the cords and hooks may rebound unexpectedly.
- **NEVER** climb on or hang from the 3-in-1 Soccer Trainer. The product is not intended to be weight bearing and will collapse if significant weight is applied.
- **DO NOT** put arms, head, or other body parts in rebounder or net. Entrapment and/or strangulation can occur.
- **WARNING! CHOKING HAZARD** – Small parts. Not for children under 3 years.



## IMPORTANT! CARE AND MAINTENANCE

- **DO NOT** leave the 3-in-1 Soccer Trainer outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds.
- To extend the life of the product, unit should be stored indoors when not in use. Net and rebounder/trainer should be removed during extended storage.
- Examine regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.
- Keep away from fire and heat sources.

## 3-IN-1 SOCCER TRAINER PARTS LIST

| Part # | Description               | Photo  | Qty            |
|--------|---------------------------|--|----------------|
| 1      | L-SHAPE POLE (LEFT)       |    | 1              |
| 2      | L-SHAPE POLE (RIGHT)      |    | 1              |
| 3      | STRAIGHT POLE             |    | 1              |
| 4      | STRAIGHT POLE             |    | 1              |
| 5      | STRAIGHT POLE             |    | 1              |
| 6      | BENT SUPPORT POLE         |    | 2              |
| 7      | L-SHAPE BASE POLE (LEFT)  |    | 1              |
| 8      | L-SHAPE BASE POLE (RIGHT) |  | 1              |
| 9      | L-SHAPE POLE              |  | 2              |
| 10     | STRAIGHT POLE             |  | 1              |
| 11     | STEEL HOOK BUNGEE CORD    |  | 2              |
| 12     | STEEL HOOK BUNGEE CORD    |  | 6              |
| 13     | REBOUNDER/TARGET          |  | 1              |
| 14     | STEEL GROUND STAKE        |  | 5              |
| 15     | NET                       |  | 1              |
| 16     | PLASTIC HOOK BUNGEE CORD  |   | 8              |
| 17     | HOOK AND LOOP STRAP       |  | 40<br>(4EXTRA) |

# ASSEMBLY INSTRUCTIONS

## WARNING

### FRAME ASSEMBLY

- To avoid injury, two adults are required for assembly and disassembly of the 3-in-1 Soccer Trainer.
- Bungee cord net loops and metal hooks are under tension, exercise extreme caution during assembly and disassembly, as the cords and hooks may rebound unexpectedly.
- Ensure all components are properly assembled prior to use.

Verify that all components are included before assembly. **Before assembling the frame, it is necessary to slide the bungee cords over the frame tubes.** You will need to slide 4 bungee cords over Part #3 top tube and 2 bungee cords over each of Part #4 and #5 side tubes.

Assemble the frame as illustrated in **Figure 1**. Be careful to select the appropriately numbered tubes.

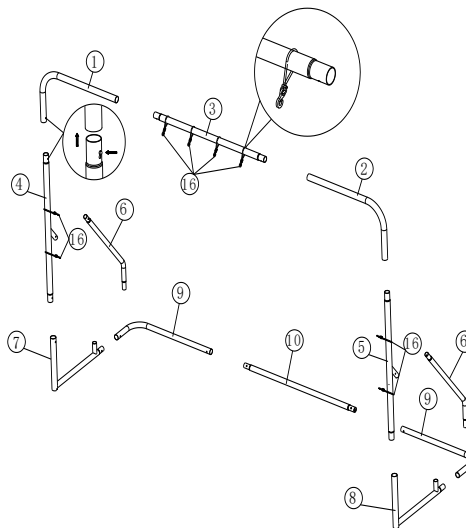


Figure 1 Frame Assembly

### REBOUNDER/TARGET SHOT ASSEMBLY

Attach Part #13 Rebounder/Target onto the frame. Space the bungee cords according to the eyelets on Part #13 and hook into position.


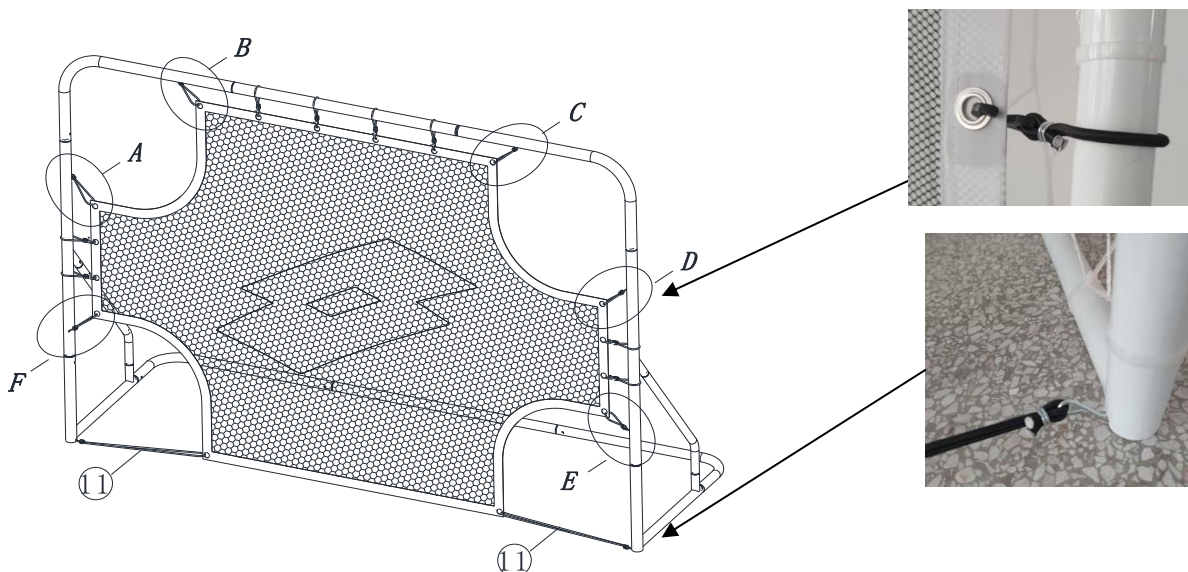


Figure 2. Rebounder and Target Shot Set-up

Attached A to F positions Part #12, Steel Hook Bungee Cord, per below pictures steps:

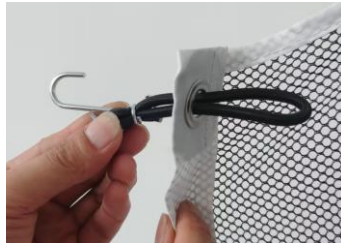

- There are two holes at each position to let you adjust the tension.


### **⚠ WARNING**

**⚠ When assembled, the rebounder is under tension. Extreme caution should always be exercised when assembling, disassembling, adjusting, or locating the LOTTO 3-in-1 Soccer Trainer.**


**NOTE:** The net needs to be attached with the Rebounder/Target shot to catch the balls.

### **NET ASSEMBLY**

- Spread Part #15 out and locate the two red tabs.
- Place the net over the frame with the red tabs in the top left- and right-hand corners of the frame.

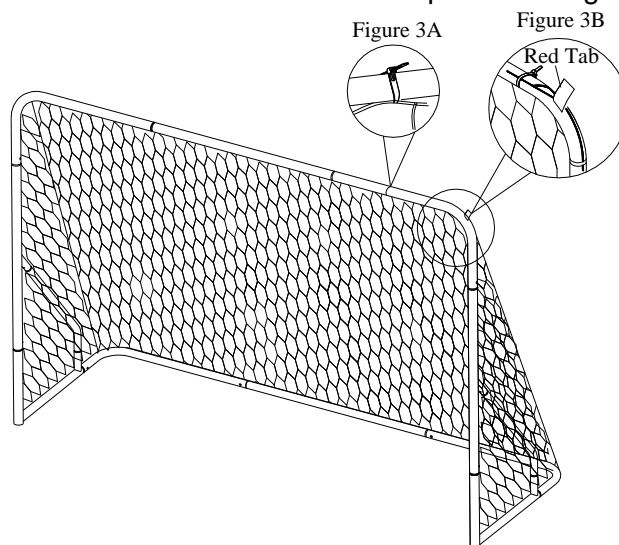

- The seam of the net should follow the frame supports.
- Secure Part #15 to the assembled Goal frame using Part #17.

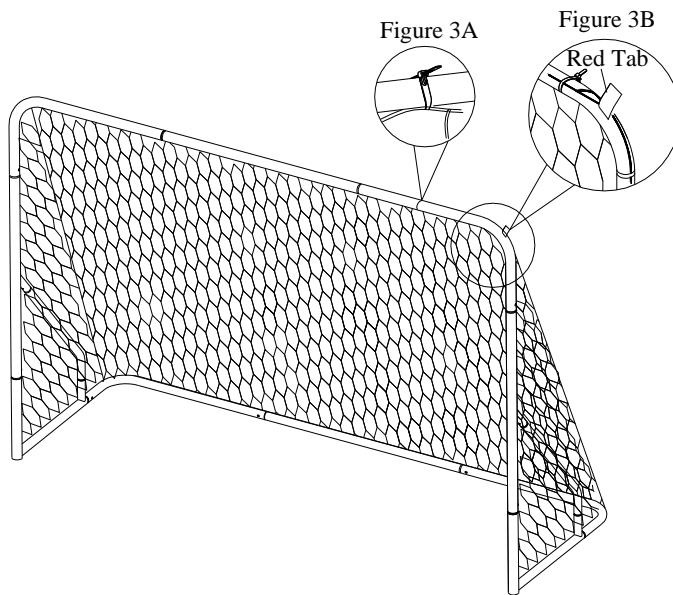

- The straps should be evenly spaced over the entire goal frame.

FIGURE 3. Net set-up

### SECURING THE FRAME

- Place the unit in the desired location and secure to the ground using Part #14.
- Please refer to Figure 4 below.
- Secure ground stakes using a mallet.

**⚠ CAUTION!** Exercise caution when handling the ground stakes and using a mallet, as misuse may cause injury or damage to product.

- If using indoor, weights or sandbags should be used to secure the goal in place.

### **⚠ WARNING**

**⚠ WARNING!** Check before use to ensure that ground stakes and/or weights/sand bags are secured. An unsecured trainer may cause serious injury or death.

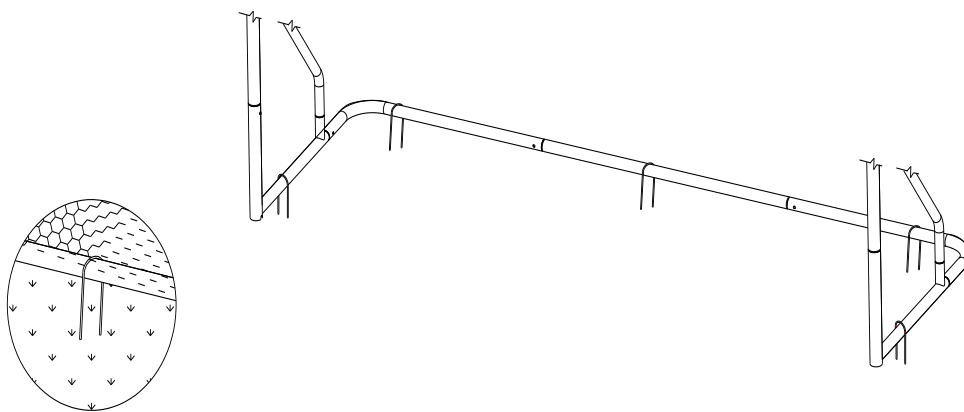


Figure 4. Suggested Ground Stake Positioning

## **DICK'S LIMITED WARRANTY**

### **Who is Covered?**

**This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.**

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

### **What the Warranty Covers**

This Limited Warranty covers defects in materials and workmanship.

### **What the Warranty Does Not Cover**

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

### **What the Period of Coverage Is**

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

### **How to Make a Warranty Claim**

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.  
345 Court St.  
Coraopolis, PA 15108  
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

### **What DICK'S Will Do to Correct the Problem**

Once you make a valid warranty claim, DICK'S will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

### **How State Law Applies**

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.