


MONARCH NAVIGATOR TABLE TENNIS TABLE

ASSEMBLY INSTRUCTIONS

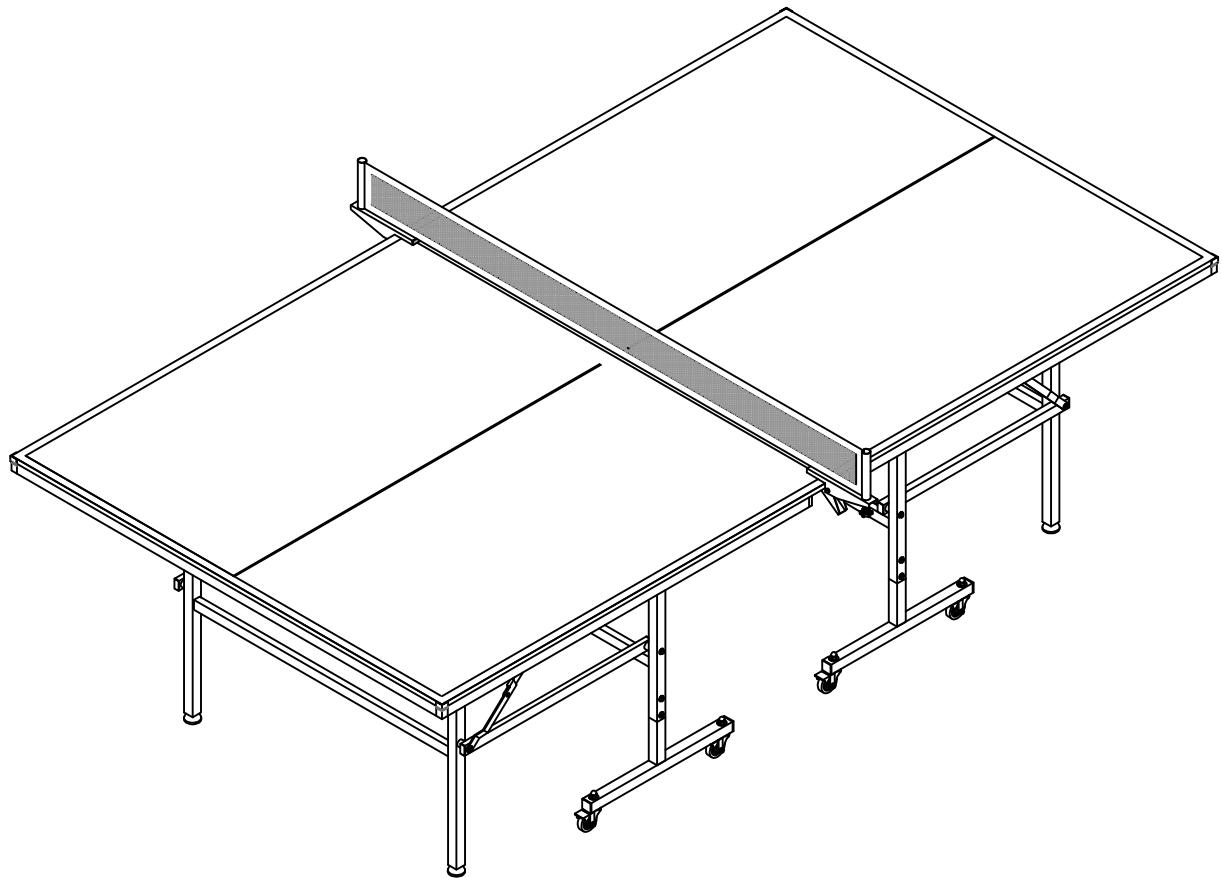

DICK'S LIMITED WARRANTY

Who is Covered?

This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

How to Make a Warranty Claim

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

What DICK'S Will Do to Correct the Problem

Once you make a valid warranty claim, DICK's will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

IMPORTANT SAFETY NOTICE

For your safety and benefit, read this manual carefully before starting assembly and using this product. Failure to follow the instructions and safety precautions in this manual can result in serious injury or damage to equipment.

SAFETY INFORMATION:

- **WARNING: CHOKING HAZARD**—Small parts. Not for children under 3 years.
- **WARNING: Pinch Point.** Keep hands clear of hinges while opening and closing the table.
- **DO NOT** leave children unattended with the table. This product is not a toy. Adult supervision is required if children use this product.
- **DO NOT** climb, sit, jump, lean, or stand on table. Table is not intended to be weight bearing and serious injury may result.
- Table should only be placed on a flat, level surface to ensure stability.


CARE AND MAINTENACE:

- This table is intended for indoor use only.
- Examine your table regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.

GENERAL ASSEMBLY WARNINGS:

- **ADULTS ONLY** should assemble table. At least two (2) adults are required for full assembly. Tables are **HEAVY** and **SHOULD NOT** be lifted or assembled alone.
- **ALWAYS** wear appropriate safety equipment during assembly.
- Assembly area should be clear of children and pets.
- To avoid damage to table top surface, assemble on a dry, flat, soft and clear area.


WARNING LABEL PLACEMENT

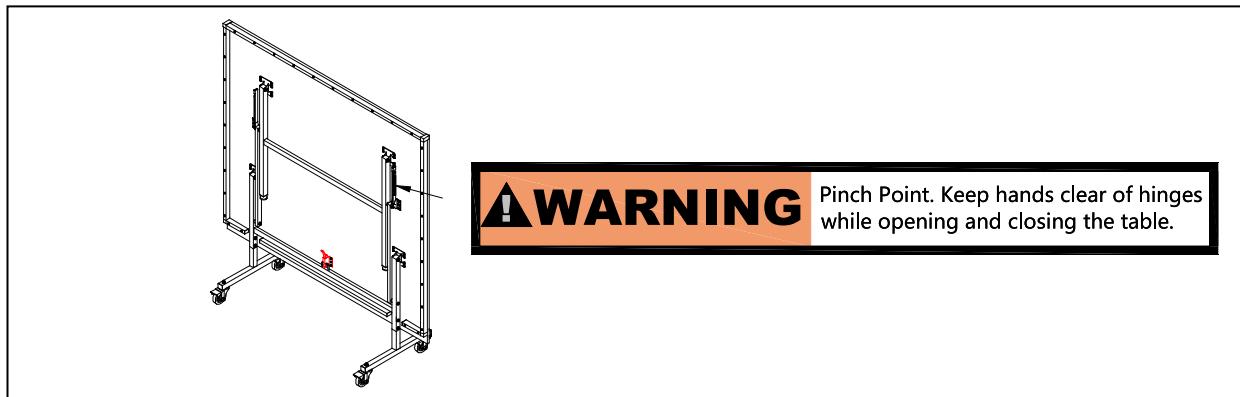


The warning label shown here has been placed on the [Monarch Navigator Table]. If the label is missing or illegible, please call customer service at 1-877-846-9997 for replacements. Apply the labels in the location shown.

PARTS LIST

P1

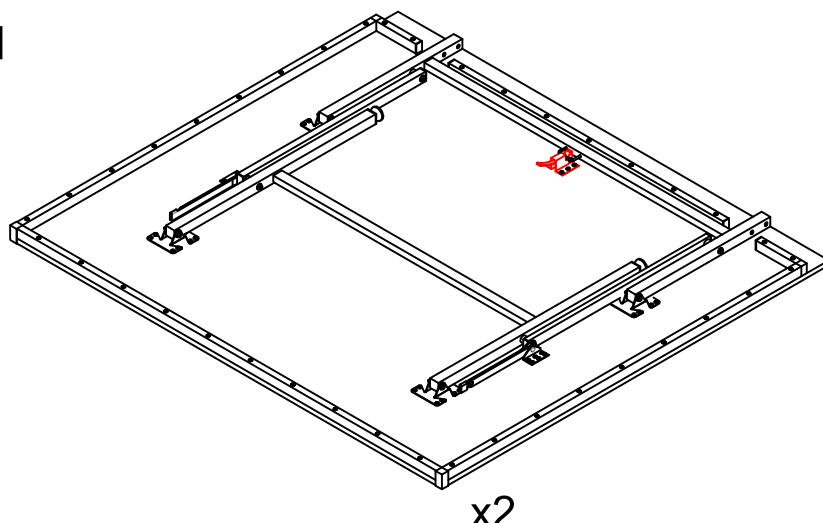


P2

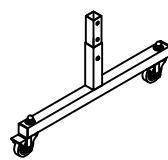


x4

P3

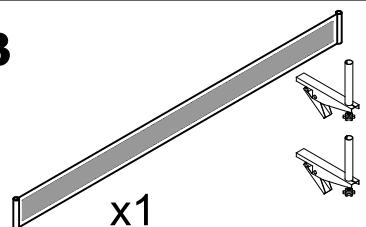

x1

 H1



x8

H2




x8

H3




x16

H4

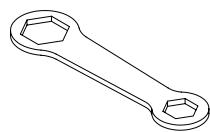


x2

Step 1

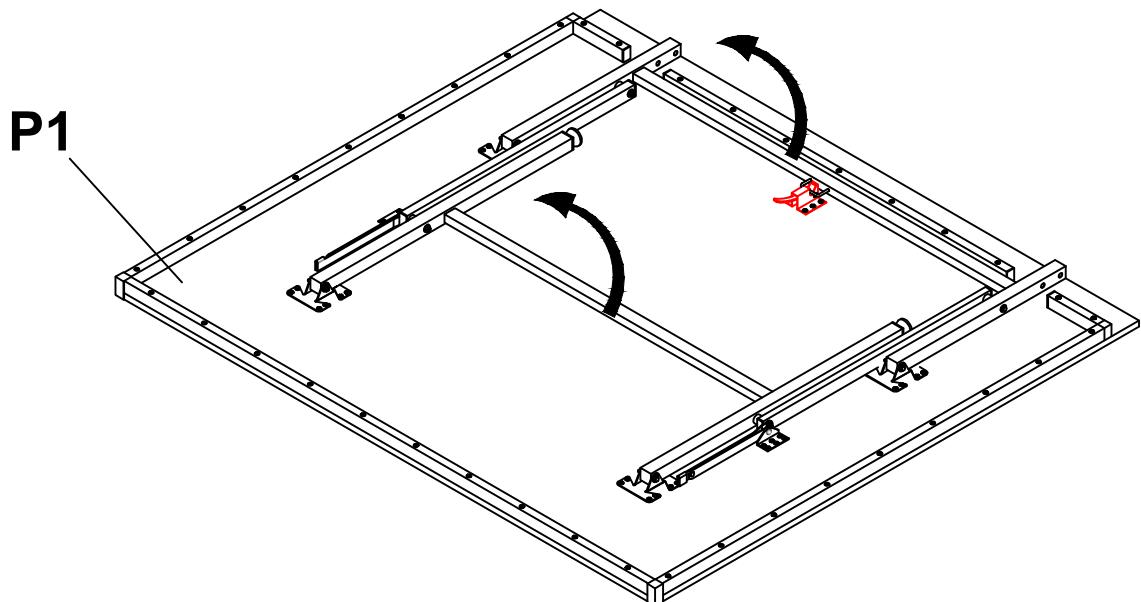


1. Lay tabletop pieces play-surface down on a flat, non-abrasive surface.
2. Extend table legs by pressing in red locking latch and folding out table legs into vertical position. Lock table legs in vertical position by extending side hinges into locking position.

Step 2

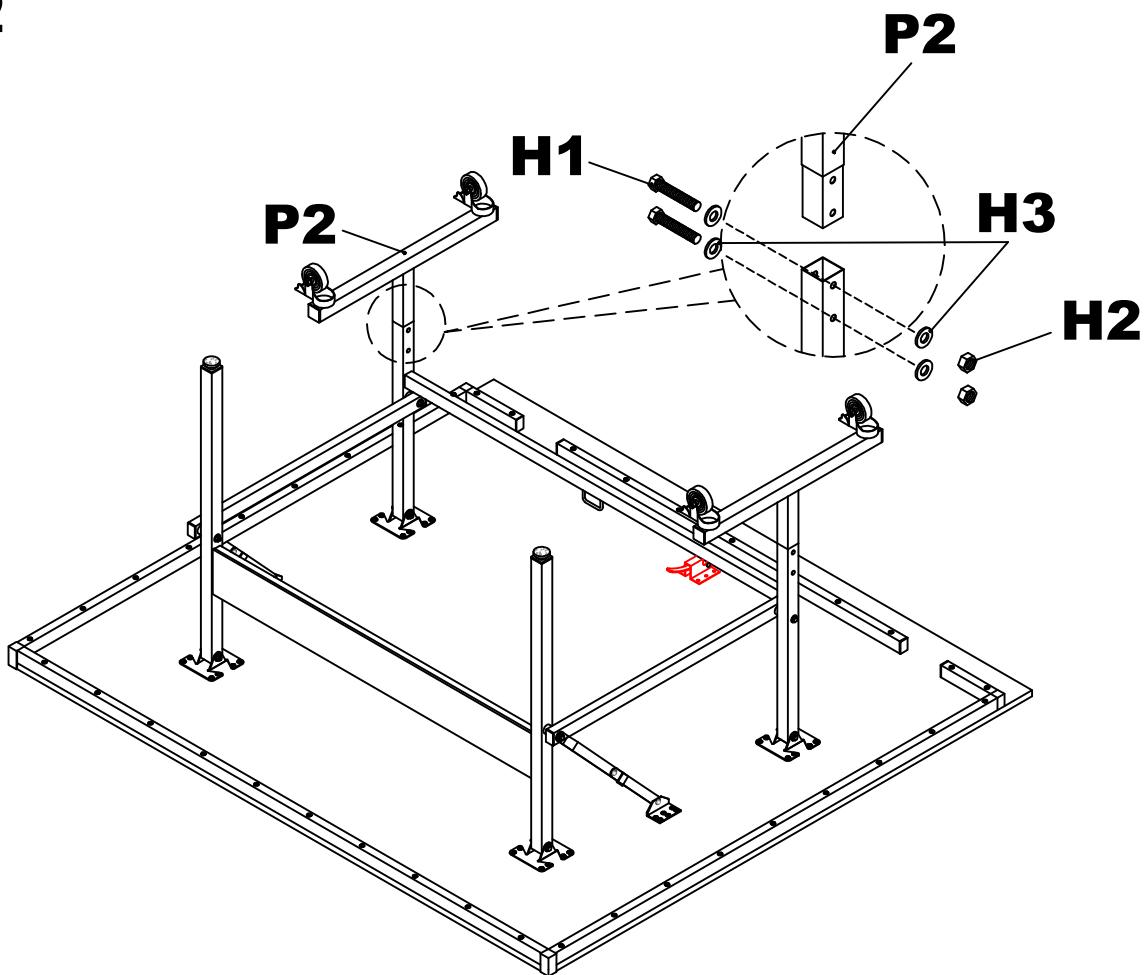


Insert caster feet into table legs, so that holes are aligned. Using wrench, secure feet to legs with provided bolts, washers, and nuts.

Step 3

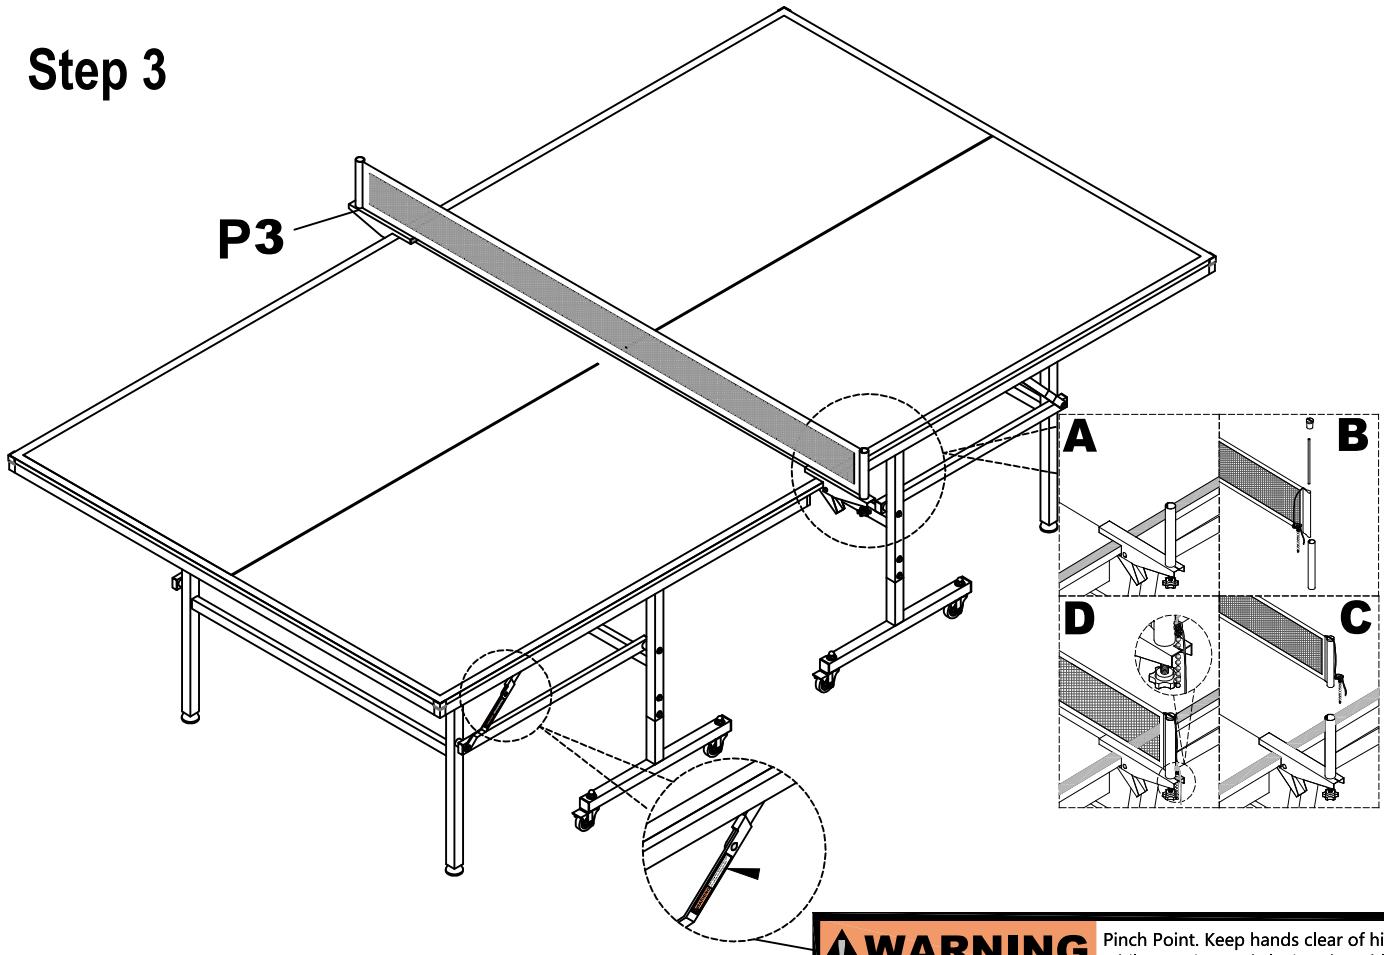


1. Flip table pieces over into a standing position. Place table pieces against each other, so that they form a proper play area, as shown.
2. Attach net clips to both sides of the table along center line. Insert net ends into net clips.

Step 4

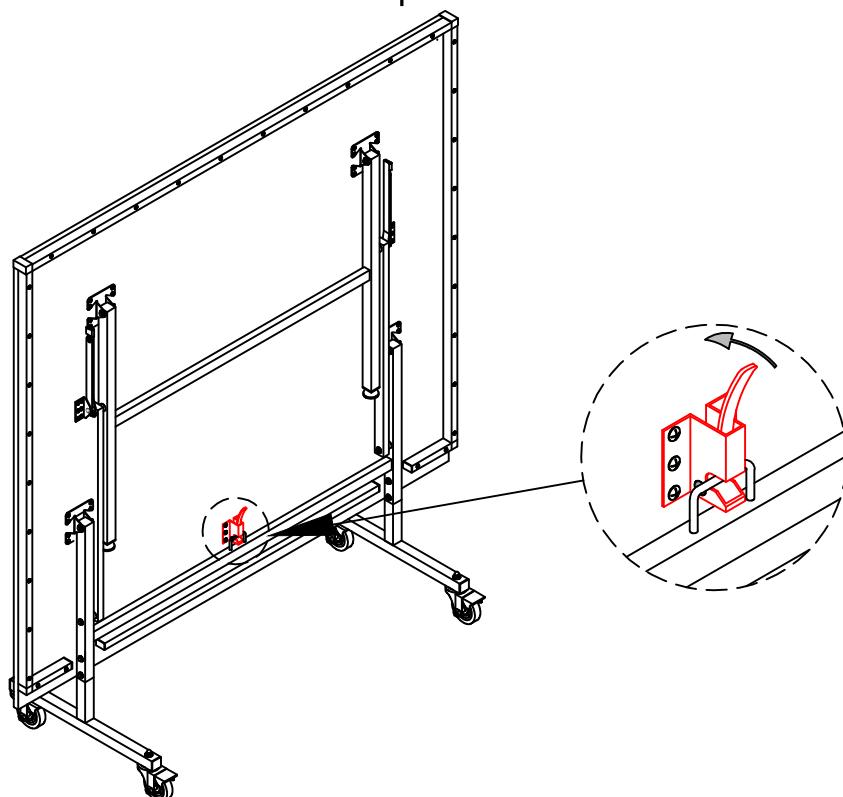

⚠️ WARNING!

- DO NOT ALLOW CHILDREN TO OPEN TABLE!
- DO NOT CLIMB, STAND OR JUMP ON TABLE!
- SERIOUS OR FATAL INJURY MAY RESULT!
- THIS IS NOT A TOY!
- TABLE IS TO BE OPENED OR CLOSED BY ADULTS ONLY!
- FAILURE TO COMPLY WITH OPENING AND CLOSING INSTRUCTIONS COULD RESULT IN PERSONAL INJURY OR PROPERTY DAMAGE.

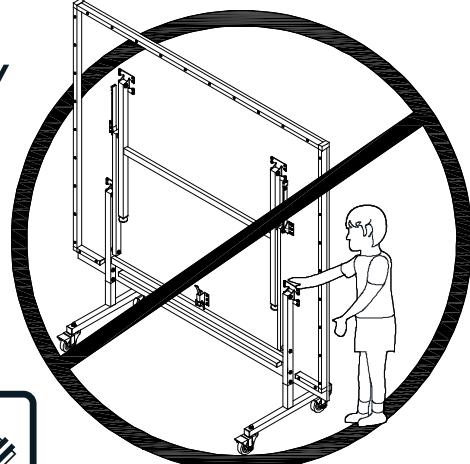

OPENING AND CLOSING INSTRUCTIONS:

PUTTING THE TABLE IN PLAY-BACK AND PLAY MODE:

- BEFORE MOVING THE TABLE INTO PLAY MODE, ENSURE THE TABLE IS POSITIONED WHERE YOU'D LIKE AND LOCK THE WHEELS.
- AFTER LOCKING THE WHEELS, REMOVE THE SAFETY STRAP AND TURN THE SAFETY LOCK OFF.
- GRAB THE CENTER OF THE TOP EDGE WITH BOTH HANDS. WITH CAUTION, GENTLY PULL THE TABLE OUTWARD UNTIL YOU FEEL THE LEGS REST COMFORTABLY ON THE FLOOR.
- REPEAT FOR THE OTHER SIDE OF THE TABLE

⚠️ WARNING: DO NOT REMOVE SAFETY LOCK UNTIL YOU ARE READY TO PUT THE TABLE TOP DOWN.

PUTTING TABLE IN STORAGE POSITION:

- AT LEAST TWO (2) ADULTS ARE REQUIRED TO MOVE THE TABLE. INJURY CAN OCCUR IF MOVED ALONE.
- GRAB THE CENTER OF THE EDGE WITH BOTH HANDS AND PULL UP, OUT, THEN FORWARD AS THE TABLE REACHES STORAGE MODE.
- DOUBLE CHECK THAT THE NET IS OUT OF THE WAY BEFORE MOVING TABLE TOPS.
- DO NOT LET GO UNTIL THE TABLE COMFORTABLY SITS ON ITS OWN.
- ONCE IN THE STANDING POSITION, PUT THE SAFETY LOCK ON.
- REPEAT FOR THE OTHER SIDE OF THE TABLE.
- WHEN BOTH SIDES ARE IN STANDING POSITION, SECURE WITH SAFETY STRAP.
- ONCE TABLE IS SECURE, YOU CAN SAFELY UNLOCK THE WHEELS AND MOVE IT ABOUT.
- FOR YOUR SAFETY, LOCK WHEELS ONCE YOU HAVE REACHED THE DESIRED STORAGE OR PLAY AREA. KEEP WHEELS LOCKED UNTIL YOU MOVE THE TABLE AGAIN.

