

1 POSITION RUBBER TEE OWNER'S MANUAL



DICK'S Sporting Goods 345 Court Street Coraopolis, PA 15108

TABLE OF CONTENTS

SECTION	PAGE
BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICE	2
IMPORTANT CARE AND MAINTENANCE	2
PARTS LIST	2
ASSEMBLY INSTRUCTIONS	3
LIMITED WARRANTY	4

BEFORE YOU BEGIN

Thank you for selecting the marucci 1 POSITION RUBBER TEE. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number 1-877-846-9997 Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE



IMPORTANT SAFETY NOTICE

Read these instructions before using this product. This product is intended to be used by a single user during baseball and softball training drills. **To avoid serious injury** during assembly, disassembly, use, adjustment and/or movement of the Marucci 1 Position Rubber Tee, **the following warnings and instructions MUST be observed at all times:**

WARNING

Important Instructions for Safe Assembly and Use

- 1. This product is not intended for children under age 13. Adult supervision during use is required. Never leave the product unattended. Unsupervised children can be injured.
- 2. Adults only must assemble, disassemble, adjust and/or move the batting tee. All components must be properly assembled prior to use.
- 3. The tee must be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
- 4. **WARNING: Pinch Point.** Exercise caution when folding tee legs to avoid potential injury. Keep fingers away from collapsible areas.
- 5. To avoid injury, always wear certified protective equipment when using the batting tee.
- 6. **ALWAYS** ensure play area is clear while using the batting tee.



IMPORTANT! CARE AND MAINTENANCE

- 1. **DO NOT** leave product outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds.
- 2. To extend the life of the product, unit should be stored indoors when not in use. Keep away from fire and heat sources.
- 3. Examine the product regularly for wear and tear. Discontinue use immediately if any defect is found.

1 POSITION RUBBER TEE PARTS LIST

Part #	Description	Qty
1	Base	1
2	Bottom Tube	1
3	Tee Topper	1

ASSEMBLY INSTRUCTIONS

1. Insert Bottom Tube (2), into the central hole from back side of base (1).





2. Pull Bottom Tube (2) through hole on base (1) until the entire Bottom Tube (2) is locked into place. Ensure locking teeth on Bottom Tube (2) are completely pulled through base (1).



3. Slide Tee Topper (3) into hole of Bottom Tube (2). Adjust Tee Topper (3) by either pushing down or pulling up to your proper swing height.



LIMITED WARRANTY

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials as follows:

Who is Covered

This Limited Warranty covers only the person who first bought the product. This Limited Warranty is not transferable to anyone else.

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
 - Products used in commercial or rental applications.
 - Products that have been modified or repaired by anyone not authorized by the Company.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from the date of your original purchase. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What the Company Will Do to Correct Problems

The Company will furnish a replacement part at no charge to you.

How You Can Get Service

Please direct all warranty service inquiries as follows:

If in writing, mail to:

Dick's Sporting Goods, Inc. 345 Court St. Coraopolis, PA 15108 Attn: Customer Service

If by telephone, call: 1-877-846-9997

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.