

MTRAIN282

marucci

Elevated Pitching Target OWNER'S MANUAL



DICK'S Sporting Goods 345 Court Street Coraopolis, PA 15108

TABLE OF CONTENTS

SECTION	PAGE
BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICE	2
IMPORTANT CARE AND MAINTENANCE	2
PARTS LIST	3
ASSEMBLY INSTRUCTIONS	4-5
LIMITED WARRANTY	6

BEFORE YOU BEGIN

Thank you for selecting the Marucci Elevated Pitching Target. For your safety and benefit, read this manual carefully before using the product. If you have any questions, or find there are missing or damaged parts, please contact our Customer Service Agents.

Toll-Free Customer Service Number
1-877-846-9997
Mon. – Fri. 9 a.m. – 5 p.m. EST

RETAIN THESE INSTRUCTIONS FOR FUTURE USE



IMPORTANT SAFETY NOTICE

Read these instructions before using this product. This product is intended to be used by a single user during baseball and softball training drills. To avoid serious injury during assembly, disassembly, use, adjustment and/or movement of the Elevated Pitching Target, the following warnings and instructions **MUST** be observed at all times:

WARNING





- This product is not intended for children under age 13. Adult supervision during use is required. Never leave the product unattended. Unsupervised children can be injured.
- Adult assembly (2 adults) required for assembly, disassembly, adjusting, and moving the trainer. All components must be properly assembled prior to use.
- The trainer should be placed on a flat surface that is suitable for play while ensuring maximum user safety. Placing on uneven or sloped surfaces can lead to injury.
- **WARNING: PINCH HAZARD.** Keep hands clear of moving parts and hinge points while assembling or adjusting the frame.
- **NEVER** climb on or hang from the target. The target is not intended to be weight bearing and will collapse if significant weight is applied.
- **DO NOT** put arms, head, or other body parts in holes or net. Entrapment and/or strangulation can occur.
- **DO NOT** leave the target outdoors in inclement weather as moisture and other elements may adversely affect the performance of the unit. Do not use in severe winds.
- This product should only be used with official size baseballs and softballs.



IMPORTANT! CARE AND MAINTENANCE

1. Inspect all parts before using the product for signs of wear or failure. If parts are worn or damaged, **DO NOT** use. Contact Customer Service for replacement parts.
2. To extend the life of the product, unit should be stored indoors when not in use. The target should be disassembled during extended storage.
3. Examine your target regularly for wear and tear. Discontinue use immediately if any defect or damaged parts are found.
4. Keep away from fire and heat sources.
5. **ASSEMBLED DIMENSION:** 34.2" x 35.4" x 64"

PARTS LIST

#	DESCRIPTION	PICTURE	NUMBER OF PARTS
1	Main Frame		1
2	Supporting Leg		2
3	Curved Pin		2
4	Straight Pin		2

ASSEMBLY INSTRUCTIONS

WARNING

Two (2) adults required for assembly, disassembly, adjusting the Elevated Pitching Target. All components must be properly assembled prior to use.



Step1:

Assemble two Support Legs (Part #2) onto the Main Frame (Part #1) using two straight pins (Part #4) and two curved pins (Part #3). Make sure all curved pins (Part #3) are securely tightened into the hole on the end of the Straight Pin (Part #4) as shown in pictures below.



Height Adjustment

The height of the Pitching Target is adjustable per below picture by securing the pins into different holes on Support Legs (Part #2)



LIMITED WARRANTY

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials as follows:

Who is Covered

This Limited Warranty covers only the person who first bought the product. This Limited Warranty is not transferable to anyone else.

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified or repaired by anyone not authorized by the Company.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from the date of your original purchase. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What the Company Will Do to Correct Problems

The Company will furnish a replacement part at no charge to you.

How You Can Get Service

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**Dick's Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.