

CEH03007Z



**TWIN AIRBED  
OWNER'S MANUAL**



## IMPORTANT SAFETY INFORMATION:

Please read instructions carefully before using this airbed.  
Weight capacity: 330 lbs (150 kg)

### **⚠ WARNING:**

1. Keep away from heat sources and fires.
2. Avoid contact with sharp and rough objects or surfaces to prevent damages.
3. Do not over-inflate or jump on the airbed, doing so may decrease the airbed's life span.
4. The airbed is not a life saving device, do not use in water.
5. Infants have suffocated on inflatable mattresses. Never place infant aged birth to 15 months to sleep on this inflatable air mattress/airbed. Infants can suffocate on an underinflated or deflated mattress, on bedding, by co-sleeping with another person, and by entrapment between the mattress and bed frame or between the mattress and a vertical surface.
6. Children can be entrapped between the inflatable mattress and an adjacent vertical surface. Provide at least a shoulder width space between the inflatable mattress/airbed and adjacent vertical surfaces such as walls, dressers, or other objects.
7. Always keep the inflatable mattress fully inflated when in use.

## IMPORTANT OPERATIONAL INSTRUCTIONS

### **INFLATION**

Spread out the airbed and open the valve to inflate.

**NOTE:** Do not use high pressure air pump or over inflate.

After use, airbed may require additional air to increase firmness, add air according to your desired firmness.

### **DEFLATION**

Open the valve to deflate.

### **REPAIRING**

If the airbed surface is damaged, use the provided repair patch.

To repair:

1. Completely deflate the airbed.
2. Clean and dry the damaged area.
3. Apply a repair patch and smooth out any air bubbles.

**Note:** Never use other liquid glue or adhesive fabric, only use the repair patch like the provided one.

## CLEANING AND STORAGE

1. If the airbed is dirty, use a clean cloth/wipe and gently wipe surface.  
Be sure to dry the airbed before storing.
2. Once deflated, carefully fold the airbed and store in a cool, dry location away from chemicals and heavy or sharp objects.

# DICK'S LIMITED WARRANTY

## **Who is Covered?**

**This limited warranty ("Limited Warranty") covers only the person who first purchased the product. This Limited Warranty expires at the time of transfer and is not transferable to anyone else. Proof of purchase is required to make a warranty claim.**

DICK'S warrants this product to be free from defects in workmanship and materials as follows:

## **What the Warranty Covers**

This Limited Warranty covers defects in materials and workmanship.

## **What the Warranty Does Not Cover**

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified using replacement parts that were not provided by DICK'S.
- Defects or damage caused by using third-party parts or services.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

## **What the Period of Coverage Is**

This Limited Warranty lasts for a period of one year from receipt of the product. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

## **How to Make a Warranty Claim**

You can make a warranty claim by bringing the product to any store location of the chain the product was purchased as long as: (1) it meets the warranty criteria, (2) is within the warranty period (one year), (3) you have a valid proof of purchase and provide that to the store at the time of making the warranty claim, and (4) you are the original purchaser of the product. If you are unable to find your valid proof of purchase, please contact 1-877-846-9997 and a customer service representative may be able to assist.

Please direct all warranty service inquiries as follows:

If in writing, mail to:

**DICK'S Sporting Goods, Inc.  
345 Court St.  
Coraopolis, PA 15108  
Attn: Customer Service**

If by telephone, call: **1-877-846-9997**

## **What DICK'S Will Do to Correct the Problem**

Once you make a valid warranty claim, DICK'S will either:

- Return or exchange the product; or
- Provide a free replacement part, if applicable; or
- Repair the product for free, if applicable.

## **How State Law Applies**

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.