



General Canopy Safety & Guidelines

Water

Your DSG canopy has been treated with a water resistant coating to help keep you dry. This coating is also resistant to Ultraviolet light, helping to protect you from the sun.

The water resistant coating is intended for use only in light rain conditions. To prevent damage to the canopy and injuries to those near the canopy, your DSG canopy should not be used in moderate or severe rain.

Excessive exposure to the sun can cause deterioration of the fabrics water resistant coating. To prevent this, the canopy should not be exposed to sunlight for long periods at a time.

Fire

The canopy fabric is highly flammable and should be kept away from open flames and excessive heat. The canopy fabric is fire resistant and meets CPAI-84 specifications. The fire resistant fabric is not fire proof, and can burn if exposed to an open flame.

Fumes

Items creating hazardous fumes should be kept away from the canopy. Use of any product producing fumes in close proximity to your canopy can result in destruction of the canopy and injury and/or death to those near the canopy.

Wind

DSG canopies are made for use in no to light wind. Use of this product in moderate to excessive wind can result in damage to the canopy and injury and/or death. This product should not be used in conditions with uncertain wind patterns or conditions that could result in excessive wind.

Storage

To insure maximum use of your DSG canopy, care should be taken when setting up, taking down, and storing the canopy. The canopy should be stored in a dry environment, secure from pests, fire, and other hazardous chemicals.

Do not store your canopy if the fabric or frame are wet. This can result in mold, mildew, or stains that can damage the canopy.

To prevent damage during storage, your canopy should be hand washed after each use with mild dishwashing soap and a soft bristle brush. After washing the canopy, insure that the fabric and frame are dry before storing your canopy. This product should not be cleaned in a machine washer or dryer.

General Safety Guidelines

- Do not use in inclement weather (storms, excessive wind, excessive water, etc.)
- Keep canopy away from flames, excessive heat, and hazardous fumes
- Do not leave canopy unattended for long periods of time
- While in use, secure canopy to the ground using canopy stakes or canopy weight plates
- Wash canopy after each use using directions listed in the storage section
- To prevent injury, use two adults to set up or take down the canopy
- Avoid using any damaged product

Failure to follow the instructions or safety guidelines can result in damage to your canopy, injury, and/or death. Proper care and safety can allow you to enjoy many years of benefits that your DSG canopy provides.

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.



LIMITED WARRANTY

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials as follows:

Who is Covered

This Limited Warranty covers only the person who first bought the product. This Limited Warranty is not transferable to anyone else.

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified or repaired by anyone not authorized by the Company.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from the date of your original purchase. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What the Company Will Do to Correct Problems

The Company will furnish a replacement part at no charge to you.

How You Can Get Service

Please direct all warranty service inquiries as follows:

If in writing, mail to: Quest
C/O Dick's Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service

If by telephone, call: 1-855-999-4321

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.




10x 20 Commercial Canopy Instruction Manual

Canopy Parts List

1. 10x20 Commercial Canopy Top(1)	3. 10x20 Commercial Carry Bag (1)
2. 10x20 Commercial Canopy Frame(1)	4. Canopy Stakes(6)
5. Guy Line(4)	6. Guy Line Stakes(4)

Canopy Set Up Instructions

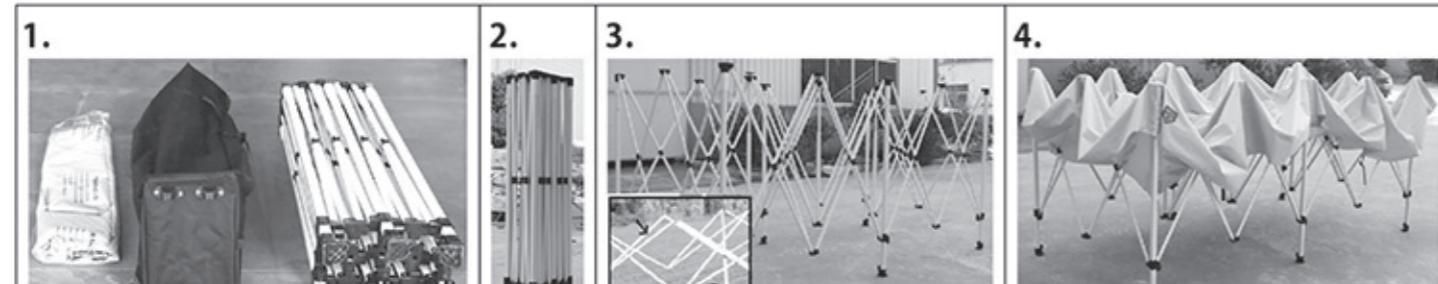

1. Remove all parts from the canopy bag.
2. Place the canopy frame in the upright standing position.
3. Partially open the canopy frame using the sides of the canopy as indicated. The frame is marked "open here".
4. Place the canopy top on the opened frame, and secure the canopy top to the canopy frame on all four corners.



5. Please ensure the square tube toward to the square hole on the plastic bracket perpendicularly during assembly. That the canopy will open smoothly.
6. Open the canopy frame until all six holders lock into place. You should hear a click when the canopy frame has opened and the corner has locked.
7. On the inside of the canopy, secure all six side to the canopy using the inside hook and loop strips. Tie all plastic adjustable buckles on the frame inside the canopy.




8. Extend all six legs to the desired preset height. Once extended to the appropriate height, the canopy legs will lock into place.
9. To secure the canopy to the ground, place one canopy stake in each of the two pre-drilled holes at the base of the canopy. The short side of the stake should touching the ground.
10. Secure all four guy lines using canopy stakes. Set up for your 10x20 Canopy is now complete.



10x 20 Commercial Canopy Instruction Manual


Canopy Take Down Instructions

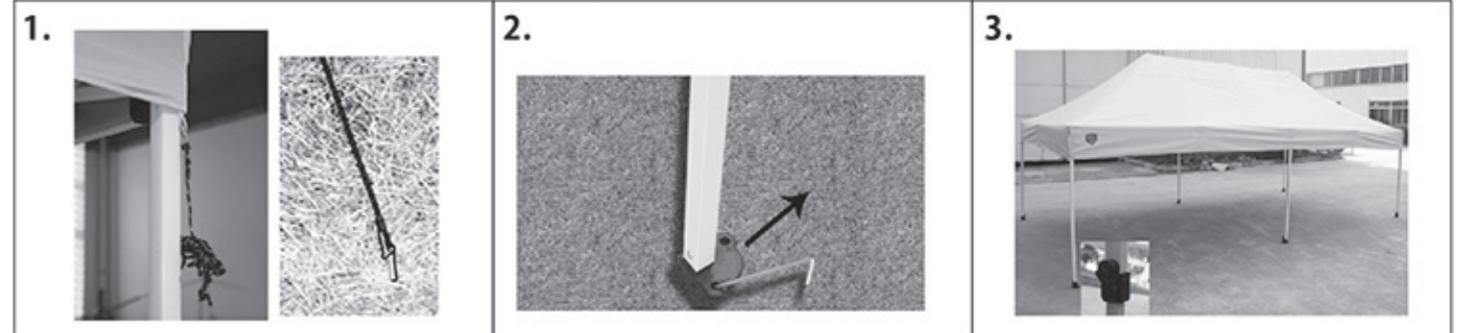

1. Unite the guy line from the canopy stakes, Carefully bundle the guy line to prevent the tangling.
2. Remove canopy stakes from the ground, clean off, and place in canopy stake bag.
3. Lower the canopy by pressing the release button on each leg.



4. Inside the canopy, unstrap all six sides and plastic adjustable buckles of the canopy top from the canopy frame.
5. Push the release button located at the top of each leg. This will allow the canopy frame to collapse. Slightly bring the canopy frame in creating slack in the canopy top.
6. Once all six locks are released, unstrap the canopy top from the canopy frame. Remove and fold the canopy top. If the canopy top is wet, allow time to dry before folding.

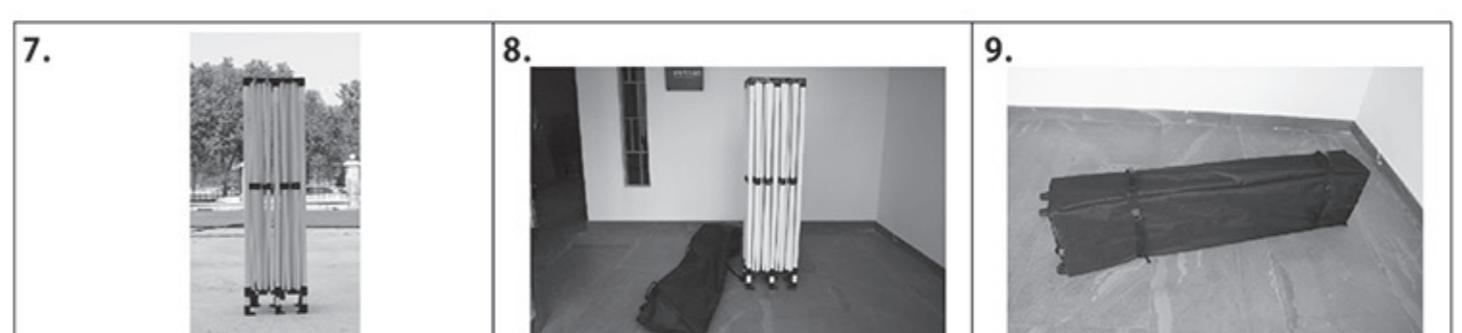

7. With the canopy top removed, slowly begin to close the canopy frame. This should be done by pressing on the trusses.
8. Once the canopy frame completely closed, place the canopy frame in the carry bag.
9. Place the canopy top and canopy stakes inside carry bag and zip the carry bag closed. Take down for your 10*20 Canopy is now complete.