



General Canopy Safety & Guidelines

Water

Your DSG canopy has been treated with a water resistant coating to help keep you dry. This coating is also resistant to Ultraviolet light, helping to protect you from the sun.

The water resistant coating is intended for use only in light rain conditions. Water collected in the fabric can cause the structure to collapse causing serious injury or death.

Excessive exposure to the sun can cause deterioration of the fabrics water resistant coating. To prevent this, the canopy should not be exposed to sunlight for long periods at a time.

Fire

The fabric cover is fire retardant and meets the standards of the Industrial Fabric Association International. However, continuous contact with a flame can cause a fire. Do not build fires under the canopy.

Fumes

Items creating hazardous fumes should be kept away from the canopy. Use of any product producing fumes in close proximity to your canopy can result in destruction of the canopy and injury and/or death.

Wind

DSG canopies are made for use in no to light wind. Use of this product in moderate to excessive wind can result in damage to the canopy and injury and/or death. This product should not be used in conditions with uncertain wind patterns or conditions that could result in excessive wind.

Storage

To insure maximum use of your DSG canopy, care should be taken when setting up, taking down, and storing the canopy. The canopy should be stored in a dry environment, secure from pests, fire, and other hazardous chemicals.

Let the fabric dry completely before closing or storing to avoid mildew, stains, and mold.

After each use, use a mild soap and plenty of water to clean the fabric. Let the fabric dry completely before storing. It is recommended that you use a seam sealer to prevent leaks along the seams of the fabric. Tighten the bolts on the canopy frame if they become loose.

General Safety Guidelines

- Use caution when erecting DSG canopy frame. Avoid pinching hands/fingers as frame opens and closes. Gloves can be worn to help avoid injury.
- The purpose of this DSG canopy is as a temporary sun shelter
- Do not leave canopy unattended for long periods of time or overnight
- Do not use in inclement weather (storms, excessive wind, excessive water, etc.)
- Exposure to lightning can cause electrocution.
- Keep canopy away from flames, excessive heat, and hazardous fumes
- While in use, secure canopy to the ground using canopy stakes or canopy weight plates
- Wash canopy after each use using directions listed in the storage section
- Avoid using any damaged product

Failure to follow the instructions or safety guidelines can result in damage to your canopy, injury, and/or death. Proper care and safety can allow you to enjoy many years of benefits that your DSG canopy provides.

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.



LIMITED WARRANTY

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials as follows:

Who is Covered

This Limited Warranty covers only the person who first bought the product. This Limited Warranty is not transferable to anyone else.

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified or repaired by anyone not authorized by the Company.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from the date of your original purchase. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What the Company Will Do to Correct Problems

The Company will furnish a replacement part at no charge to you.

How You Can Get Service

Please direct all warranty service inquiries as follows:

If in writing, mail to: Quest
C/O Dick's Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service

If by telephone, call: 1-855-999-4321

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Q36 Backpack Canopy Instruction Manual

Set up

How to set up your Backpack Canopy:

Step 1

Remove the canopy from the backpack and stand it up so the feet are on the ground (figure A).





Step 2

Pull opposite corners away from each other to expand canopy (figure B & C).



Step 3

Slide brackets in all four corners up, until the pull-pins snap in place (figure D & E).

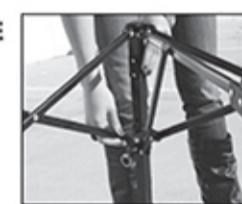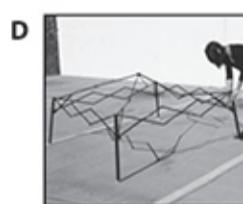

Step 4

Drape the canopy top over the frame and attach hook and loop fasteners on canopy top to those on frame (figure F & G).



Step 5

Extend canopy legs to desired height (figure H).



Step 6

Wrap half-wall straps around legs below push-pins to keep wall taught (figure I).



Take Down

How to take down your Backpack Canopy:

Step 1

Release and push in all canopy legs to their lowest positions (figure J).



Step 2

Detach canopy top from frame and fold it neatly, so it will easily fit into backpack. Do not place in bag yet (figure K).



Step 3

Use the pull-pins at the corners to release corner brackets and loosen eave tension (figure L).



Step 4

With all pull-pins released, pick up and walk one corner of canopy towards the opposite corner (figure M).



Step 5

Fully compress frame so it will fit easily into the bag.



Step 6

Slide canopy frame back into canopy backpack, add in the canopy top and GO (figure N).