

10x10 STRAIGHT LEG CANOPY

OWNER'S MANUAL

Please review the following instructions and make yourself familiar with the parts and function of your 10x10 Straight Leg canopy.

Parts included:

- [1] assembled canopy frame
- [1] fabric canopy top
- [1] storage bag
- [8] stakes

SET UP INSTRUCTIONS

STEP 1

Place the canopy frame in the center of the setup area. Hold the two outer legs and lift slightly for ground clearance. Take a few steps back and extend the frame to full arm's length, approximately four feet (Fig. A).

STEP 2

Lift the side of the frame up and bend slightly down underneath the center of the canopy frame (Fig. B). Then, push up on the center Quick Lift mechanism until it snaps into place (Fig. C) and the entire frame is fully extended (Fig. D).

STEP 3


Place the canopy over the top of the frame. Use the hook and loop straps to secure each corner of the cover to the upper portion of each leg (Fig. E). Additionally, attach the hook and loop straps on the underside of the canopy to the frame to ensure the canopy is securely attached to the frame (Fig. F).

STEP 4

The adjustable legs offer multiple height positions. Pull the leg lock lever to unlock. Tilt one side of the canopy upward and extend the lower leg section to the desired height, then press down to lower the leg lever to lock the leg in place (Fig. G). Repeat on the adjacent leg until all legs are extended. When extending the legs, avoid having only diagonal legs extended.

STEP 5

Secure all four guy lines using canopy stakes.(Fig.H)

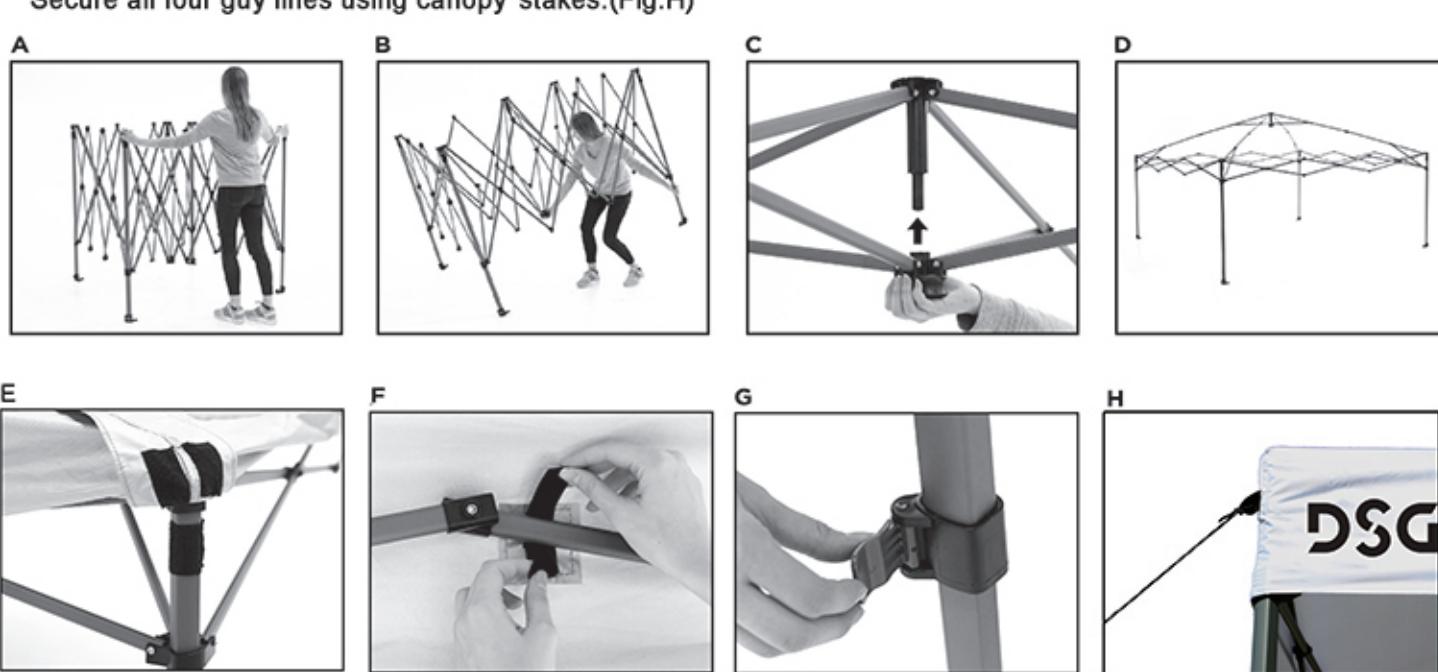

DSG

TAKE DOWN INSTRUCTIONS

STEP 1

Untie the guy line from the canopy. Carefully bundle the guy line to prevent tangling. (Fig.I)

STEP 2

Walk underneath the canopy to the center. Reach up to the Quick Lift mechanism and then press down the lever, pull down until the canopy frame begins to close (Fig.J).

STEP 3

Pull the leg lock lever to unlock and lever each leg completely (Fig.K).


STEP 4

Hold one side of the canopy and lift slightly; walk toward the other side of the canopy so the frame begins to fold. Keep walking until the frame is about half-way closed (Fig. L). Be sure to avoid pinching your hands or fingers. Hold the outside part of the legs and continue closing the canopy as you walk towards the other side. The completely folded canopy should stand up on its own.

STEP 5

With the canopy standing, slide the bag over the top with the zippered end at the bottom. Turn the canopy over gently and zipper shut.

Note: The canopy top may remain in place for subsequently easier setup. However, to prolong the life of the fabric, we recommend that you remove the top when storing your canopy.

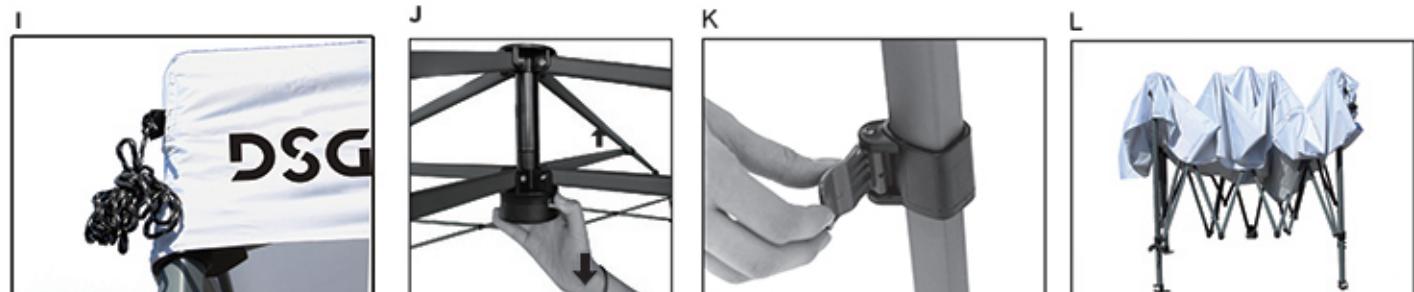

DSG

General Canopy Safety & Guidelines

Water

Your DSG canopy has been treated with a water resistant coating to help keep you dry. This coating is also resistant to Ultraviolet light, helping to protect you from the sun.

The water resistant coating is intended for use only in light rain conditions. Water collected in the fabric can cause the structure to collapse causing serious injury or death.

Excessive exposure to the sun can cause deterioration of the fabrics water resistant coating. To prevent this, the canopy should not be exposed to sunlight for long periods at a time.

Fire

The fabric cover is fire retardant and meets the standards of the Industrial Fabric Association International. However, continuous contact with a flame can cause a fire. Do not build fires under the canopy.

Fumes

Items creating hazardous fumes should be kept away from the canopy. Use of any product producing fumes in close proximity to your canopy can result in destruction of the canopy and injury and/or death.

Wind

DSG canopies are made for use in no to light wind. Use of this product in moderate to excessive wind can result in damage to the canopy and injury and/or death. This product should not be used in conditions with uncertain wind patterns or conditions that could result in excessive wind.

Storage

To insure maximum use of your DSG canopy, care should be taken when setting up, taking down, and storing the canopy. The canopy should be stored in a dry environment, secure from pests, fire, and other hazardous chemicals.

Let the fabric dry completely before closing or storing to avoid mildew, stains, and mold.

After each use, use a mild soap and plenty of water to clean the fabric. Let the fabric dry completely before storing. It is recommended that you use a seam sealer to prevent leaks along the seams of the fabric. Tighten the bolts on the canopy frame if they become loose.

General Safety Guidelines

- Use caution when erecting DSG canopy frame. Avoid pinching hands/fingers as frame opens and closes. Gloves can be worn to help avoid injury.
- The purpose of this DSG canopy is as a temporary sun shelter
- Do not leave canopy unattended for long periods of time or overnight
- Do not use in inclement weather (storms, excessive wind, excessive water, etc.)
- Exposure to lightning can cause electrocution.
- Keep canopy away from flames, excessive heat, and hazardous fumes
- While in use, secure canopy to the ground using canopy stakes or canopy weight plates
- Wash canopy after each use using directions listed in the storage section
- Avoid using any damaged product

Failure to follow the instructions or safety guidelines can result in damage to your canopy, injury, and/or death. Proper care and safety can allow you to enjoy many years of benefits that your DSG canopy provides.

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

DSG

LIMITED WARRANTY

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials as follows:

Who is Covered

This Limited Warranty covers only the person who first bought the product. This Limited Warranty is not transferable to anyone else.

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified or repaired by anyone not authorized by the Company.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from the date of your original purchase. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What the Company Will Do to Correct Problems

The Company will furnish a replacement part at no charge to you.

How You Can Get Service

Please direct all warranty service inquiries as follows:

If in writing, mail to: Quest
C/O Dick's Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service

If by telephone, call: 1-855-999-4321

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.