



LIMITED WARRANTY

Dick's Sporting Goods, Inc. (the "Company") warrants this product to be free from defects in workmanship and materials as follows:

Who is Covered

This Limited Warranty covers only the person who first bought the product. This Limited Warranty is not transferable to anyone else.

What the Warranty Covers

This Limited Warranty covers defects in materials and workmanship.

What the Warranty Does Not Cover

This Limited Warranty does not cover:

- Expendable items, including by way of example only and not by way of limitation: batteries, light bulbs, fuses, zippers, tires, belts, shoe soles, fabric, and other items that experience wear as a result of normal use.
- Damage through improper use, negligence, abuse, misuse, transportation, acts of nature, or accident, including failure to perform routine maintenance or follow the assembly and/or operating instructions supplied with the product.
- Products used in commercial or rental applications.
- Products that have been modified or repaired by anyone not authorized by the Company.

This Limited Warranty does not cover any consequential or incidental damages of any kind, including transportation to get warranty service, loss of time, and loss of use. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you.

What the Period of Coverage Is

This Limited Warranty lasts for a period of one year from the date of your original purchase. Any implied warranty arising under state law is limited in duration to the one-year period of this Limited Warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What the Company Will Do to Correct Problems

The Company will furnish a replacement part at no charge to you.

How You Can Get Service

Please direct all warranty service inquiries as follows:

If in writing, mail to: Quest
C/O Dick's Sporting Goods, Inc.
345 Court St.
Coraopolis, PA 15108
Attn: Customer Service

If by telephone, call: 1-855-999-4321

How State Law Applies

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



General Canopy Safety & Guidelines

Water

Your DSG canopy has been treated with a water resistant coating to help keep you dry. This coating is also resistant to Ultraviolet light, helping to protect you from the sun.

The water resistant coating is intended for use only in light rain conditions. Water collected in the fabric can cause the structure to collapse causing serious injury or death.

Excessive exposure to the sun can cause deterioration of the fabrics water resistant coating. To prevent this, the canopy should not be exposed to sunlight for long periods at a time.

Fire

The fabric cover is fire retardant and meets the standards of the Industrial Fabric Association International. However, continuous contact with a flame can cause a fire. Do not build fires under the canopy.

Fumes

Items creating hazardous fumes should be kept away from the canopy. Use of any product producing fumes in close proximity to your canopy can result in destruction of the canopy and injury and/or death.

Wind

DSG canopies are made for use in no to light wind. Use of this product in moderate to excessive wind can result in damage to the canopy and injury and/or death. This product should not be used in conditions with uncertain wind patterns or conditions that could result in excessive wind.

Storage

To insure maximum use of your DSG canopy, care should be taken when setting up, taking down, and storing the canopy. The canopy should be stored in a dry environment, secure from pests, fire, and other hazardous chemicals.

Let the fabric dry completely before closing or storing to avoid mildew, stains, and mold.

After each use, use a mild soap and plenty of water to clean the fabric. Let the fabric dry completely before storing. It is recommended that you use a seam sealer to prevent leaks along the seams of the fabric. Tighten the bolts on the canopy frame if they become loose.

General Safety Guidelines

- Use caution when erecting DSG canopy frame. Avoid pinching hands/fingers as frame opens and closes. Gloves can be worn to help avoid injury.
- Two or more people are required to set up and take down the canopy
- The purpose of this DSG canopy is as a temporary sun shelter
- Do not leave canopy unattended for long periods of time or overnight
- Do not use in inclement weather (storms, excessive wind, excessive water, etc.)
- Exposure to lightning can cause electrocution.
- Keep canopy away from flames, excessive heat, and hazardous fumes
- While in use, secure canopy to the ground using canopy stakes or canopy weight plates
- Wash canopy after each use using directions listed in the storage section
- Avoid using any damaged product

Failure to follow the instructions or safety guidelines can result in damage to your canopy, injury, and/or death. Proper care and safety can allow you to enjoy many years of benefits that your DSG canopy provides.

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.





Q 10x10 Mesh Curtain Instruction Manual


Mesh Curtain Parts List


1. Q 10x10 Mesh Curtain (1)
2. Q 10x10 Mesh Curtain Carry Bag (1)
3. Q 10x10 Mesh Curtain Ground Stakes (8)

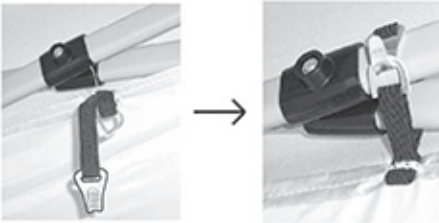
Mesh Curtain Set Up Instructions


- 


1. Properly complete the set up for your Q64 10x10 Instant Up Canopy.
- 


2. Remove all mesh curtain parts from the bag.
- 

3. Carefully unfold the mesh curtain, make sure not to rip or tear the curtain. Unzip one of the zippers and lay the curtain out across the ground.
- 

4. Attach the open end of the curtain to the side of the canopy using the plastic hook as shown above. Connect all remaining hooks, wrapping the curtain around the canopy.
- 

5. Connect all straps along the top of the curtain with the metal hook and ring at the point where the trusses on the frame cross.
- 

6. On the inside of the curtain, attach the hook at the bottom of the curtain to the canopy stake on each corner.
- 


7. Stake the curtain to the ground using the ground stakes and the fabric loops at the outside bottom of the curtain. Do not stake the loops on the open side of the curtain.
- 

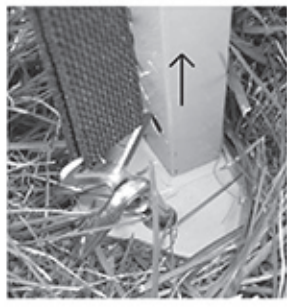
8. Set up for your Q 10x10 Mesh Curtain is now complete.

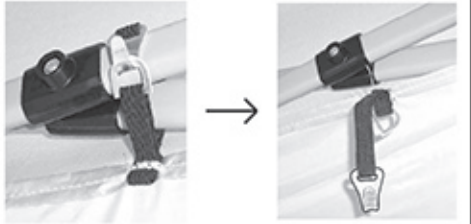



Q 10x10 Mesh Curtain Instant Up Canopy Instruction Manual


Mesh Curtain Take Down Instructions


- 


1. Remove all stakes from the fabric loops along the bottom of the curtain.
- 

2. Unhook the straps on the inside corner of the curtain from the canopy stake.
- 

3. Unhook all of the straps along the top of the curtain with the metal hook and ring at the point where the trusses on the frame cross.
- 

4. Begin unhooking plastic hooks at the top of the curtain. Continue unhooking the curtain until all hooks are removed. The curtain should no longer be attached to the canopy.
- 

5. Lay the curtain flat across the ground expanding it to its full width.
- 

6. Connect the zippers on opposite ends of the curtain. Carefully fold the curtain until it is small enough to fit into the carry bag.
- 

7. Place the folded curtain in the carry bag. Place the stakes in the bag being careful not to snag the curtain with the stakes. Zip the bag closed. Take down for the Q 10x10 Mesh Curtain is now complete.