


10MM

INSTRUCTION

Correct rolling way

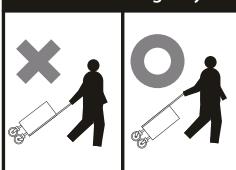

Please unfold the cart before first rolling!

⚠️ WARNING

1. Use care when assembling/disassembling the cart so fingers are not pinched.
2. This product has been designed for storing and transporting only.
3. This product is not a toy for children. Do not sit in it.
4. Exceeding maximum capacity limit may cause damage to the product. Maximum load is 150 lbs.
5. Keep the cart away from fire or high temperature environments as it may cause damage to plastic parts.
6. Do not use the cart on uneven surfaces as it may shorten the product's life.
7. Make sure to fasten all items when hauling to avoid anything falling out. Do not run while pulling the cart.
8. Avoid storing the product outside as it may cause damage to the frame or plastic parts.
9. For proper care, remove dirt and moisture after each use.
10. To clean fabric, use a light neutral cleaning agent.
11. Examine cart before each use for wear and tear. Discontinue use immediately if any damaged parts are found.

Set up the cart



②



2. Unfasten the webbing belt, then push down on the middle of the cart to open the frame. Do not push hard if the cart doesn't open easily.

③



3. Put the removable floor onto the bottom of the cart.

1. Unfasten the removable floor.

WARNING! Pinch hazard – Exercise caution when assembling/disassembly the cart. Keep hands and fingers away from moving parts.



4. Press the button to pull out the plastic handle. Now the cart is ready for use.

Fold the cart

①



②



1. Take out the removable floor, then pull the webbing handle in the middle of the bottom to fold the cart.

2. Fasten the webbing belt to secure cart closed, then wrap the cart in the removable floor. Use the webbing belt to fasten the removable floor around the cart.

MADE IN CHINA
AMERICAN SPORTS LICENSING INC.

PATENT NO. US9,073,564B2

160MM

160MM