



1 Tap the icon at the bottom of the screen.

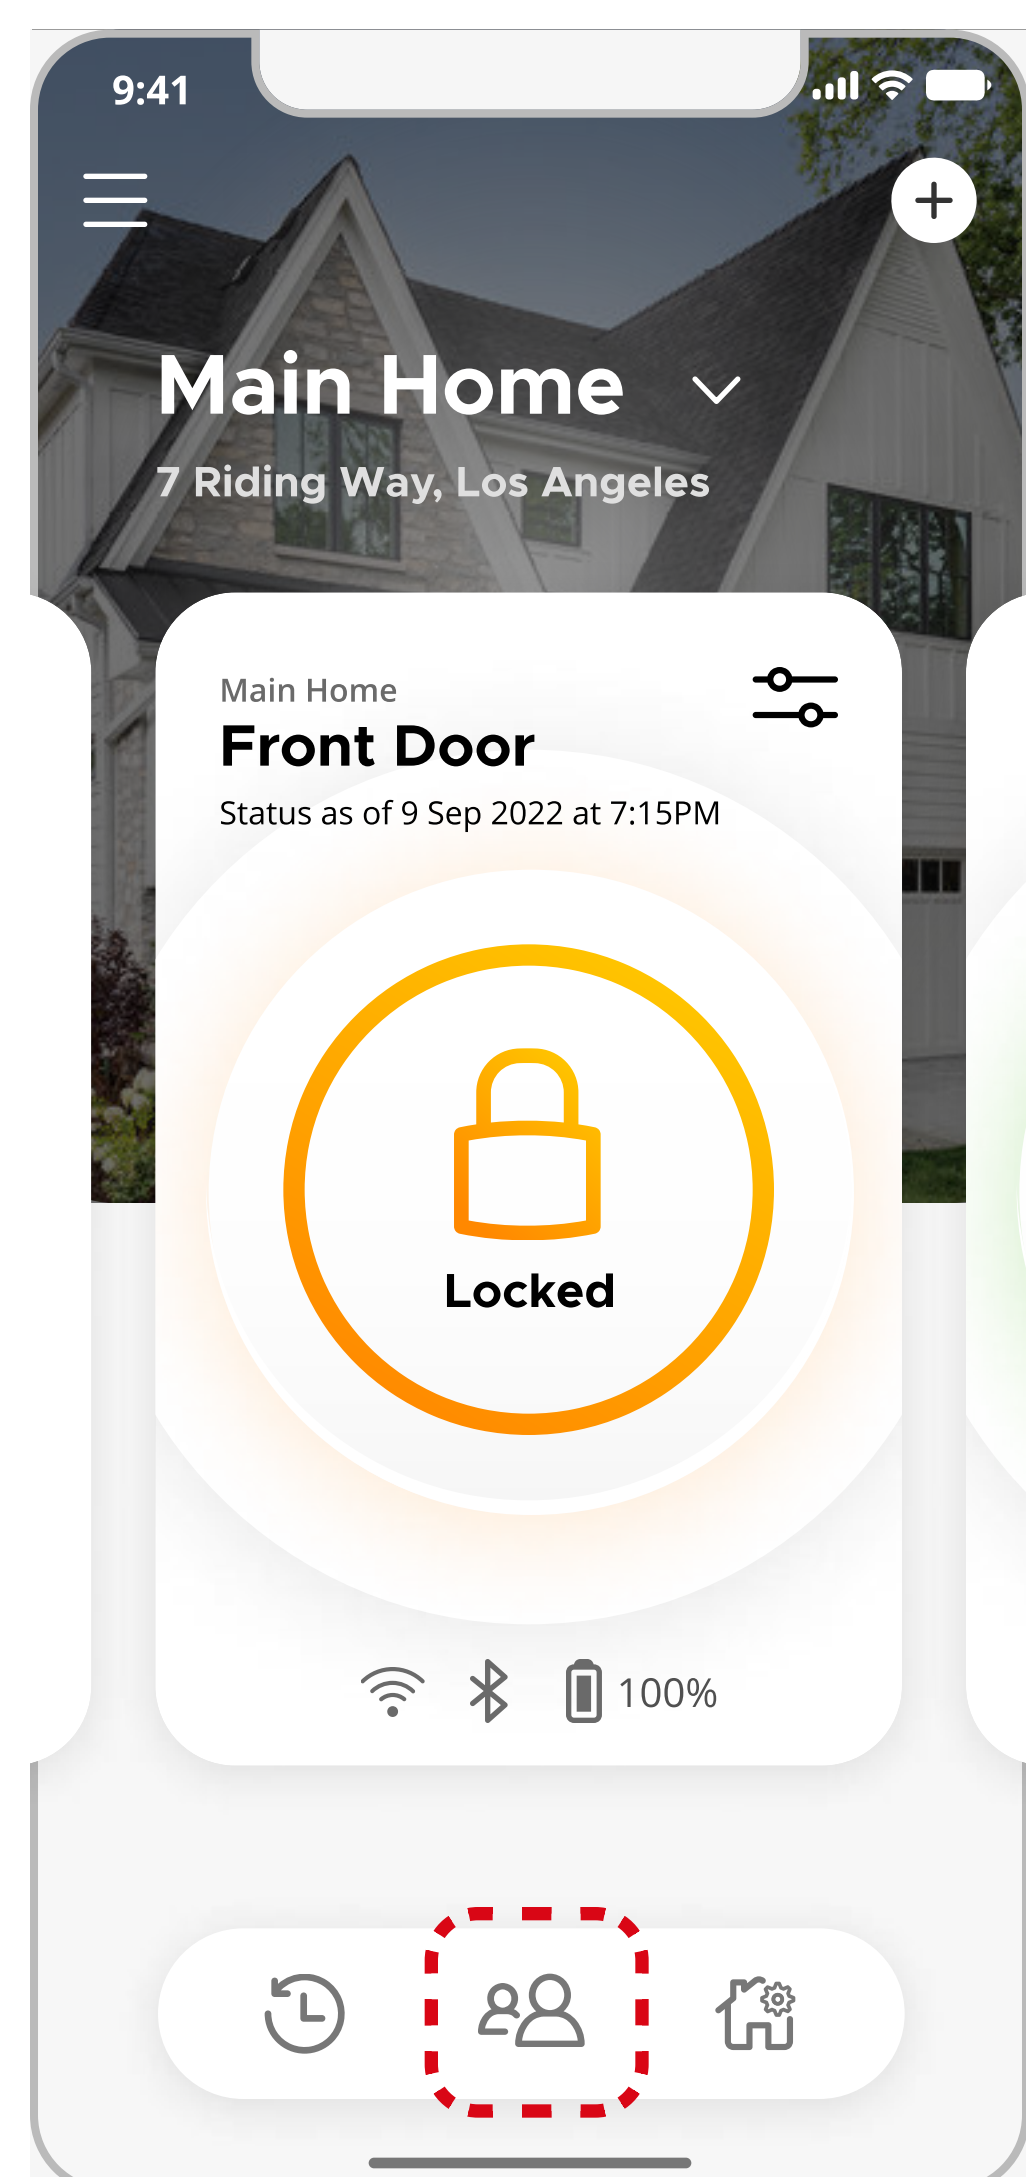


2 Tap the icon at the bottom of the Access Codes screen.

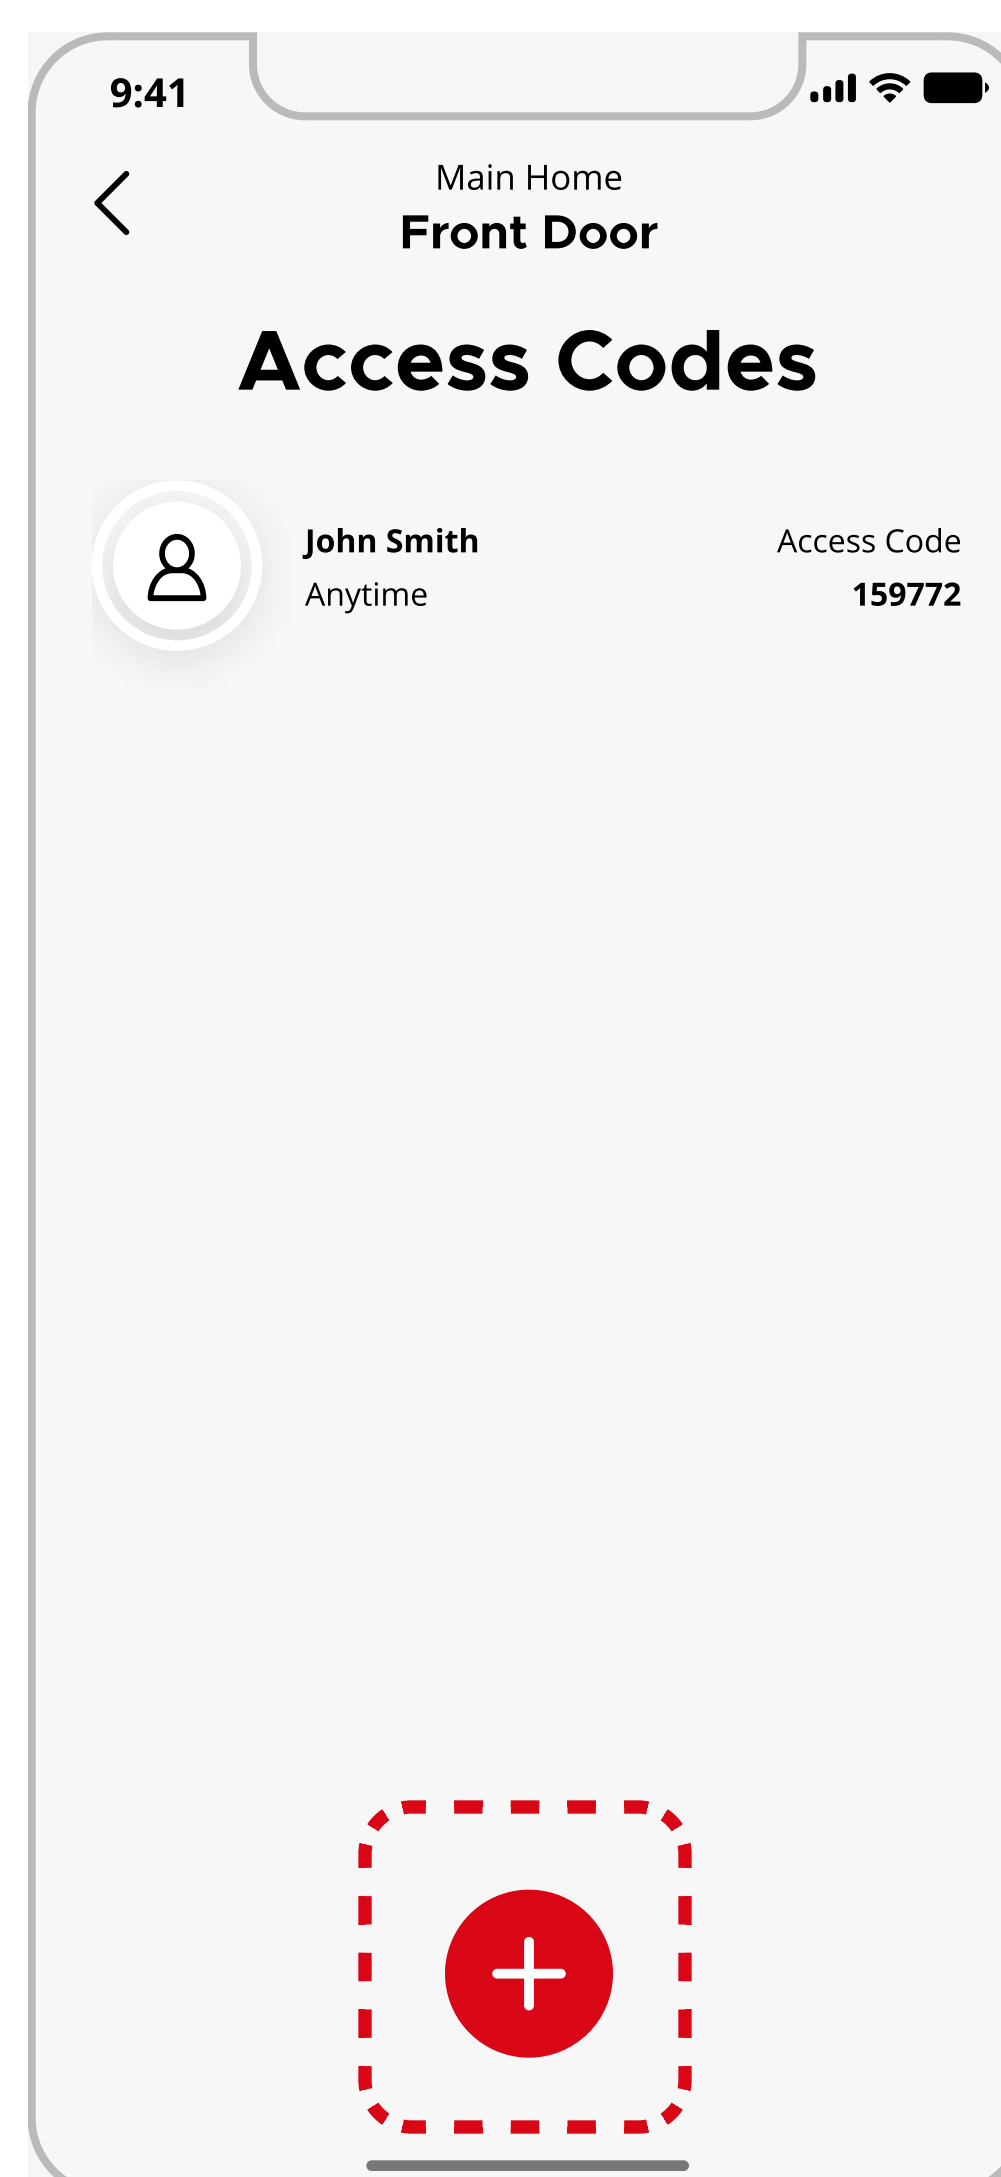


**Note:** You will need to be in Bluetooth range when adding Access Codes to your **Aura** lock.

3 Enter a name (2-14 characters), then assign an access code (2-8 digits) or tap **Generate Random Code**.

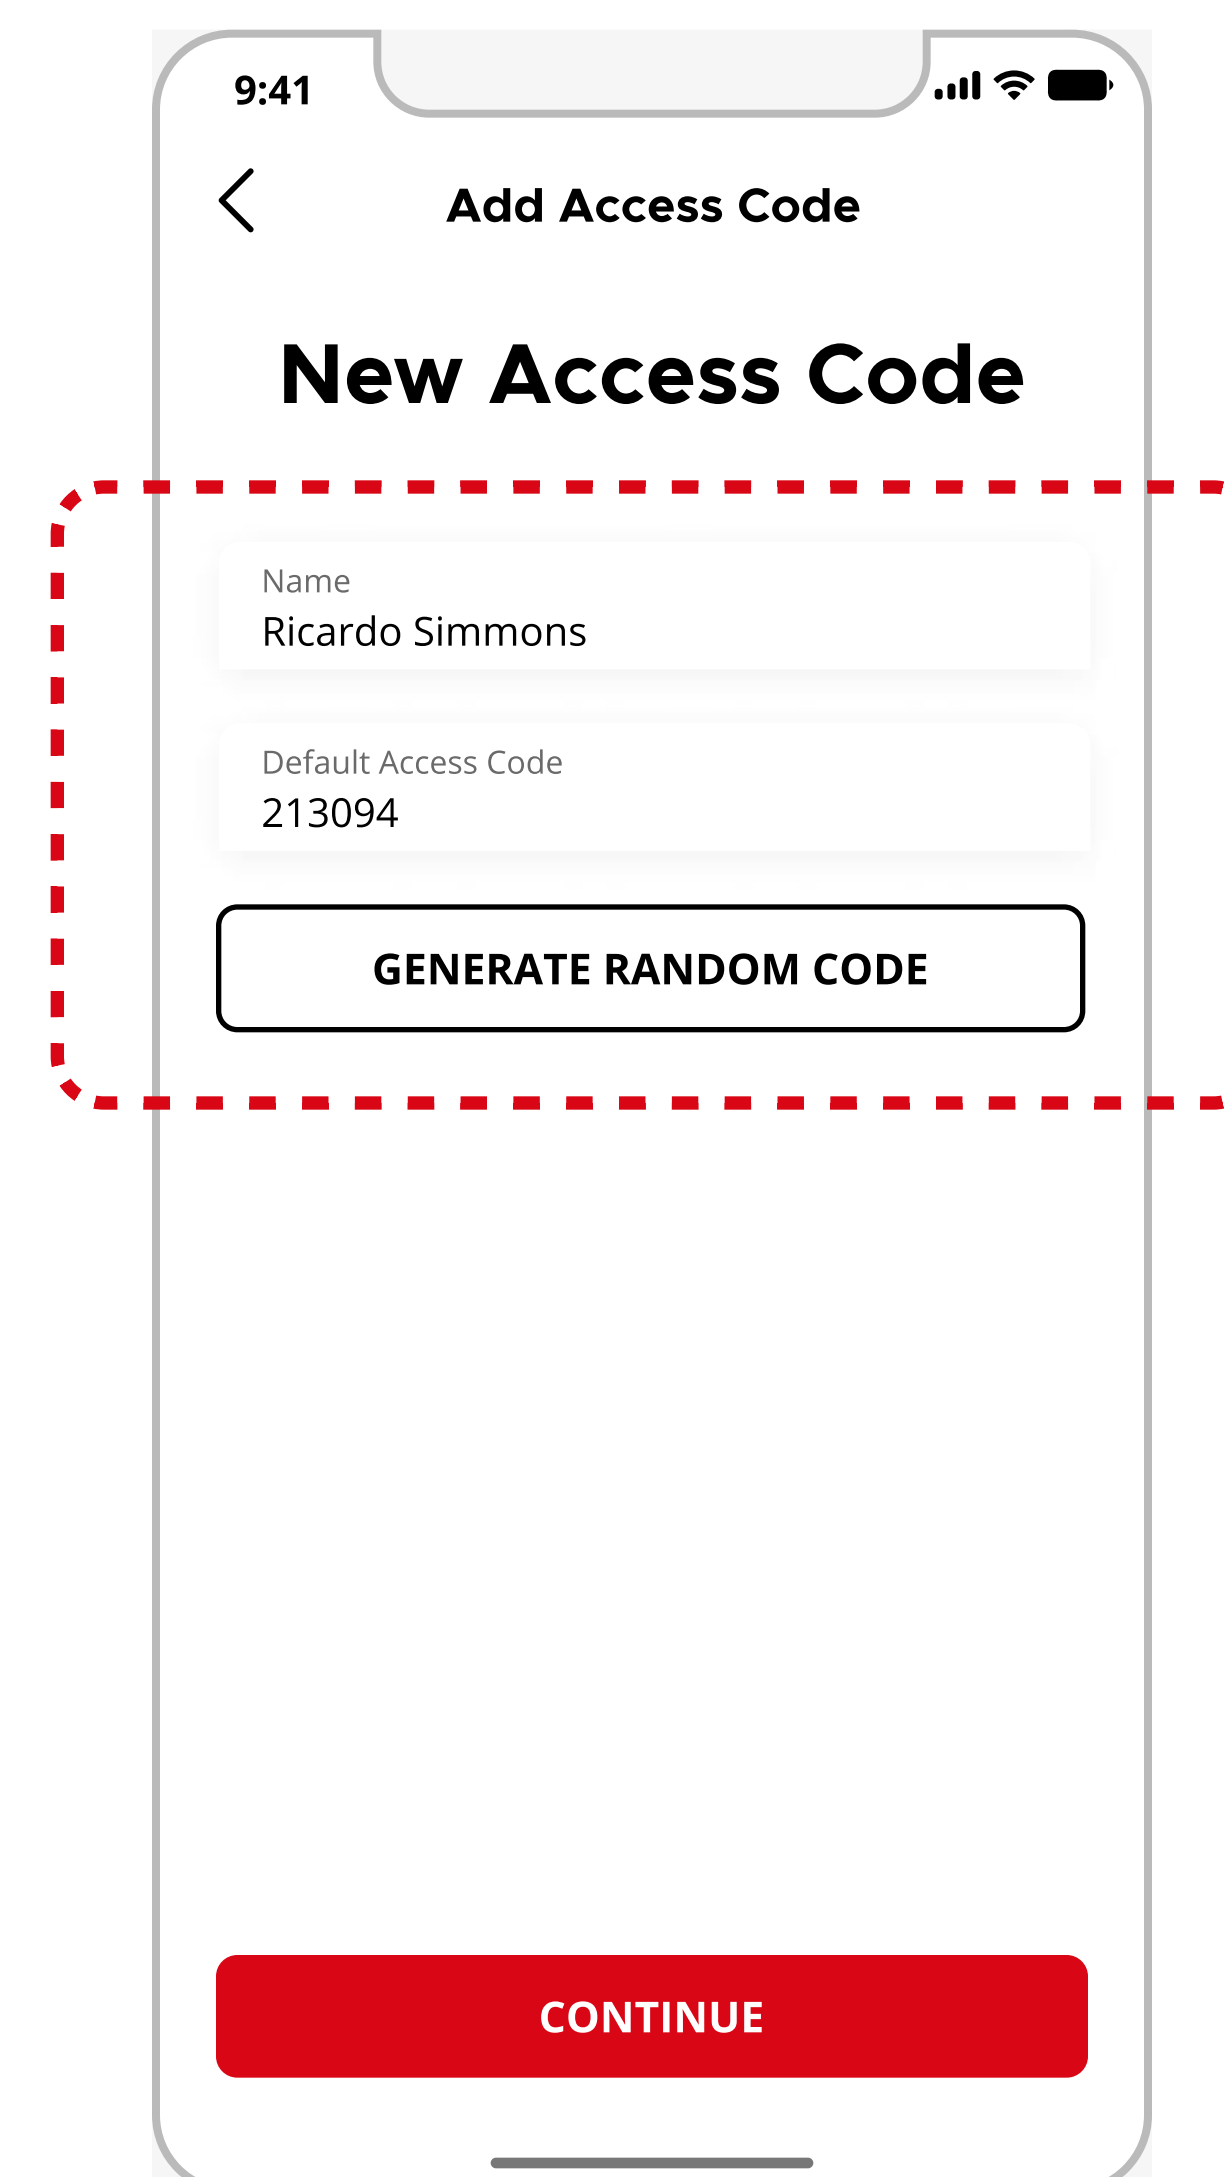


**Note:** For security reasons, the first 4 digits of each Access Code must be unique.

4 You can set an access time window or tap **Continue** to keep the default anytime access.

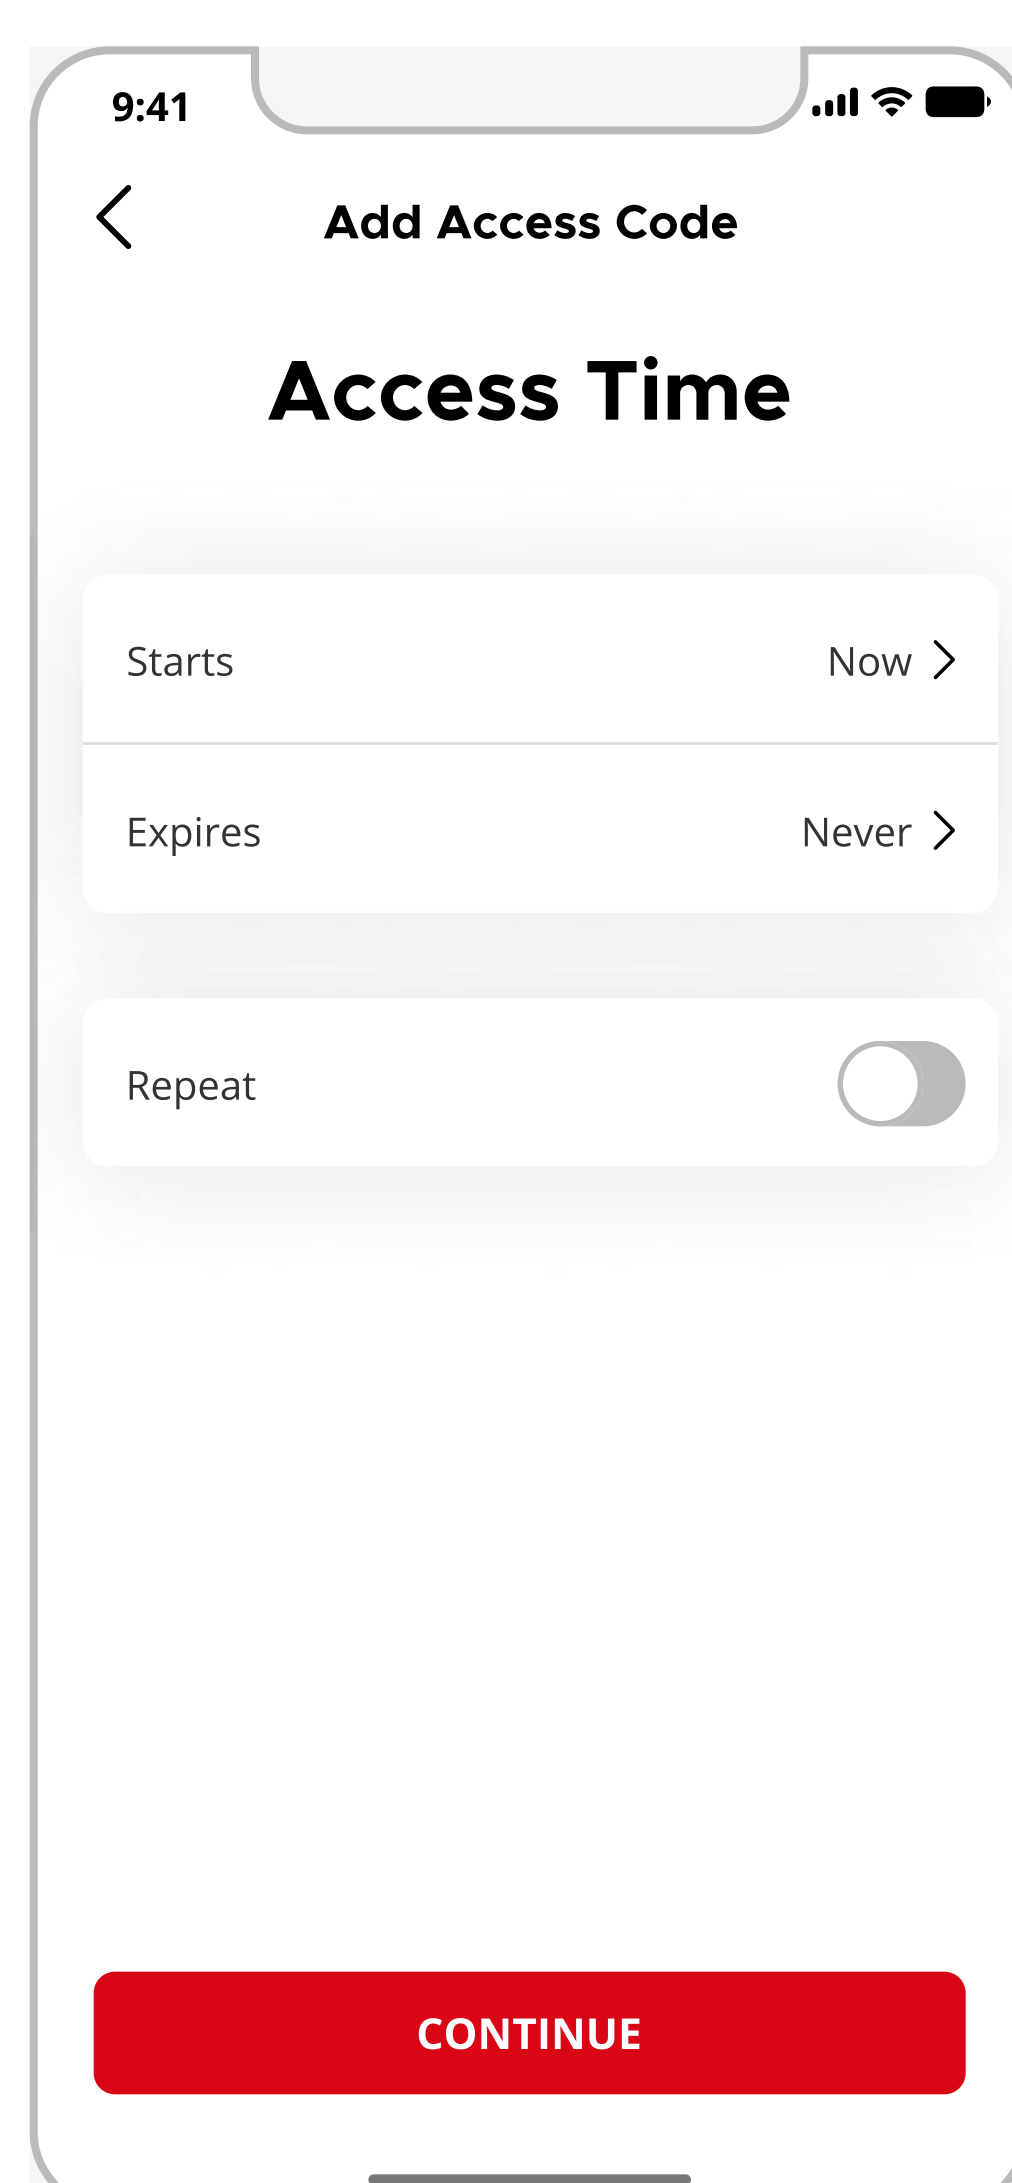


**Note:** You can edit Access Time later if needed.

5 Set an access time window by selecting your desired date and time range.

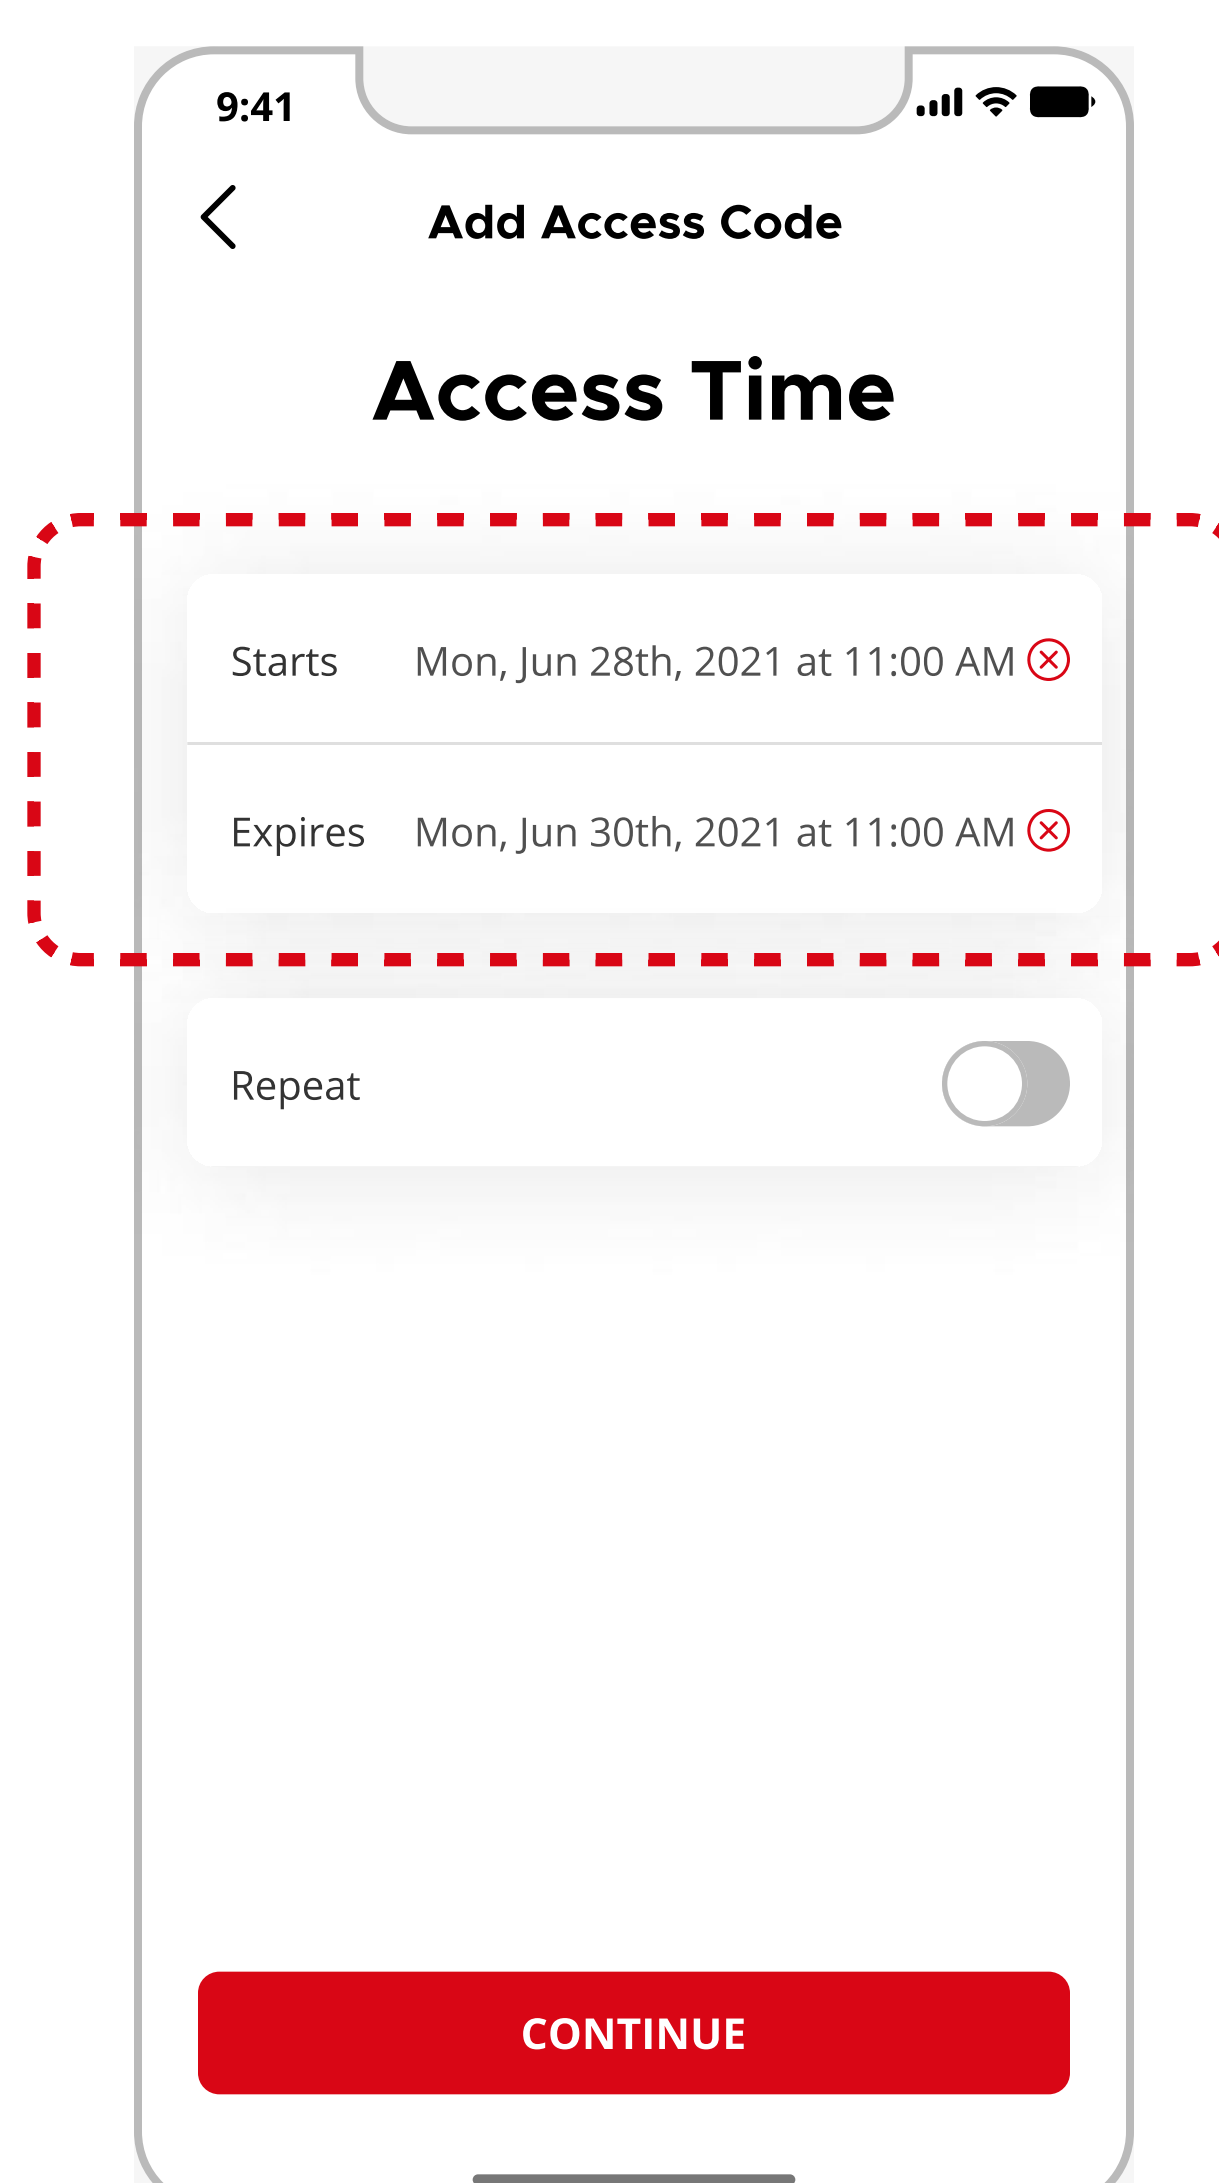


**Note:** Expired access codes are disabled in the lock and can no longer be used.

6 Select **Repeat** to set up a weekly recurring schedule. Choose your desired time range and days that the code will be active each week.

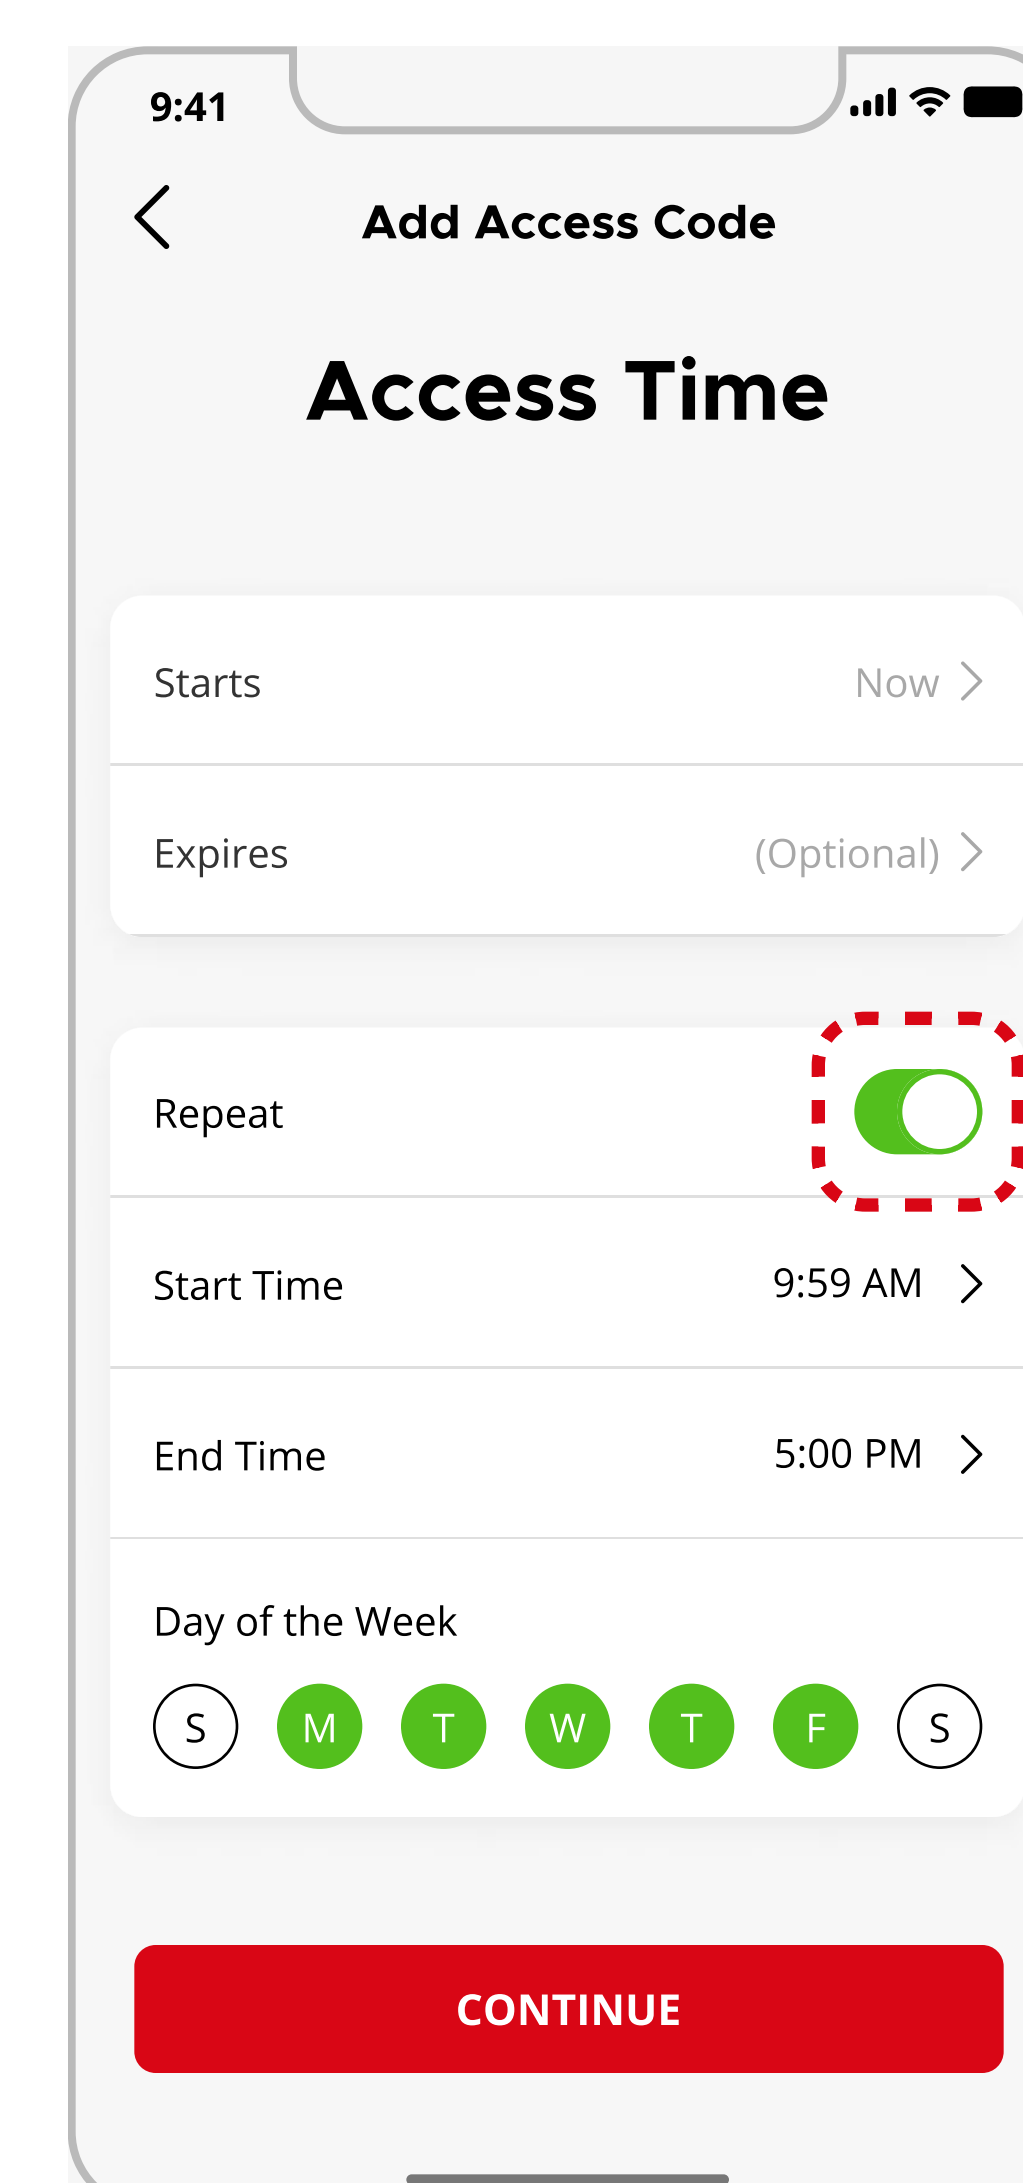


**Note:** You can either set a fixed date and time range or a weekly recurring schedule, but not both.

7 Allow a few moments for the access code to be saved to the lock.

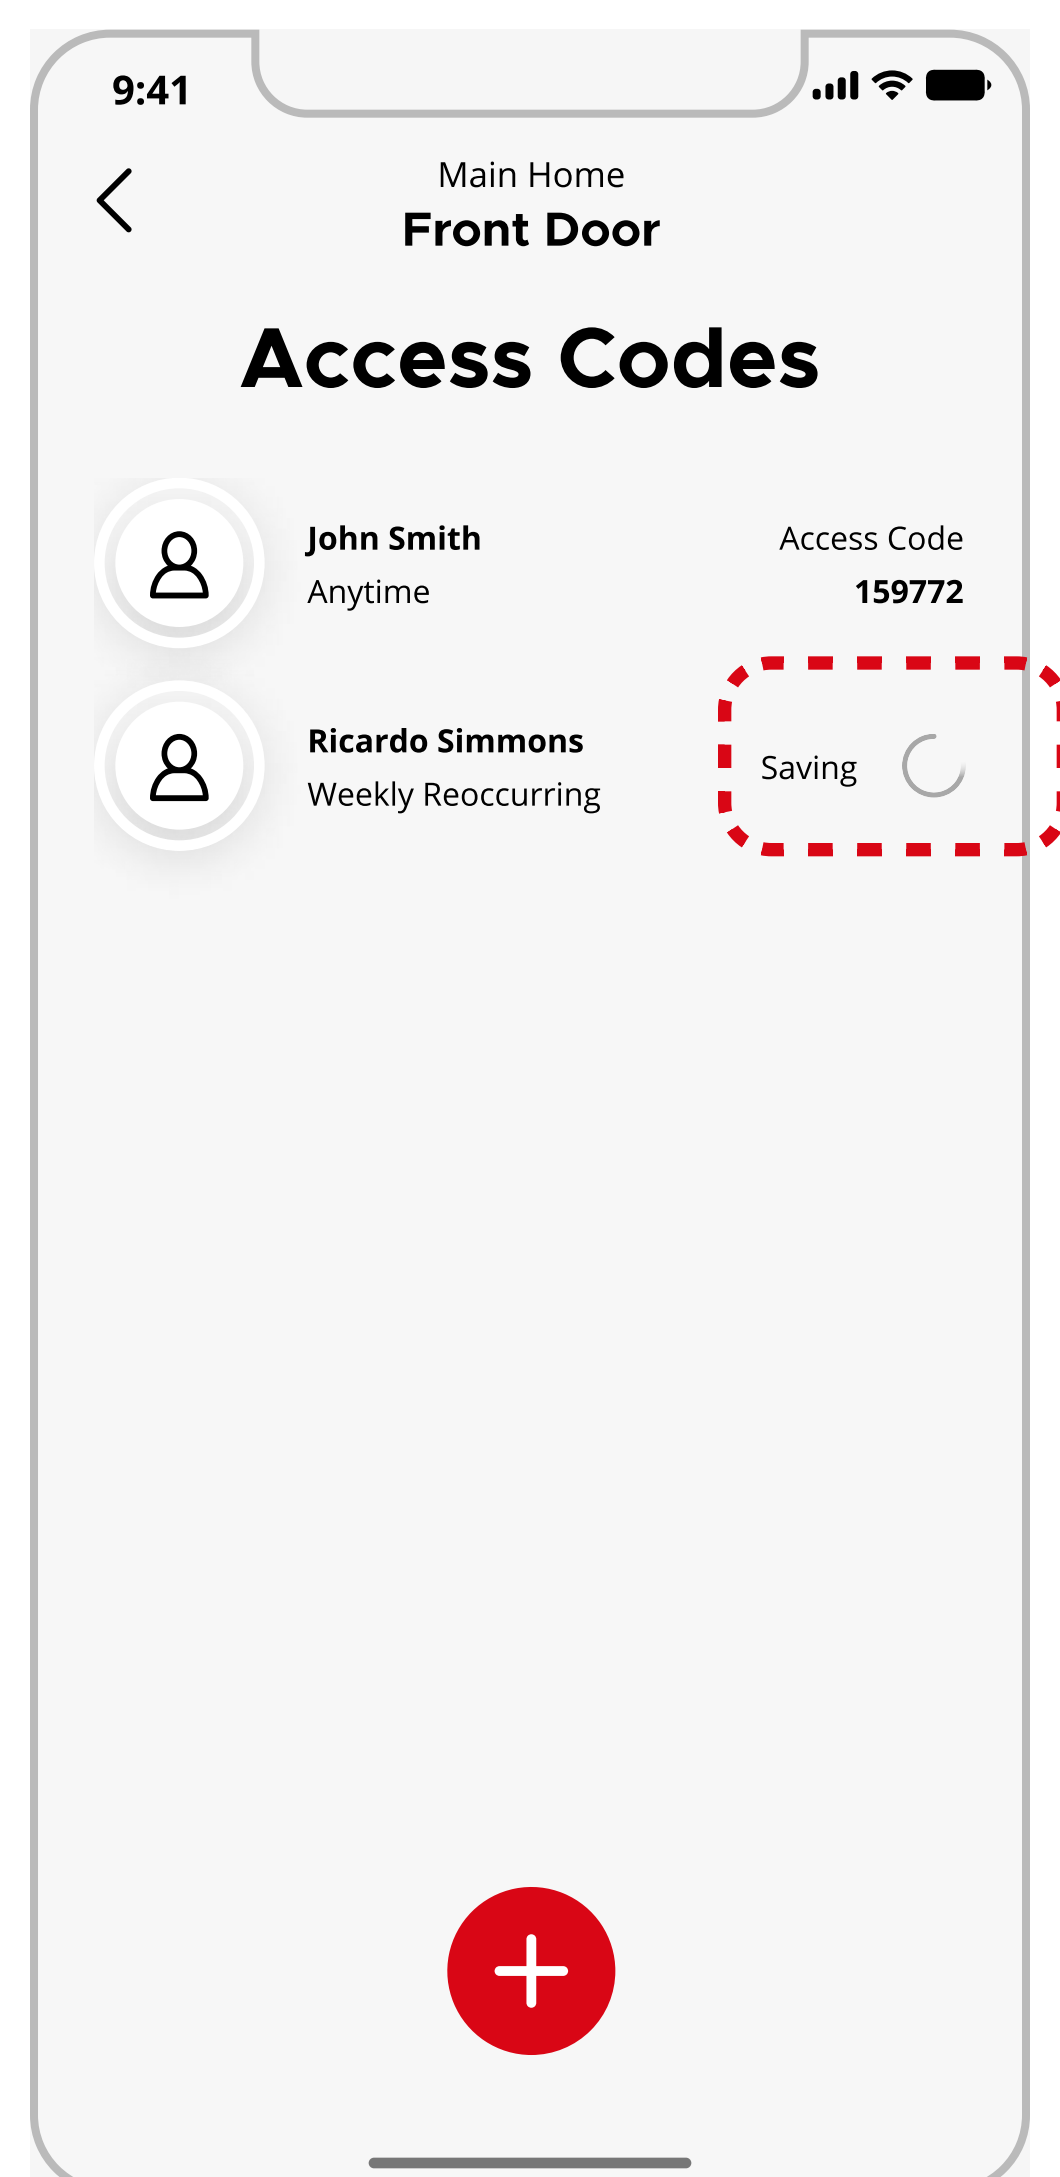

! If the access code does not save successfully:

- Tap the ↺ icon to try again.
- Tap the ✕ icon to cancel.

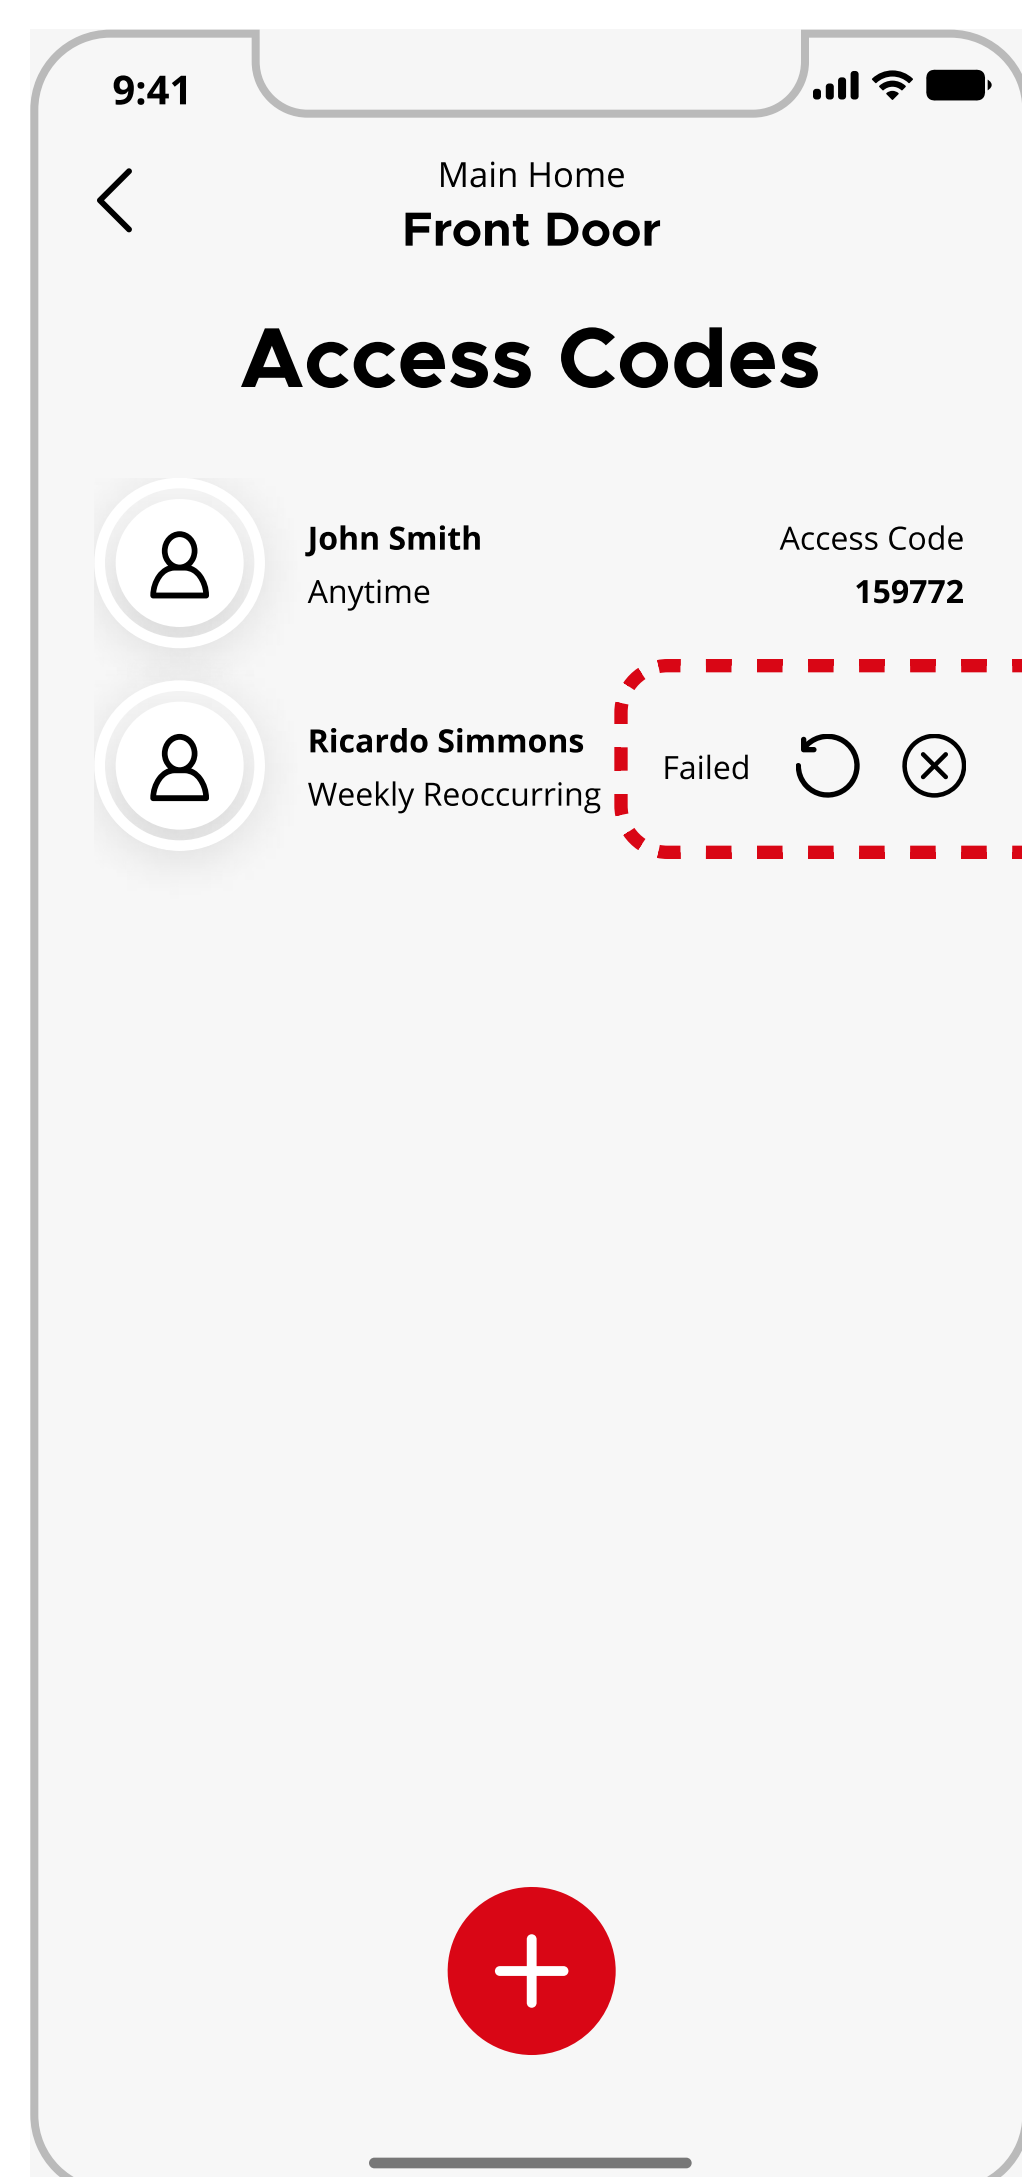

8 Congratulations! You've successfully added a new access code to your lock.

