


1 Go to the main app screen, then tap on  in the bottom right corner.

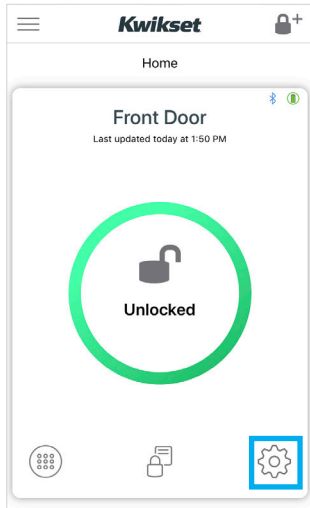

For **Aura locks**, you will need to be within Bluetooth range of the lock to access some features.


Lock Settings	
Setting	Function
Edit Lock Name	Change the name of the lock.
Auto Lock	Disable/enable auto-lock feature that will lock the unlocked door after a time delay.
Lock Sounds	Disable/enable sounds.
LED Status	Disable/enable LED status light.
Secure Screen	Disable/enable Secure Screen which helps prevent fingerprint and code detection on touchscreens.
Paired Smartphones	Remove paired smartphones from the lock.

2 Tap the setting you would like to change and follow the instructions in the chart below to set the parameters.


To **Edit Lock Name**, enter a new name for the lock, then tap “Next” on the virtual keyboard.


Front Door

Locks within the same Home must have unique names.

To disable/enable **Lock Sounds**, tap on  to toggle the setting.

Halo Touchscreen only:

To disable/enable **Secure Screen**, tap on  to toggle the setting.

To remove **Paired Smartphones**, tap on  next to the smartphone device name you would like to remove.


Paired Smartphones

JohnDoeiPhone

DonnieVIPhone

The lock Owner’s smartphone cannot be removed.

Aura Locks only: Once removed, this smartphone will no longer be able to view/control this lock.

To enable/disable **Auto Lock**, tap on  to toggle the setting.

Auto Lock Delay

30 Seconds

1 Minute


3 Minutes

5 Minutes

10 Minutes

To change the time delay, tap on the desired time delay.

At least one Access Code must be programmed in order to enable Auto Lock.

To disable/enable **LED Status**, tap on  to toggle the setting.