




- 1 Tap ☰ in the upper left corner.

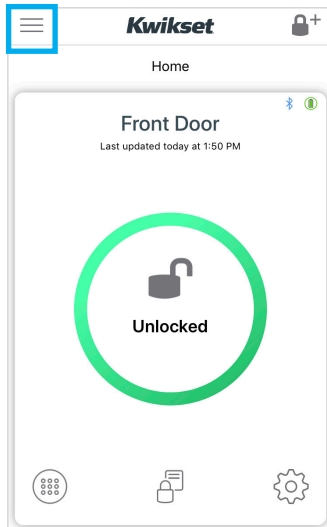

- 2 Tap "Manage."

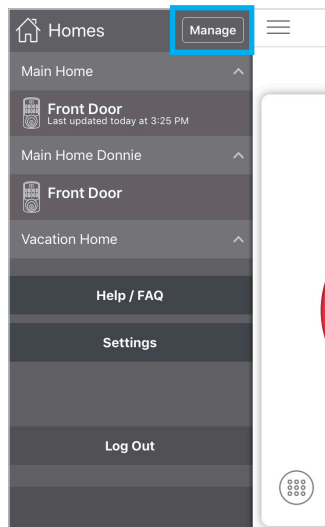

- 3 Tap "Delete Home."

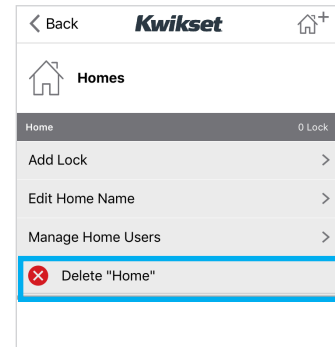

Note: All locks in the Home must first be deleted before the Home can be deleted.