

## Rubbermaid® Butter Dish 3930

Specially designed to store butter, the Butter Dish is made with durable, thick plastic that makes it a strong and long-lasting addition to your kitchen.



### Care & Use

To keep your new containers performing at their best, please read the following:

- Remove label and wash before use.
- This item is made of materials that are safe for normal household dishwashers. Be sure that the item is secured so that it does not come in contact with the dishwasher element to avoid melting.
- Do not use utensils with sharp edges (i.e. knives) in the container, as they could scratch or scuff the container surface.