

**Rubbermaid**®


# reveal™ microfiber spray mop



Thank you for your purchase of the new Rubbermaid® Reveal™ Microfiber Spray Mop

## GETTING STARTED

Note: Please be sure to remove all packaging prior to use.

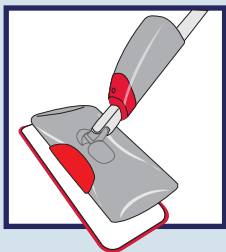


Washable microfiber pad attaches to bottom of mop head with “Velcro-like” strips to hold pad in place during mopping. Each pad can be used for two or more rooms and can be laundered up to 100 times.



The refillable bottle is easy to use. Just unscrew the cap and fill with hot water and 2 teaspoons of your favorite cleaner, or you can just use plain water.

## GETTING STARTED (CONTINUED)

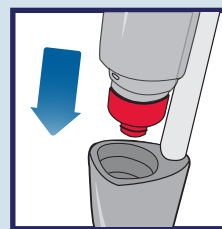

Turn the bottle upside down and snap into the bottle receptacle in the lower assembly. Make sure the flat side of the bottle is facing away from the pole. Pump the trigger 4-5 times for solution to begin spraying.

## USAGE & TIPS

### Microfiber Pads

1. Reusable microfiber pads are machine washable and should be washed with like colors. Pad can be washed up to 100 times!
2. Do **NOT** wash with bleach.
3. Do **NOT** wash with fabric softener as this will impede the microfiber pad performance.
4. Tumble dry air or low heat setting.

### Refillable Bottle

1. Bottle can be cleaned by hand or in dishwasher (top rack only).
2. Bottle is **NOT** to be used for drinking purposes.
3. When switching between removable bottle or cleaners, remove bottle and spray mop trigger 4-5 times to flush the mop of residual cleaner.
4. Remove bottle from mop for storage.