



Assembly Instructions & User's Manual

Assembly Instructions & User's Manual for [INSTANT SUN SHELTER]

Item Number: 990327997/990328152

Model Number: WF-6655

Customer Assistance (spare/replacement parts): 1-877-579-1550

or Email: info@westfieldoutdoors.com

Before Assembly

Remove all components, hardware and tools from the box. Inventory and separate each of the hardware and components included. To report information regarding damaged or missing parts or if you have any questions, please call 1-877-579-1550. Please read all instructions carefully before assembling this product. THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE. Please consider recycling all applicable packaging material. This shelter is perfect for beach, camping, any outdoor use.

Care & Use Instructions

1. Keep all flame and heat sources away from this product fabric. This fabric is not fireproof!
2. Do not erect near an open flame.
3. Your product is not machine washable and not machine dryable.




Assembly Instructions & User's Manual

Assembly


Step 1

Remove the shelter from the carry bag and make sure Hub at top.

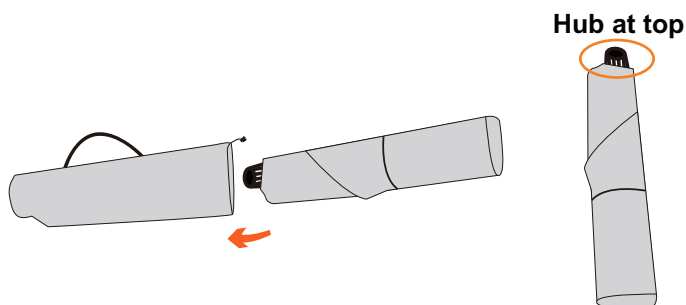


Step 2

Unfold it by spreading all four legs out.

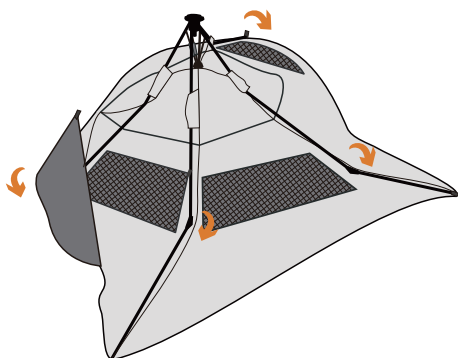


Step 3

Assemble the roof hub by pressing the upper poles together with lower poles.

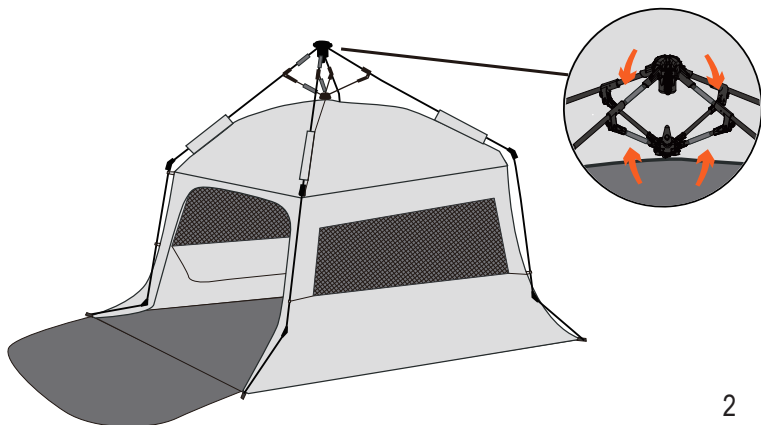

Step 4

Lift up the shelter and ensure all four legs are locked.

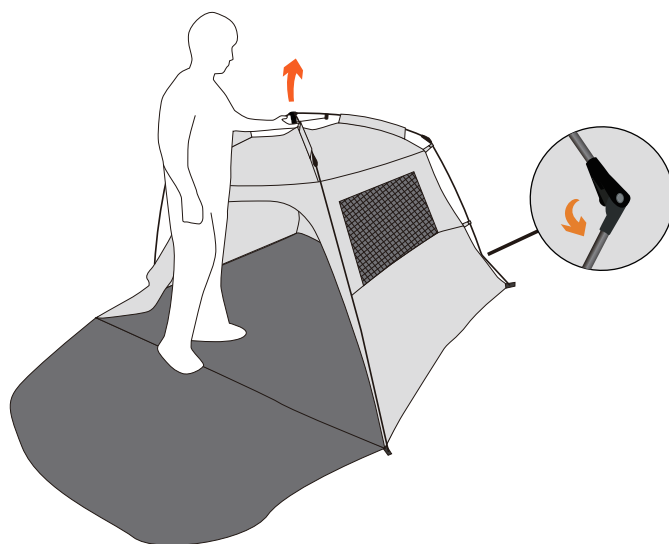

Step 5

Clip the hooks to the leg poles and stake the shelter.





Assembly Instructions & User's Manual

Disassembly

Step 1

Remove all stakes and empty the sandbags.


Step 2

Push the button on the roof hub to unlock the frame.


Step 3

Gently pull out the lower section of the leg poles and then carefully fold all four legs. Finally, collapse the entire shelter and store it in the carry bag.

 **Tip:** Adjust the pole sleeves to ensure all elbows are exposed, and neatly arrange the fabric in order. This will help you roll the shelter more compactly, making it easier to pack into the carry bag.

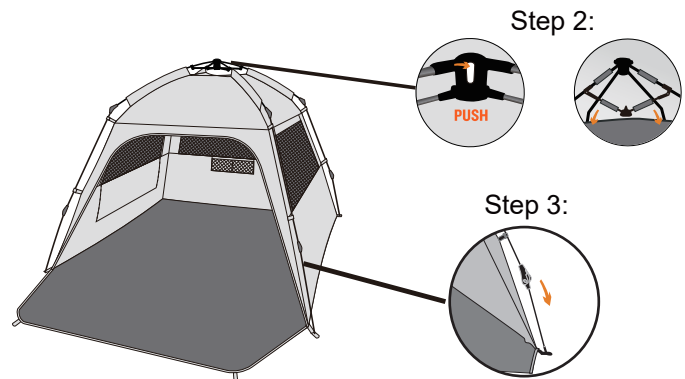

Tip:

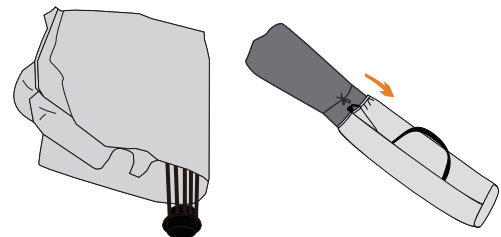

Troubleshooting

PROBLEM	SOLUTION	PROBLEM	SOLUTION
1. CONDENSATION	THIS IS CAUSED BY LOWER TEMPERATURES ON THE OUTSIDE OF THE SHELTER COMBINED WITH BODY HEAT ON THE INSIDE OF THE SHELTER. WHEN THIS OCCURS, AVOID TOUCHING WALLS TO REDUCE CONTACT LEAKAGE. LEAVING THE DOORS AND WINDOWS OPEN WILL REDUCE CONDENSATION OF MOISTURE.	4. FAULTY ZIPPER	ALL OF OUR SHELTERS COME WITH SELF-REPAIRING NYLON COIL ZIPPERS. IF THE ZIPPER SEPARATES, YOU CAN MOVE THE SLIDER TO THE BEGINNING OF THE ZIPPER TAPE AND REWORK THE ZIPPER. LOCAL AWNING AND UPHOLSTERY REPAIR SHOPS MAY BE ABLE TO ASSIST YOU.
2. SEAM LEAKAGE	TO PROTECT AGAINST SEAM LEAKAGE, APPLY A GENEROUS AMOUNT OF SEAM SEALER ON ALL INTERIOR SEAMS.	5. FLOOR CONDENSATION	A GROUND CLOTH UNDER THE SHELTER PREVENTS THE FLOOR FROM FEELING DAMP AND HELPS PROLONG ITS LIFE. THE CLOTH SHOULD BE SMALLER THAN THE SHELTER FLOOR TO PREVENT RAIN FROM RUNNING UNDER THE SHELTER. APPLICABLE ONLY TO SHELTER WITH FLOOR.
3. MILDEW	TO AVOID MILDEW, NEVER PUT YOUR SHELTER AWAY WET OR DAMP. HOWEVER, IF MILDEW OCCURS, USE A SOFT BRISTLE BRUSH OR SPONGE WITH MILD DISH WASHING SOAP OR STAIN REMOVER TO CLEAN. LET THE SHELTER DRY IN THE SUNLIGHT AND APPLY SEAM SEALER COMPOUND ON INSIDE SEAMS.	6. REMOVING STAKES	STAKE SHOULD BE PULLED WITH ANOTHER STAKE, HAMMER OR STAKE PULLER, BUT NEVER BY PULLING ON THE SHELTER. AVOID STAKING SHELTER SO TIGHT THAT IT STRETCHES THE FABRIC. OVERSTRETCHING MAY CAUSE STAKE LOOPS TO TEAR.

Storage Instructions

1. Do not store your product while wet.
2. When not in use, please store your item in a cool, dry place away from sunlight.
3. Exposing your item to excessive heat or humidity may damage your item.



Assembly Instructions & User's Manual

Safety and Warranty Information

IMPORTANT NOTICE: You may compromise the original FIRE RETARDENCY and WATER REPELLENCY protective coatings when you apply sprays or other chemical treatments to your tent.

This fabric has been factory-treated and is HIGHLY WATER-REPELLANT; however, it is NOT WATERPROOF. All tents can experience seam leakage during wet weather. If you desire additional moisture protection, use a seam sealing compound ONLY; be sure to follow the manufacturer's directions. We recommend sealing your tent during your initial setup and prior to each camping season. Seam Sealer Compounds can be purchased at your local camping products retailer. For more information, please refer to our website, www.westfieldoutdoor.com or contact our Service Representatives via info@westfieldoutdoors.com



DO NOT SPRAY!



THIS FABRIC IS NOT WATERPROOF!

Your product's fabric is a synthetic material that has been treated and is not only highly-resistant to the sun's Ultraviolet (UV) light but also highly water-repellant in light rain conditions. Insure a successful and enjoyable camping experience by heeding the following tips:

- Keep objects from touching the inside, as objects will "draw in" moisture at the point of contact.
- "Prep" your product where necessary with a recommended seam sealing compound – refer to the seam sealing information in DO NOT SPRAY section of this owner manual.

Important: Prolonged exposure to sunlight that causes UV damage and/or the use of non-recommended foreign substances on synthetic material may damage the fabric properties and IS NOT COVERED BY THE LIMITED WARRANTY.



STRUCTURE OUR RECREATIONAL PRODUCTS ARE CONSTRUCTED USING CUSTOM SPECIFICATIONS. THIS ITEM IS NOT INTENDED FOR USE AS A PERMANENT STRUCTURE. However, they are not engineered for extreme weather, climates or environments. Modification, abuse, and inclement or "surprise" weather conditions may make additional precautions necessary. Here are some tips should you find yourself preparing for adverse conditions:

 Make sure any guy lines/ropes on your structure are well-secured in the ground and lines/ropes are sufficiently "taught" between structure and stake; adjust where needed. Facing periods of heavy winds? Secure tent loops and guy lines/ropes with extra stakes if necessary.

 Check the corners of the roof fabric and make sure roofline is properly positioned on framing. Use ALL provided methods of securing your fabric to its framing: nylon fastener strips, ties, and guy lines/ropes where located. Storms or steady rains may collect in water pockets on the roofline. Water adds weight, and weight weakens the overall structure. Avoid possible collapse by maintaining a watchful eye and removing any water accumulation that may occur.



FIRE

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT FABRIC. THIS FABRIC IS NOT FIREPROOF! It is made with flame resistant fabric, which meets CPAI-84 specifications. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

Do NOT ERECT NEAR an open flame. NEVER use any fuel burning, oxygen consuming devices, or any device that produces fumes – including, but not limited to: cooking stoves, lanterns, candles, hibachis, or heaters – in or around your product. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.



CARE & STORAGE

Your product is NOT machine washable. Your product is NOT machine dryable.

One of the easiest ways to damage your product is storing it while wet. If you must close camp in the rain, follow these guidelines carefully:

- As Soon As Possible: Open your product and ensure that every area of fabric is clean and completely dry before rolling up for storage.
- If necessary, hang product outside or loosely drape over a ladder in your garage or spare room for a few days, turning it inside and out to prevent trapping pockets of water or debris.
- Use a soft brush to wipe away surface dirt.

To clean your product: Hand wash using a mild dishwashing soap and soft bristle brush, then allow the fabric to completely air dry.

Don't neglect the frame: Wipe down all parts – steel, plastic, and fiberglass – before putting away for next season's use. Salts from ocean air can and do affect damage if not dealt with as quickly as possible.

Storing a wet fabric for as little as 24 hours in warm weather is likely to cause fabric to mildew. Once mildew sets in, the stains are permanent. Stains cannot be removed without potential harm to the fabric's coatings; chemicals or cleaning agents used to remove dirt and stains may irreversibly harm the fabric.

Salts, mildew and other causes and subsequent effects are NOT covered under the limited warranty.

Limited Warranty

This product is covered by the Sam's Club Member Satisfaction Guarantee. Please visit samsclub.com for more information.

Distributed by Sam's West Inc.

2101 SE Simple Savings Dr.

Bentonville, Arkansas 72716-0745

Made in China

Need Assistance? Visit us at: samsclub.com/membersmarkhelp