 


USE AND CARE GUIDE

SOLAR METAL PATH LIGHT

TOOLS REQUIRED



Phillips Screwdriver

PACKAGE CONTENTS



A – Solar top cap x 2



B – Lamp housing x 2



C – Ground stake x 2



D - Battery (Pre-assembled) x 2

Installation & Operation

- ❑ Insert the ground stake (C) firmly into the ground at the installation location. If the ground is too hard, soak the ground with water to soften the ground or drive a metal rod or screwdriver into the ground to create a hole for the ground stake (C).
- ❑ Connect the lamp housing (B) to the ground stake (C).
- ❑ Pull out the solar top cap (A) from the lamp housing (B).
- ❑ Your solar light is equipped with an ON/OFF switch on the back plate of the solar top cap (A). Prior to use, set the switch to the ON position. Replace the solar top cap (A) back to lamp housing (B) and allow it to charge for a full sunny day.
- ❑ Your solar light is ready to use, it will automatically turn on at dusk and turn off at dawn.



 
IMPORTANT: Ensure the mounting location for your solar light allows the solar panel to receive direct sunlight. Do not locate the product in shaded areas as this will significantly reduce performance.



NOTE: The solar light is equipped with a photosensor that turns the unit on at dusk and off at dawn. Ambient light can affect the operation of the photosensor.



NOTE: Do not use a hammer. If the ground is hard, use water to soften.

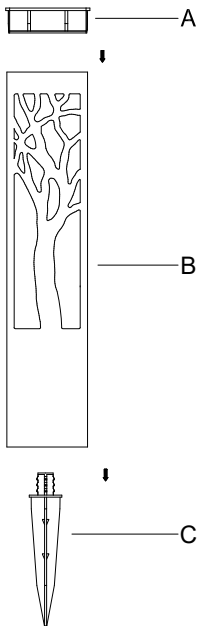

Safety Information



WARNING: Your solar light may not function in temperatures below -4°F (-20°C) or above 140°F (60°C).



CAUTION: Use a rechargeable battery only. Recycle or dispose of batteries properly.



CAUTION: Do not open, short circuit, or mutilate batteries as injury may occur.

Maintenance

Replacing the battery



 
IMPORTANT: Dispose of the battery in accordance with local, state, and federal regulations.



IMPORTANT: When storing any solar product for an extended period of time, remove the battery. Storing any solar product without regular recharge or removal of battery could cause permanent damage to the rechargeable battery.



NOTE: Use one AA size, 600mAh, 1.2V Nickel Metal Hydride rechargeable battery. For best performance, replace with one Nickel Metal Hydride rechargeable battery annually.

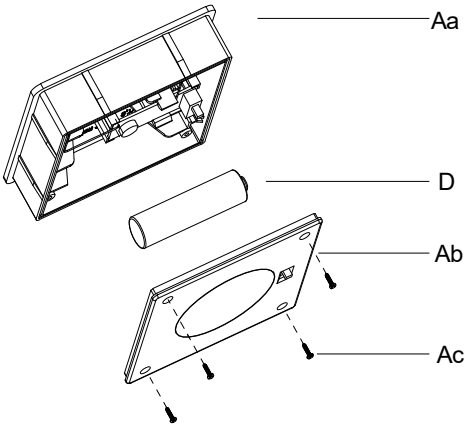

- ☐ Unscrew the back plate (Ab) from the solar top cap (Aa).
- ☐ Remove the old battery (D) from the battery compartment located on the solar top cap (Aa). Replace with a new Nickel Metal Hydride rechargeable battery – The recommended replacement battery capacity should be 600mAh above.
- ☐ Replace the back plate (Ab) with the four screws (Ac).

Troubleshooting

Problem	Possible Cause	Solution
The nightly run time is shorter.	The battery is not fully charged.	Ensure the solar light is located in an area where it can receive the maximum amount of full, direct sunlight every day. Keeping the solar panel clean is equally important to ensure the maximum charging performance.
	The battery is reaching the end of its useful life.	Replace the old battery with a new 1.2V Ni-MH rechargeable battery.
The solar light does not turn on at night.	The solar light is set to OFF.	Your solar light is equipped with an ON/OFF switch on the back plate of solar top cap. The switch must be set to ON position prior to use.
	The solar light is installed close to other light sources, which may keep the solar light from turning on at night automatically.	Relocate the fixture or eliminate other light sources if use for outdoor.

Care and Cleaning

- ☐ The solar panel should be cleaned periodically with a damp cloth to help maintain optimum performance.
- ☐ Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Warranty

ONE YEAR LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this product to be free of defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty only applies to the original consumer purchaser and only to products used in normal use and service. The manufacturer’s only obligation and your exclusive remedy, is the repair or replacement of the product at the manufacturer’s discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alteration, neglect, or mishandling. Proof of purchase and evidence of manufacturer’s date coding must accompany all warranty claims. Manufacturer’s date coding is printed and adhered to each product.

WHAT IS NOT COVERED

This warranty does not apply to products that are found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty does not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation. Batteries supplied with this product are not included in this warranty. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. This warranty does not cover consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of the product.

Contact the Customer Service Team at CustomerService@Creative-prc.us