



Assembly Instructions & User's Manual

Member's Mark Oscillating Lawn Sprinkler

Item Number: 990458171

Model Number: LY-5521AP



For Inquiries, Spare parts, or Replacement parts:

- **Sam's Club Customer Assistance: 1-888-746-7726**
- **Supplier Contact information: hugedawn@hugedawn.com**

Before Assembly

Remove all components, hardware and tools from the box. Inventory and separate each of the hardware and components included. To report information regarding damaged or missing parts or if you have any questions, please contact the Customer Assistance listed above. Please read all instructions carefully before assembling this product. THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

This oscillating sprinkler is designed for outdoor use to water lawns, gardens, and landscaped areas. It attaches to a standard garden hose and provides adjustable spray coverage.



Assembly Instructions & User's Manual

Components and Features

- A.** Water Flow Control Knob
- B.** Adjustable Coverage Tabs
- C.** Water Inlet
- D.** End Nozzle On/Off Switches (3 per end, 6 total)
- E.** Sprinkler Nozzles
- F.** End Plug with Nozzle Cleaning Needle



Assembly Instructions & User's Manual

Water Inlet



Note 1:

Connect the water hose to **Water Inlet (C)** and tighten firmly. (Ensure the filter washer is properly installed).

Water Flow Control Knob



Note 2:

Turn the **Water Flow Control Knob (A)** to adjust water flow.


Note 3:

Water Flow Control Knob position:

Minimum water flow - Maximum water flow.



Adjustable Coverage Tabs

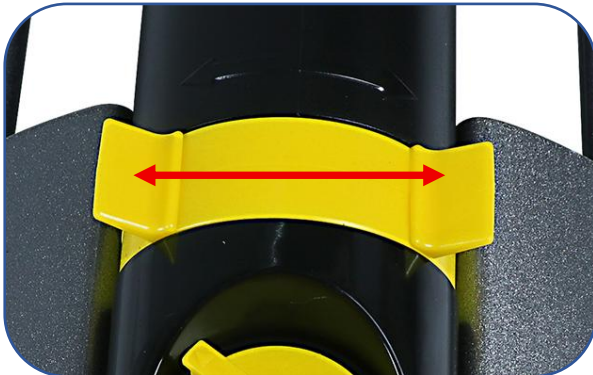




Note 4:

The **Adjustable Coverage Tabs (B)** shown in the fully open position.



Note 5:

Slide the **Adjustable Coverage Tabs (B)** to adjust coverage. Choose Full, Narrow, Left, or Right coverage.

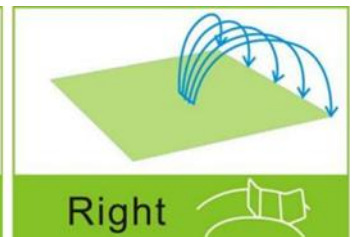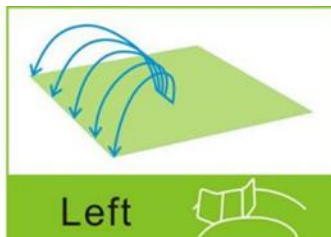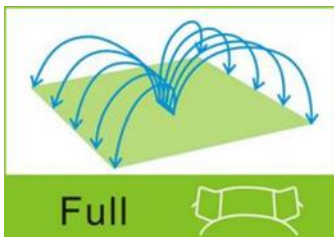



Assembly Instructions & User's Manual

Note 6:

Use the three **End Nozzle On/Off Switches (D)** at each end to adjust coverage width.

All three switches shown in the "OFF" positions.



All three switches shown in the "ON" positions.





End Plug with Nozzle Cleaning Needle



Note 7:

Remove the **End Plug with Nozzle Cleaning Needle (F)** to clear any debris build-up.

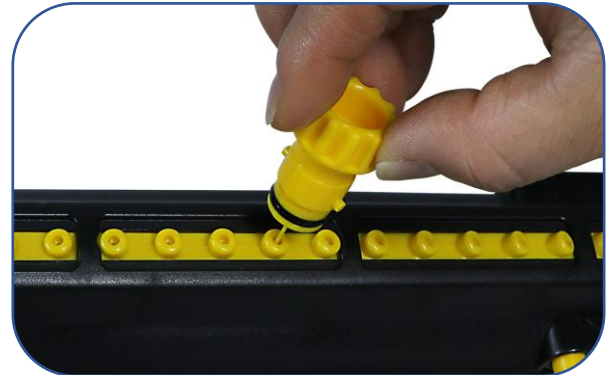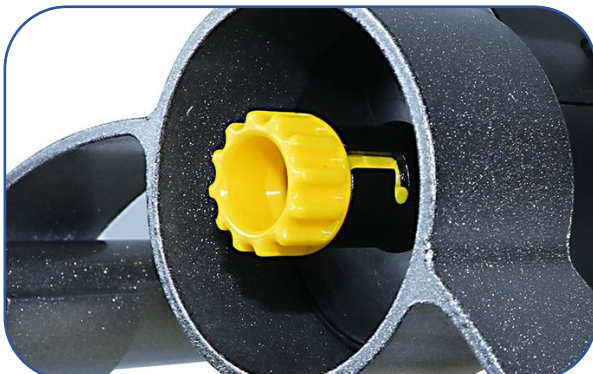

Note 8:

If the **Sprinkler Nozzles (E)** become clogged, use the Nozzle Cleaning Needle on the End Plug to clear the clog.

Note 9:

After cleaning, reinstall the **End Plug with Nozzle Cleaning Needle (F)** securely.



Assembly Instructions & User's Manual

Troubleshooting

Leaking at Water Inlet:

- Make sure the filter washer is in place.
- Tighten the hose firmly to the Water Inlet.
- Check the hose connection for damage.

Low Water Pressure or Short Spray Distance:

- Make sure the faucet is fully open.
- Open the Water Flow Control Knob.
- Make sure the hose is not kinked or bent.
- Make sure the water pressure is adequate.

Sprinkler Does Not Oscillate:

- Make sure the water pressure is high enough.
- Check that the hose is not kinked or bent.
- Make sure the Sprinkler Nozzles are not clogged.

Uneven Spray Pattern:

- Check the Adjustable Coverage Tabs and make sure they are set as desired.
- Make sure the End Nozzle On/Off Switches are set evenly on both ends.
- Clean any clogged Sprinkler Nozzles with the Nozzle Cleaning Needle on the End Plug.

Water Sprays in the Wrong Area:

- Adjust the Adjustable Coverage Tabs.
- Adjust the End Nozzle On/Off Switches to reduce spray width.

Clogged Sprinkler Nozzles:

- Remove the End Plug with Nozzle Cleaning Needle.
- Use the Nozzle Cleaning Needle to clear clogged Sprinkler Nozzles.
- Reinstall the End Plug with Nozzle Cleaning Needle securely.



Assembly Instructions & User's Manual

Care & Use Instructions

For outdoor use with cold water only. Do not spray near electrical connections.

Storage Instructions

Drain the sprinkler after each use. Store indoors when not in use. Do not allow water to freeze inside the sprinkler.

Technical Data

Nozzle Count: 21

Maximum Pressure: 100 PSI

Maximum Coverage: 3,500 sq. ft.

Materials: Metal, Plastic

Please note: The maximum watering coverage of 3,500 square feet is based on testing at 80 PSI using a 3/4-inch PVC water hose. Actual coverage may vary depending on water pressure, hose diameter, and water flow conditions. Because this sprinkler offers many adjustment options, performance may vary based on your setup.

Safety and Warranty Information

Limited Warranty

This product is covered by the Sam's Club Member Satisfaction Guarantee. Please visit samsclub.com for more information.

Distributed by Sam's West Inc.
2101 SE Simple Savings Dr.
Bentonville, Arkansas 72716-0745
Made in China