



# INSTALLATION AND MAINTENANCE INSTRUCTIONS

## RPHPV715 SERIES UNITS

### RESIDENTIAL PACKAGED UNITS

Air Conditioners and Heat Pumps

508688-01

08/2025

**THIS MANUAL MUST BE LEFT WITH THE HOMEOWNER FOR FUTURE REFERENCE**

#### **⚠ WARNING**

Installation and servicing of air conditioning equipment can be hazardous due to internal refrigerant pressure and live electrical components. Only trained and qualified service personnel should install or service this equipment. Installation and service performed by unqualified persons can result in property damage, personal injury, or death.

#### **⚠ WARNING**

For your safety, do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. Such actions could result in property damage, personal injury, or death.

This unit is designed for use with R-454B refrigerant only.



### Table of Contents

|                                      |    |
|--------------------------------------|----|
| Unit Dimensions .....                | 5  |
| Roof Curb Dimensions .....           | 7  |
| Adjustable Roof Curb Dimensions..... | 9  |
| Installation .....                   | 12 |
| Electrical Wiring.....               | 15 |
| Duct System .....                    | 16 |
| Condensate Drain.....                | 17 |
| Sequence of Operation.....           | 18 |
| Defrost System.....                  | 20 |
| System Performance .....             | 23 |
| Maintenance .....                    | 23 |
| Refrigerant Detection System.....    | 27 |
| Wiring Diagrams .....                | 30 |
| Decommissioning .....                | 31 |

**Allied Air Enterprises LLC**  
215 Metropolitan Drive  
West Columbia, SC 29170



(P) 508688-01

#### **⚠ CAUTION**

The installation of this appliance must conform to the requirements of the National Fire Protection Association; the National Electrical Code, ANSI/NFPA No. 70 (latest edition) in the United States; the Canadian Electrical Code Part 1, CSA 22.1 (latest edition) in Canada; and any state or provincial laws or local ordinances. Local authorities having jurisdiction should be consulted before installation is made. Such applicable regulations or requirements take precedence over the general instructions in this manual.

**Save these instructions for future reference**

**⚠ WARNING**

Maximum altitude of application is 10,000 feet (3,200 m) above sea level.

**⚠ WARNING**

Every working procedure that affects safety means shall only be carried out by competent persons. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

**⚠ CAUTION**

Leak Detection System installed. Unit must be powered except for service.

**⚠ WARNING**

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional HVAC installer or equivalent, service agency, or the gas supplier.

**⚠ CAUTION**

Servicing shall be performed only as recommended by the manufacturer.

**⚠ IMPORTANT**

The Clean Air Act of 1990 bans the intentional venting of refrigerant (CFCs, HCFCs and HFCs) as of July 1, 1992. Approved methods of recovery, recycling or reclaiming must be followed. Fines and/or incarceration may be levied for noncompliance.

**⚠ WARNING**

Ducts connected to an appliance shall not contain a potential ignition source.

**⚠ WARNING**

For appliances using A2L refrigerants connected via an air duct system to one or more rooms, only auxiliary devices approved by the appliance manufacturer or declared suitable with the refrigerant shall be installed in connecting ductwork.

**⚠ WARNING**

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance, or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.

**⚠ WARNING**

Auxiliary devices which may be a potential ignition source shall not be installed in the duct work. Examples of such potential ignition sources are hot surfaces with a temperature exceeding 700°C and electric switching devices.

**⚠ WARNING**

For duct connected appliances, false ceilings or drop ceilings may be used as a return air plenum if a REFRIGERANT DETECTION SYSTEM is provided in the appliance and any external connections are also provided with a sensor immediately below the return air plenum duct joint.

**⚠ CAUTION**

Any service personnel installing, decommissioning, or performing maintenance on the unit must be properly trained with A2L refrigerants.

**⚠ IMPORTANT**

Verify cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

**⚠ IMPORTANT**

- Ensure that the REFRIGERATING SYSTEM is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the REFRIGERATING SYSTEM. Prior to recharging the system, it shall be pressure tested with the appropriate purging gas. The system shall be leak tested on completion of charging, but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

**⚠ IMPORTANT**

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i. e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt. The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders. If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

**⚠ IMPORTANT**

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.

**⚠ IMPORTANT**

When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed and, since flammability is a consideration, procedures such as safely remove refrigerant following local and national regulations, purging the circuit with inert gas, evacuating (optional for A2L), purging with inert gas (optional for A2L), or opening the circuit by cutting or brazing be adhered to. The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L). This process shall be repeated until no refrigerant is within the system (optional for A2L). When the final oxygen free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and that ventilation is available.

**NOTE** – R454B is an A2L refrigerant. The system installation must meet the following parameters based upon total refrigerant charge. *T<sub>Amin</sub>* (Total minimum conditioned area) is the minimum allowable conditioned area based upon the total system charge at sea level. Values must be multiplied by altitude adjustment factor at installed altitude.

See tables below

|   |                    |      |     |     |      |      |
|---|--------------------|------|-----|-----|------|------|
| <b>ETIPR.....<br/>108173-02</b>   | <b>charge (lb)</b> | <4   | 4   | 6   | 8    | 10   |
|   | <b>charge (kg)</b> | <1.8 | 1.8 | 2.7 | 3.6  | 4.5  |
| <b>Minimum Conditioned Area (ft<sup>2</sup>)</b>  |                    | N/A* | 60  | 90  | 120  | 150  |
| <b>Minimum Conditioned Area (m<sup>2</sup>)</b>   |                    | N/A* | 5.6 | 8.4 | 11.2 | 14.0 |
| *Units with refrigerant charge below 4 lb.(1.8 kg) do not require a minimum conditioned room area.<br>-Units supply duct must be connected via air duct system to one or more rooms, totaling minimum conditioned area. |                    |      |     |     |      |      |
| <b>Table 1. Minimum conditioned area</b>  |                    |      |     |     |      |      |

**NOTE** – Multiply values in *T<sub>Amin</sub>* table by the Altitude Adjustment Factors to correct *T<sub>Amin</sub>* based on installed altitude.

**Altitude Adjustment Factor**


|                      |      |      |      |      |      |      |      |      |       |
|----------------------|------|------|------|------|------|------|------|------|-------|
| <b>Altitude (m)</b>  | 0    | 200  | 400  | 600  | 800  | 1000 | 1200 | 1400 | 1600  |
| <b>Altitude (ft)</b> | 0    | 660  | 1310 | 1970 | 2620 | 3280 | 3940 | 4590 | 5250  |
| <b>Adj. Factor</b>   | 1    | 1    | 1    | 1    | 1.02 | 1.05 | 1.04 | 1.1  | 1.12  |
| <b>Altitude (m)</b>  | 1600 | 1800 | 2000 | 2200 | 2400 | 2600 | 2800 | 3000 | 3200  |
| <b>Altitude (ft)</b> | 5250 | 5910 | 6560 | 7220 | 7870 | 8530 | 9190 | 9840 | 10500 |
| <b>Adj. Factor</b>   | 1.12 | 1.15 | 1.18 | 1.21 | 1.25 | 1.28 | 1.32 | 1.36 | 1.4   |

**Qmin Table**



| <b>Refrigerant Charge lb (kg)</b> | <b>CFM Required</b> | <b>Refrigerant Charge lb (kg)</b> | <b>CFM Required</b> |
|-----------------------------------|---------------------|-----------------------------------|---------------------|
| 5 (2.3)                           | 135                 | 18 (8.1)                          | 487                 |
| 6 (2.7)                           | 162                 | 19 (8.6)                          | 514                 |
| 7 (3.2)                           | 189                 | 20 (9.1)                          | 541                 |
| 8 (3.6)                           | 216                 | 21 (9.5)                          | 568                 |
| 9 (4.1)                           | 244                 | 22 (10)                           | 595                 |
| 10 (4.5)                          | 271                 | 23 (10.4)                         | 622                 |
| 11 (5)                            | 298                 | 24 (10.9)                         | 649                 |
| 12 (5.4)                          | 325                 | 25 (11.3)                         | 676                 |
| 13 (5.9)                          | 352                 | 26 (11.7)                         | 704                 |
| 14 (6.4)                          | 379                 | 27 (12.2)                         | 731                 |
| 15 (6.8)                          | 406                 | 28 (12.7)                         | 758                 |
| 16 (7.3)                          | 433                 | 29 (13.2)                         | 785                 |
| 17 (7.7)                          | 460                 | 30 (13.6)                         | 812                 |

**NOTE** – *Qmin* minimum airflow requirement for refrigerant leak mitigation.



# Unit Dimensions (Inches) - Small Base Air Conditioners & Heat Pumps

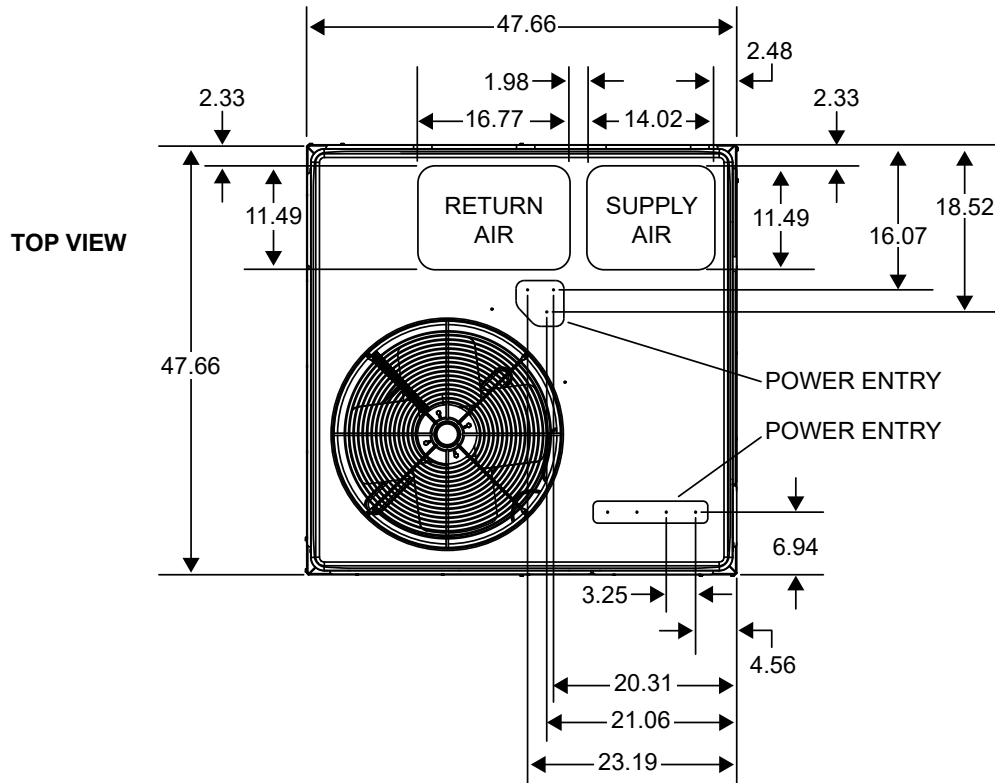


**SIDE VIEWS**

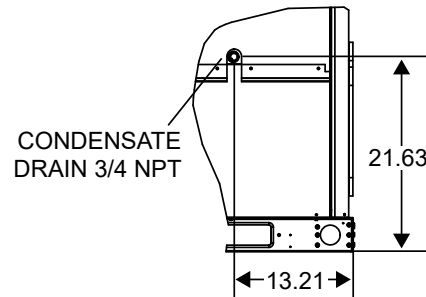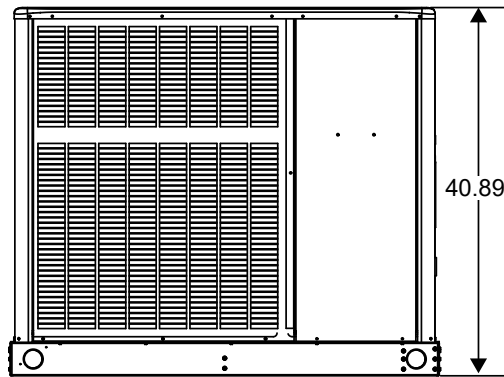





TYPICAL DRAIN LOCATION

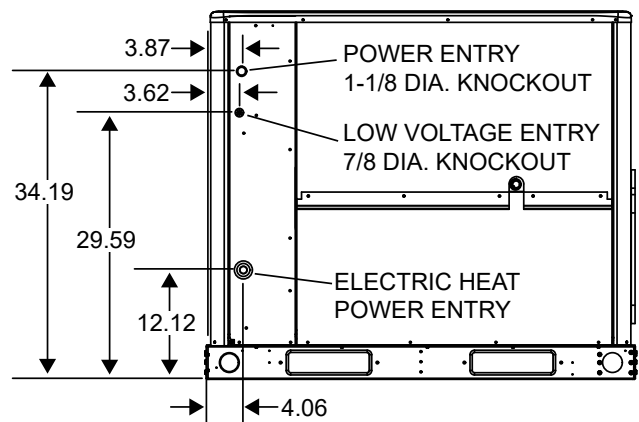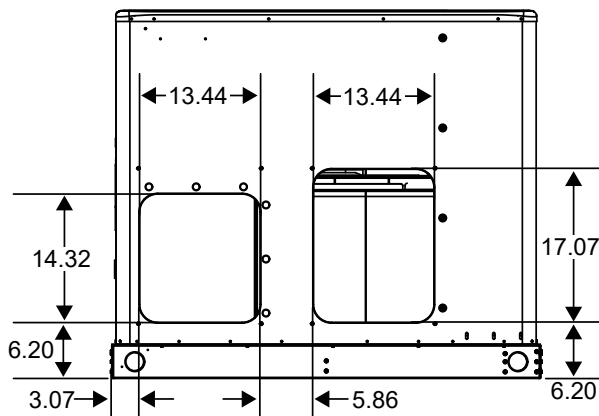


# Unit Dimensions (Inches) - Large Base Air Conditioners & Heat Pumps

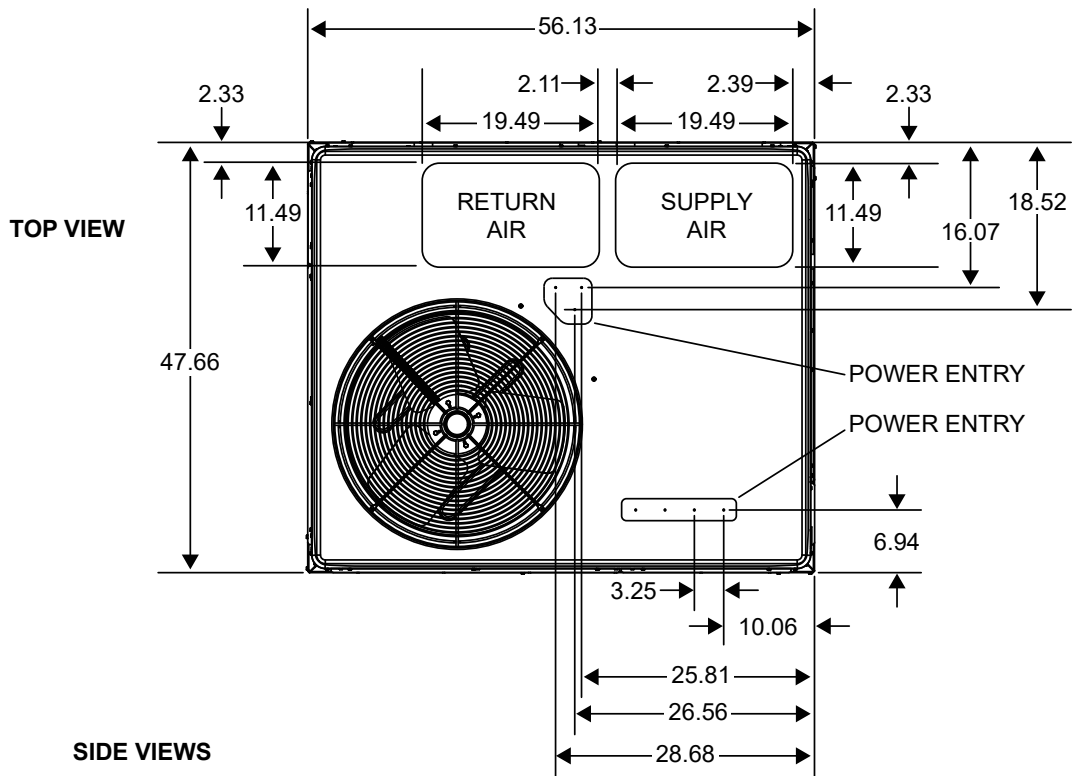

**SIDE VIEWS**

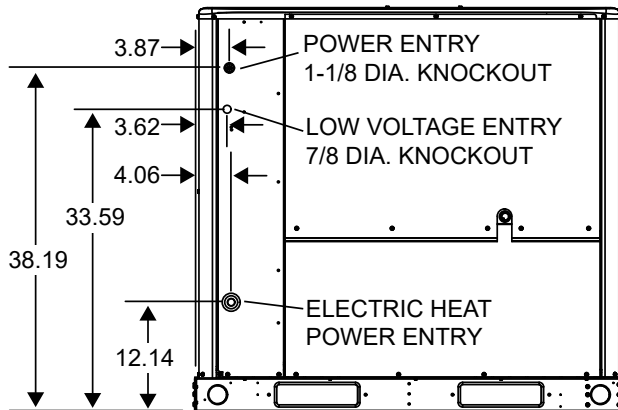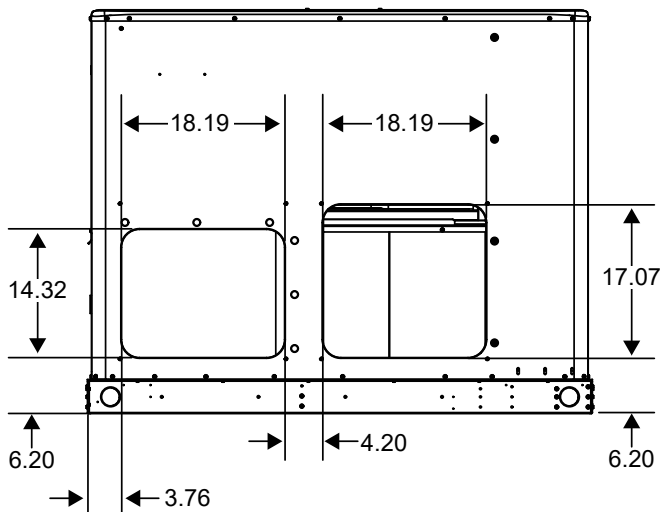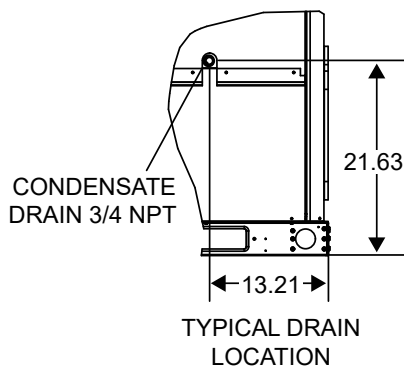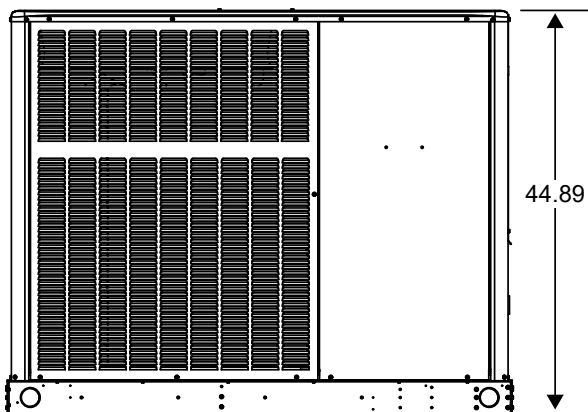


## Roof Curb Dimensions (Inches (mm)) - Small Base Air Conditioners & Heat Pumps

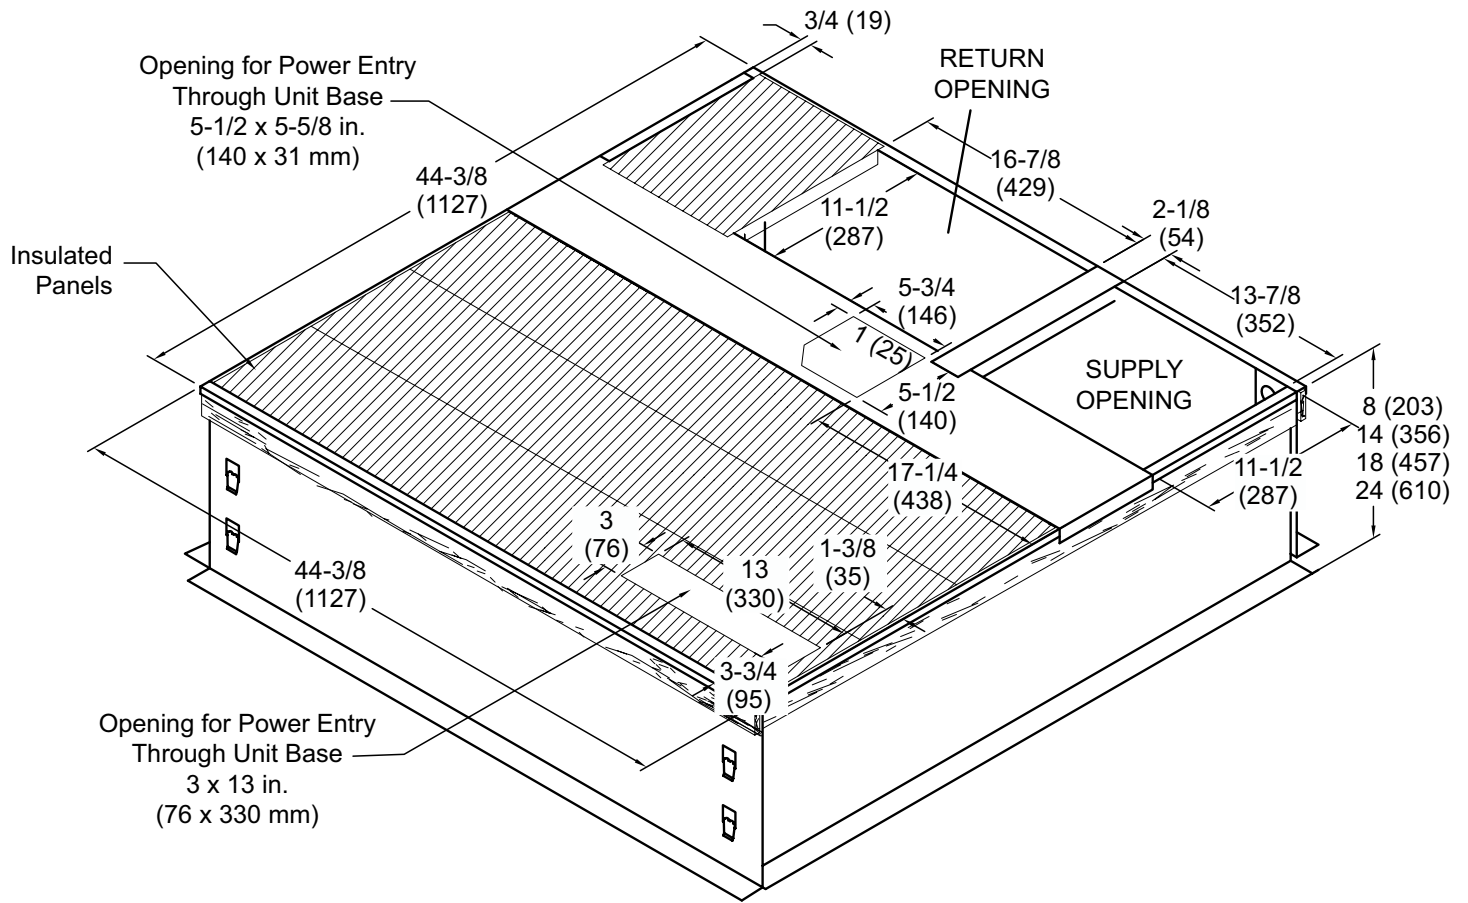

NOTE - Roof deck may be omitted within confines of curb.



# Roof Curb Dimensions (Inches (mm)) - Large Base Air Conditioners & Heat Pumps

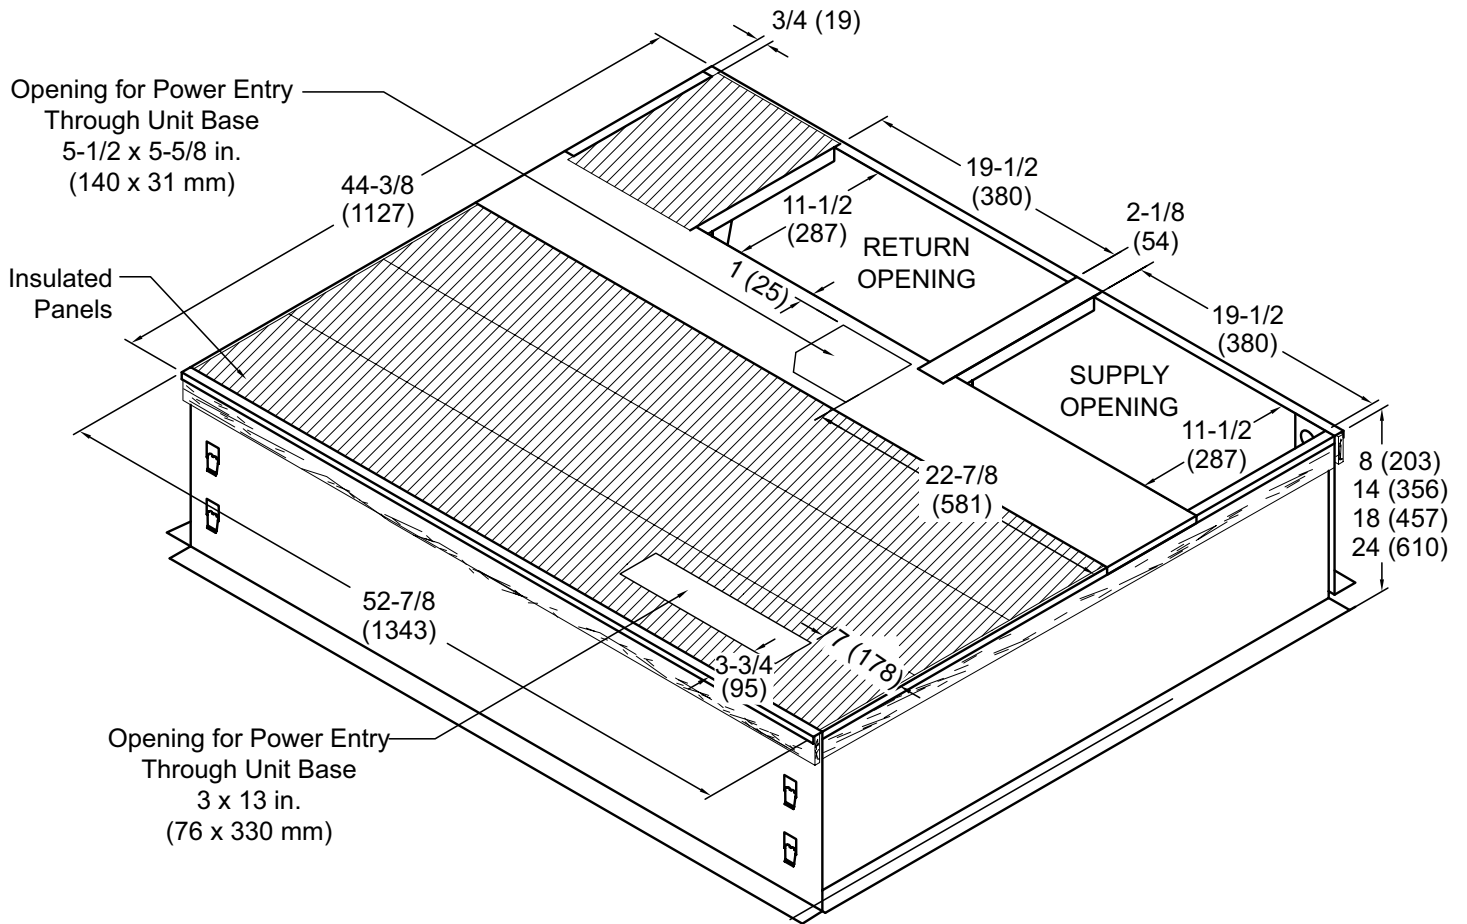


NOTE - Roof deck may be omitted within confines of curb.



# Adjustable Roof Curb Dimensions (Inches) - Small Base Air Conditioners & Heat Pumps (Knock-Down Style)

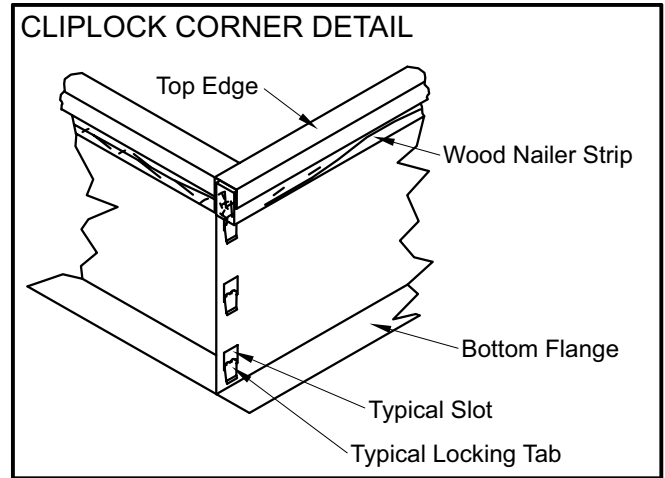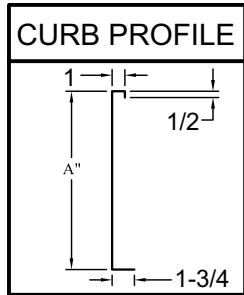


NOTE: See Cliplock 1000 installation instructions for complete assembly and installation procedures and requirements.


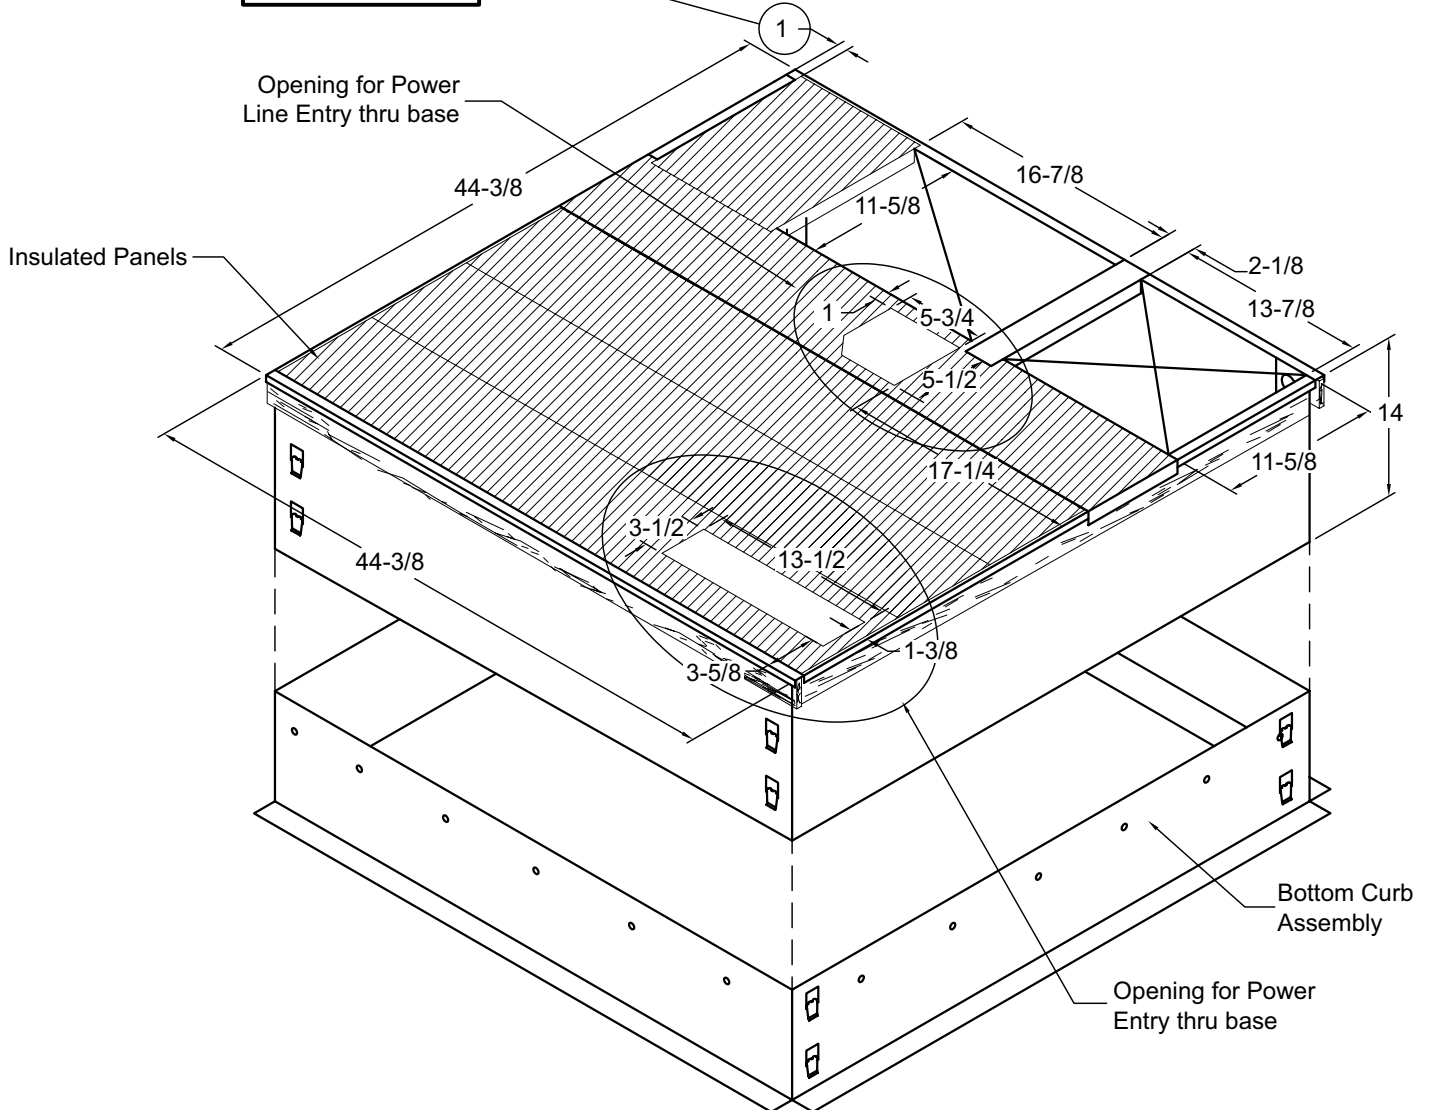


NOTE - Roof deck may be omitted within confines of curb.

# Adjustable Roof Curb Dimensions (Inches) - Large Base Air Conditioners & Heat Pumps (Knock-Down Style)


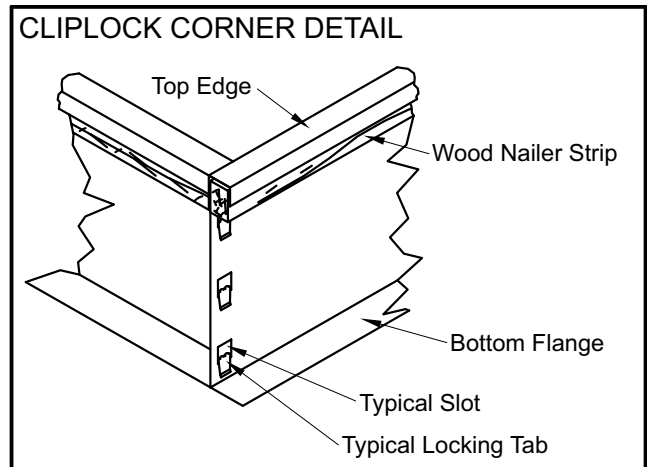


NOTE: See Cliplock 1000 installation instructions for complete assembly and installation procedures and requirements.

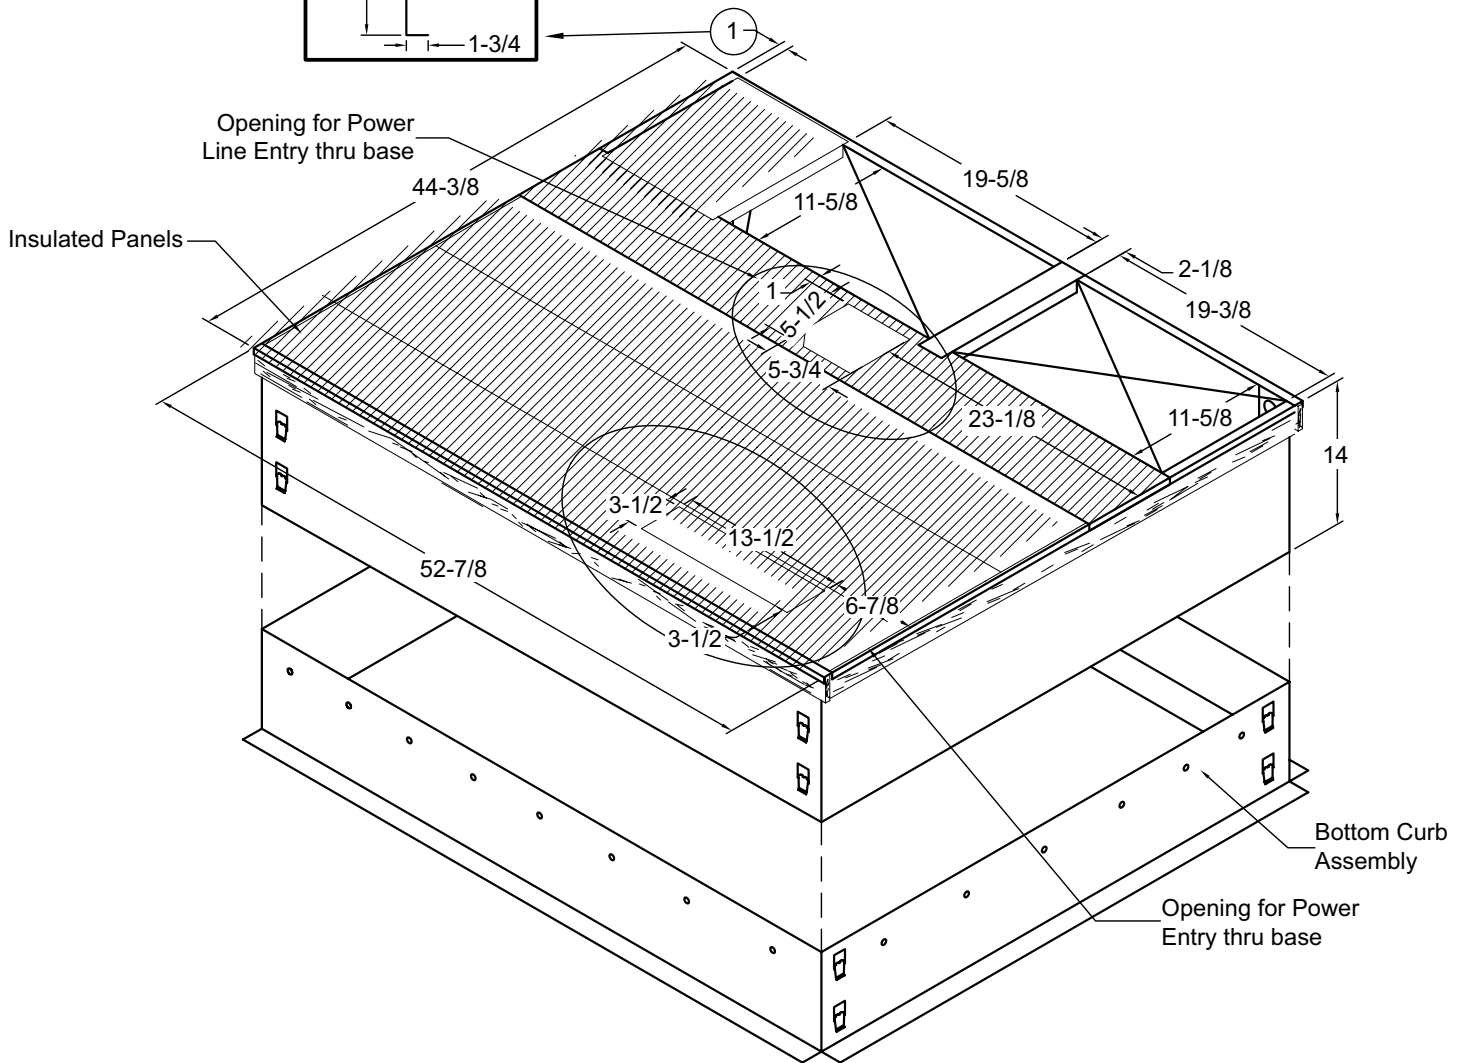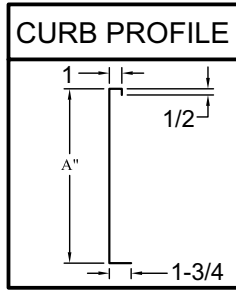

NOTE - Roof deck may be omitted within confines of curb.

## Adjustable Roof Curb Dimensions (Inches) - Air Conditioners & Heat Pumps (Welded Style)

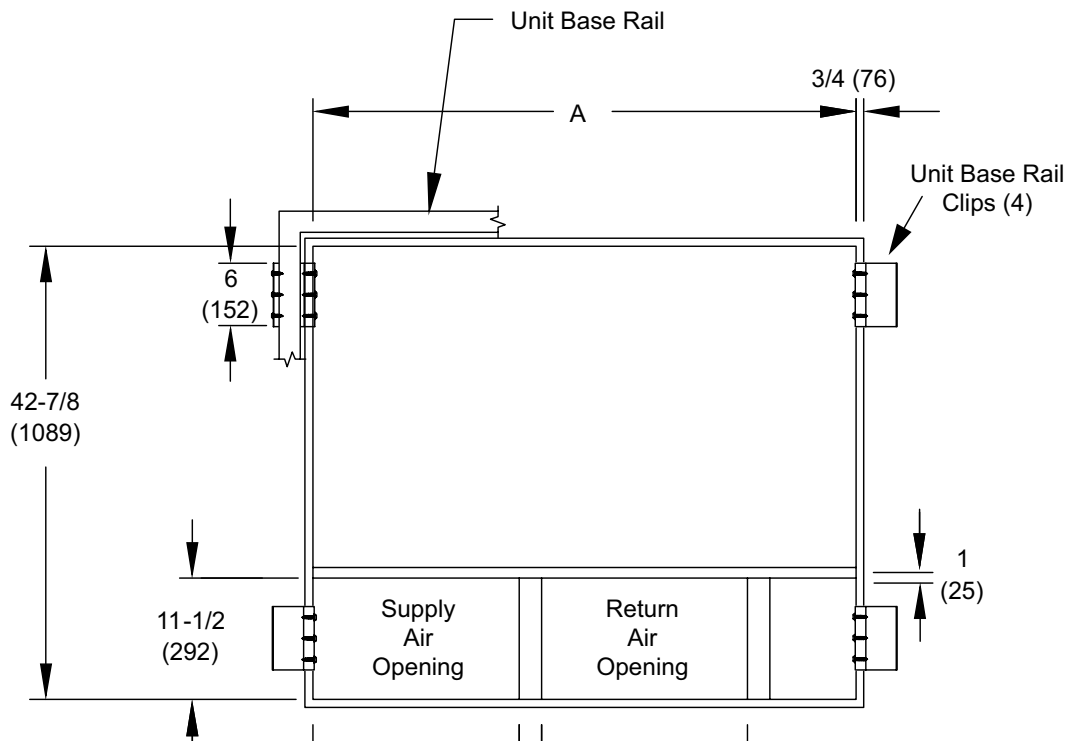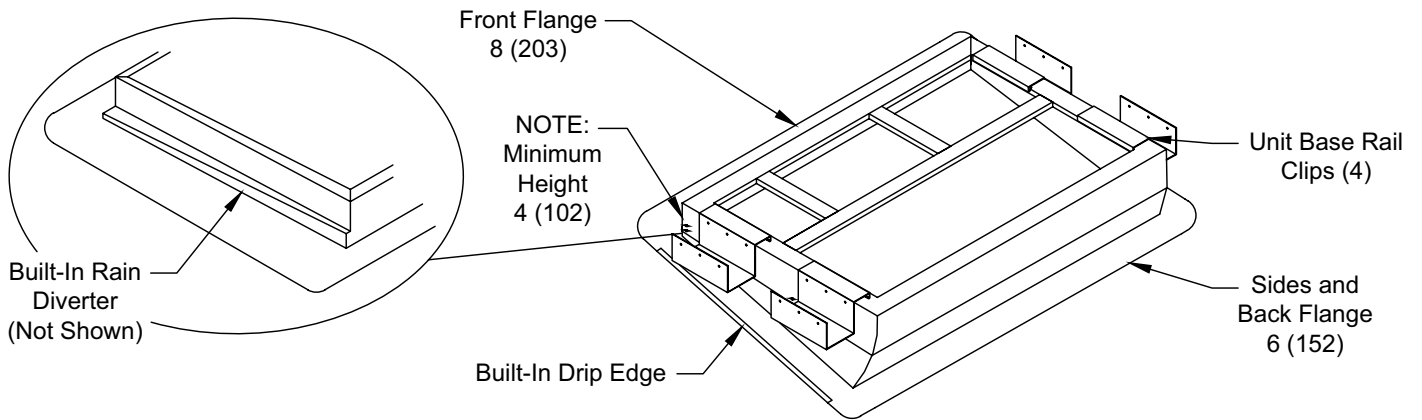

| Usage | A      |      | B      |     | C      |     |
|-------|--------|------|--------|-----|--------|-----|
|       | in.    | mm   | in.    | mm  | in.    | mm  |
| 24,36 | 42-7/8 | 1089 | 13-7/8 | 352 | 16-7/8 | 429 |
| 48,60 | 51-3/8 | 1305 | 19-1/2 | 495 | 19-1/2 | 495 |

## **WARNING**

Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer or service agency.

## **Installation**

These instructions explain the recommended method of installation of the packaged heat pump and/or air conditioner units and associated electrical wiring.

This unit is designed and approved for use as a self-contained air-to-air outdoor heat pump and air conditioner system.

The units are factory-equipped with a transformer and blower control for applications without auxiliary heat. Electric heat accessory kits (PHK-) can be ordered for field installation of additional heat where required.

These instructions, and any instructions packaged with mating components and/or accessories, should be carefully read prior to beginning installation. Note particularly any **CAUTIONS** or **WARNINGS** in these instructions and all labels on the units.

These instructions are intended as a general guide only, for use by qualified personnel and do not supersede any national or local codes in any way. Compliance with all local, state, provincial, or national codes pertaining to this type of equipment should be determined prior to installation.

### **Inspection of Shipment**

Upon receipt of equipment, carefully inspect it for possible shipping damage. If damage is found, it should be noted on the carrier's freight bill. Take special care to examine the unit inside the carton if the carton is damaged. If damaged, file a claim with the transportation company.

If any damages are discovered and reported to the carrier, **DO NOT INSTALL THE UNIT, as claim may be denied.**

**Check the unit rating plate to confirm specifications are as ordered.**

### **Limitations**

The unit should be installed in accordance with all national and local safety codes.

Limitations of the unit and appropriate accessories must also be observed.

The unit must not be installed with any ductwork in the outdoor air stream. The outdoor fan is not designed to operate against any additional static pressure.

## **Location**

The unit is designed to be located outdoors with sufficient clearance for free entrance to the air inlet and discharge air openings. The location must also allow for adequate service access.

The unit must be installed on a solid foundation that will not settle or shift. Adequate structural support must be provided. Install the unit in level position. Isolate the base from the building structure to avoid possible transmission of sound or vibration into the conditioned space.

**The heat pump unit foundation should be raised to a minimum of 3" above finish grade.** In areas which have prolonged periods of temperature below freezing and snowfall, the heat pump unit should be elevated above the average snow line. Extra precaution should be taken to allow free drainage of condensate from defrost cycles to prevent ice accumulation. The unit should not be located near walkways, to prevent possible icing of surface from defrost condensate.

**Avoid placing the unit near quiet areas, such as sleeping quarters or study rooms.** Normal operating sound levels may be objectionable if the unit is placed near certain rooms.

**Failure to follow instructions will cause damage to the unit. This unit is equipped with an aluminum coil. Aluminum coils may be damaged by exposure to solutions with a pH below 5 or above 9. The aluminum coil should be cleaned using potable water at a moderate pressure (less than 50psi). If the coil cannot be cleaned using water alone, recommends use of a coil cleaner with a pH in the range of 5 to 9. The coil must be rinsed thoroughly after cleaning. In coastal areas, the coil should be cleaned with potable water several times per year to avoid corrosive buildup (salt).**

## **Installing the Unit**

Every working procedure that affects safety means shall only be carried out by competent persons. This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Examples of such working procedures are breaking into the refrigerating circuit, opening of sealed components, and opening of ventilated enclosures.

- Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.
- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i. e. non-sparking, adequately sealed or intrinsically safe.

- If any hot work is to be conducted on the refrigerating equipment or any associated parts, the appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.
- No person carrying out work in relation to a refrigerating system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.
- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out.
- Pipe-work including piping material, pipe routing, and installation shall include protection from physical damage in operation and service, and be in compliance with national and local codes and standards.
- All field joints shall be accessible for inspection prior to being covered or enclosed.
- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance. The following checks shall be applied to installations using FLAMMABLE REFRIGERANTS as applicable:
  1. The actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed.
  2. The ventilation machinery and outlets are operating adequately and are not obstructed.
  3. If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.
  4. Markings on the equipment should be visible and legible. Markings and signs that are illegible shall be corrected.
  5. Refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

For systems containing refrigerant, all repair and maintenance to electrical components shall include initial safety checks and component inspection procedures such as that capacitors are discharged in a safe manner to avoid possibility of sparking, that no live electrical components and wiring are exposed while charging, recovering, or purging the system, and that there is continuity of earth bonding. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used that is reported to the owner of the equipment, so all parties are advised.

**NOTE:** *Sealed electrical components shall be replaced, not repaired.*

**NOTE:** *Intrinsically safe components must be replaced, not repaired.*

**NOTE:** *All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out with work in confined spaces being avoided.*

- Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used. The following leak detection methods are deemed acceptable for all refrigerant systems. Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and that 25 % refrigerant is confirmed. Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work. If a leak is suspected, all naked flames shall be removed/ extinguished. If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak.

- When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed and, since flammability is a consideration, procedures such as safely remove refrigerant following local and national regulations, purging the circuit with inert gas, evacuating (optional for A2L), purging with inert gas (optional for A2L), or opening the circuit by cutting or brazing be adhered to. The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants. This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems. For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum (optional for A2L). This process shall be repeated until no refrigerant is within the system (optional for A2L). When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to be able to perform the required work. Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and working area is well ventilated.

### **Use of Unit During Construction**

Use of this unit as a construction heater or air conditioner is not recommended during any phase of construction. Very low return air temperatures, harmful vapors and operation of the unit with clogged or misplaced filters will damage the unit.

If this unit has been used for heating or cooling of buildings or structures under construction, the following conditions must be met or the warranty will be void:

- A room thermostat must control the unit. The use of fixed jumpers that will provide continuous heating or cooling is not allowed.
- A pre-filter must be installed at the entry to the return air duct.
- The return air duct must be provided and sealed to the unit.
- Return air temperature range between 55°F (13°C) and 80°F (27°C) must be maintained.
- Air filters must be replaced and pre-filters must be removed upon construction completion.
- The input rate and temperature rise must be set per the unit rating plate.
- The heat exchanger, components, duct system, air filters and evaporator coil must be thoroughly cleaned following final construction clean-up.
- The unit operating conditions (including airflow, cooling operation, ignition, input rate, temperature rise and venting) must be verified according to these installation instructions.

## Clearances

All units require certain clearances for proper operation and service. Refer to Table 2 for the minimum clearances to combustibles required for construction, servicing, and proper unit operation.

In the U.S., units may be installed on combustible floors made from wood or class A, B, or C roof covering material.

In Canada, units may be installed on combustible floors. Units must be installed outdoors.

**Do not permit overhanging structures or shrubs to obstruct condenser air discharge outlet.**

|               | Clearance to Combustibles | Clearance for Service Access |
|---------------|---------------------------|------------------------------|
| Front of unit | 0 in.                     | 24 in.                       |
| Back of unit  | 0 in.                     | 0 in.                        |
| Left side     | 0 in.                     | 24 in.                       |
| Right side    | 0 in.                     | 24 in.                       |
| Base of unit  | 0 in.                     | 0 in.                        |
| Top of unit   | 0 in.                     | 48 in.                       |

For any future service, installer must provide access to screws of top and rear panels.

**Table 2. Minimum Clearances**

## Compressor

Units are shipped with compressor mountings factory adjusted and ready for operation. Do not loosen compressor mounting bolts.

## Roof Curb Installation

If a roof curb is used, follow the manufacturer's installation instructions and be sure that all required clearances are observed (see Clearances section).

## Rigging Unit

Exercise care when moving the unit. Do not remove any packaging until the unit is near the place of installation.

1. Connect rigging to the unit base rails using both holes in each corner.
2. All panels must be in place for rigging.
3. Place field-provided spreaders in place. Spreaders must be of adequate strength and length (must exceed unit dimension by 6 inches).

Units may also be moved or lifted with a forklift. **The lengths of the forks of the forklift must be a minimum of 42 inches.**

## CAUTION

Before lifting a unit, make sure that the weight is distributed equally on the cables so that it will lift evenly.

## Unpacking

**NOTE:** *Some units will be packaged with stacking brackets while other units will be packaged on a pallet.*

1. **For units packaged with stacking brackets:** Locate the four stacking brackets at each corner of the top panel. Remove the screws that secure these brackets. All screws must be re-installed. The stacking brackets can be discarded.
2. **For units packaged on a pallet:** Remove the unit from the skid.
3. Remove the bag and remaining packaging material, which can be discarded.
4. Locate the four plastic fork slot bumpers on the base rails. Remove the fasteners and bumpers and discard.

## CAUTION

As with any mechanical equipment, personal injury can result from contact with sharp sheet metal edges. Be careful when you handle this equipment.

## Service Access

Access to all serviceable components is provided by four removable panels: upper access panel (for blower, ID coil, and optional filter), Aux heat access, control access panel, and compressor access.

## WARNING

This unit is charged with R-454B refrigerant. Operating pressures for units charged with R-454B are higher than pressures in units charged with HCFC-22. All service equipment **MUST** be rated for use with R-454B refrigerant.

## Electrical Wiring


All field wiring must be done in accordance with National Electrical Code recommendations, local codes, and applicable requirements of UL Standards, or in accordance with Canadian Electrical Code recommendations, local codes, or CSA Standards.

Power wiring, disconnect means, and over-current protection are to be supplied by the installer. Refer to the unit rating plate for maximum over-current protection and minimum circuit ampacity, as well as operating voltage.

The power supply must be sized and protected according to specifications supplied.

The unit must be grounded with a separate ground conductor. See Figure 1 for typical field wiring connection. The wiring diagram can be found on the unit inside the access panel. Low voltage control wiring are terminal strip or pigtail leads located on the main control box and are color-coded to match the connection called out on the wiring schematic.

**NOTE:** An optional bottom-entry power kit is available for these units. See the kit instructions for proper installation details.

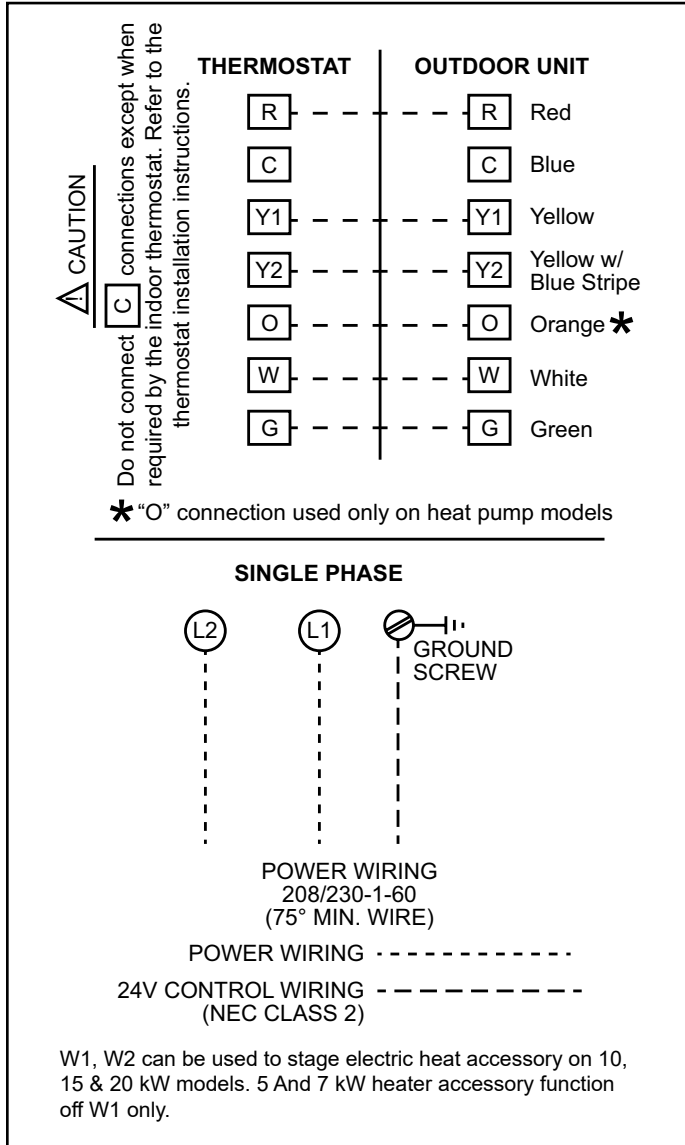

**Figure 1. Typical Wiring Connections**


**CAUTION**

When connecting electrical power and control wiring to the unit, waterproof-type connectors must be used so that water or moisture cannot be drawn into the unit during normal operation.

**Units are factory wired for a 230-volt power supply. If power supply is 208 volts, it will be necessary to change a wire connection on the unit transformer from 240V terminal to 208V terminal as shown on the wiring diagram.**

**Use only copper conductors.**

If any of the original unit wiring is replaced, the same size and type wire must be used.

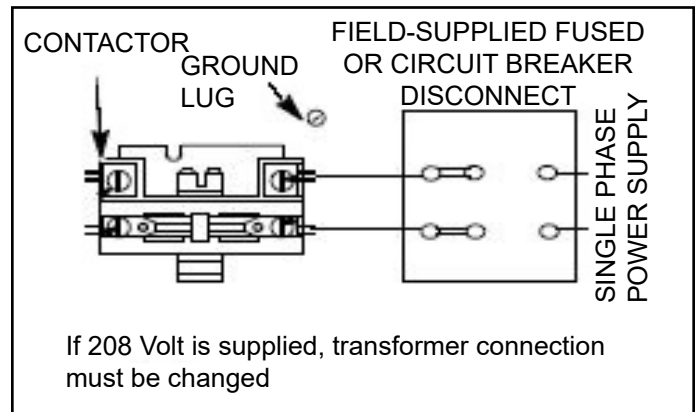

**Figure 2. 208 / 230 Line Voltage Wiring**

**Thermostat**

The room thermostat should be located on an inside wall where it will not be subject to drafts, sun exposure, or heat from electrical fixtures or appliances. Follow the manufacturer's instructions enclosed with the thermostat for general installation procedure. Color-coded insulated wires (#18 AWG) should be used to connect the thermostat to the unit. A minimum of five wires are required for proper installation.

**Duct System**

The duct system should be designed and sized according to the methods in the Air Conditioning Contractors of America (ACCA) manual that is most appropriate to the installation application.

A closed return duct system shall be used. This shall not preclude use of economizers or outdoor fresh air intake. It is recommended that supply and return duct connections at the unit be made with flexible joints.

The supply and return air duct systems should be designed for the CFM and static requirements of the job. They should not be sized to match the dimensions of the duct connections on the unit.



The unit is shipped ready for horizontal flow (side duct connections) or downflow (bottom duct connections). All units are equipped with a drain pan overflow switch that is installed and wired at the factory. Duct attachment screws are intended to go into the duct panel flanges. Duct to unit connections must be sealed and weather proofed.

For horizontal duct systems:

1. Remove the duct covers on side of the unit. They can be discarded.
2. Install the duct system to the unit.

For downflow duct systems:

1. Remove the duct covers on side of the unit. Keep the screws and the covers as they will be re-installed later.
2. Remove the downflow duct covers located inside unit. Remove the four screws securing each cover. Remove the covers from the unit. They can be discarded.
3. Remove screws located between the supply and return air openings that attach the blower deck to the base pan. These screws can interfere with bottom duct connections or roof curb seals. Discard these screws.
4. Install the duct system to the unit.
5. Re-install the duct covers removed in Step 1.

### Filters

Air filters are not supplied with the unit. A field-provided air filter must always be installed ahead of the evaporator coil and must be kept clean or replaced. Dirty filters will reduce the airflow of the unit.

An optional filter rack kit may be purchased separately for installation inside the unit's coil compartment. Air filter sizes are shown in Table 3 for use with filter rack kit.

#### NOTE:

The filter rack must be installed prior to installation of the unit in applications where access to the rear panel is limited.

| Unit Model | Filter 1    | Filter 2    |
|------------|-------------|-------------|
| 24,36      | 14 x 20 x 1 | 20 x 20 x 1 |
| 48,60      | 20 x 20 x 1 |             |

**Table 3. Unit Air Filter Sizes - inches**


A Photocatalytic Oxidation (PCO) air purification system is available as a field-installed accessory for this product. A wiring harness for the installation of this accessory has been factory installed. If this accessory is going to be installed, it becomes critical that the system filter be installed ahead of this unit's return. Therefore, see the PCO accessory for filter requirements, plan the installation of filter ahead of this unit, and **do not use the internal filter rack described above.**

## Condensate Drain

### ⚠ CAUTION

Drain lines should be hand-tightened only. Do not use tools to tighten fitting into drain.

This package unit is equipped with a 3/4" FPT coupling for condensate line connection. Plumbing must conform to local codes. Use a sealing compound on male pipe threads.

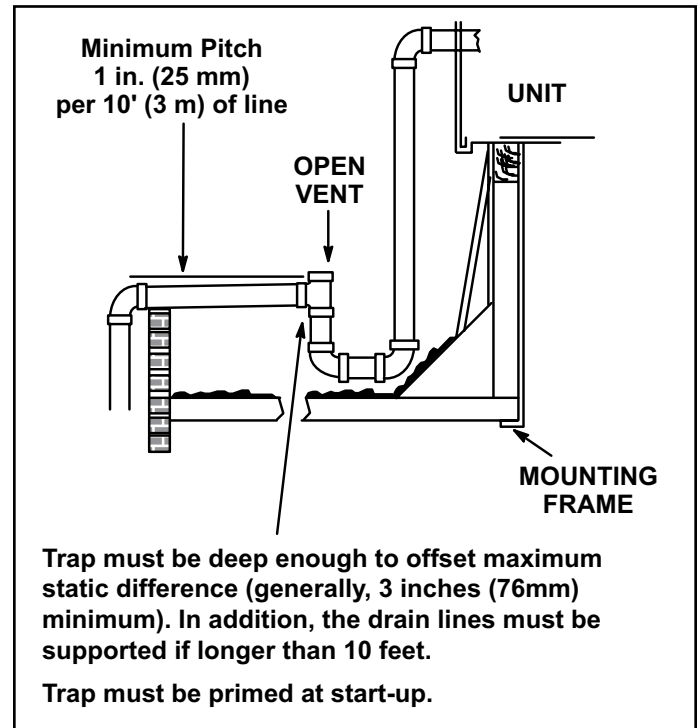

**Figure 3. Typical Condensate Drain Connection**

**Do not** operate unit without a drain trap. The condensate drain is on the negative pressure side of the blower; therefore, air being pulled through the condensate line will prevent positive drainage without a proper trap.

**The condensate drain line must be properly trapped, routed to a suitable drain and primed prior to unit commissioning.**

**NOTE:** Install drain lines and trap so they do not block service access to the unit.

See Figure 3 for proper drain arrangement. The drain line must pitch to an open drain or pump to prevent clogging of the line. Seal around the drain connection with suitable material to prevent air leakage into the return air system.

To prime trap, pour several quarts of water into drain, enough to fill drain trap and line.

## Crankcase Heater (if used)

Some models may be equipped with a crankcase heater to prevent excessive migration of liquid refrigerant into the compressor during off cycles. Power must be maintained to the unit to keep this feature active.

Except as required for safety while servicing, **do not open the system disconnect switch.**

## Heater Kit Accessory (if used)

The unit is fully equipped for operation without auxiliary heat. A heater kit accessory may also be used. To install the heater kit accessory (see Figure 4):

1. Disconnect the power and open the main control access.
2. Disconnect the plug separating the high voltage wire harness. Remove the high voltage wire harness plug and discard.
3. Remove the heater blockoff by removing the four screws holding it in place.
4. Insert the heater into the control panel and fasten in the same mounting holes.
5. Plug the heater wiring harness into the wire harness on the control assembly. Field wiring of the auxiliary heater is separate from the unit power supply. Wire the power supply wiring for the heater to the appropriate connections on the heater kit.

## Sequence of Operation

### RDS Control Check

The RDS Non-Communicating Blower Control Board is equipped with a Test/Reset button. Once the HVAC system has been powered, the system will then run through a purge sequence for five (5) minutes. After the purge sequence is complete, proceed to testing cooling demand and heating demand.

### Blower Control

Units are equipped with a variable speed motor that is capable of maintaining a specified CFM throughout the external static range. A particular CFM can be obtained by positioning jumpers (COOL, HEAT, and ADJUST) on the blower control. The HEAT and COOL jumpers are labeled A, B, C and D. Each of the numbers corresponds with an air volume (CFM) setting. The ADJUST jumper is labeled Test, -, +, and Norm. The + and - pin settings are used to add or subtract a percentage of the CFM selected. The Test jumper is used to operate the motor in the test mode. Figure 5 shows the blower control.

**The CFM LED** located on the blower control flashes one time per 100 cfm to indicate selected blower speed. For example, if the unit is operating at 1200 CFM, the CFM LED will flash 12 times. If the CFM is 1150, the CFM LED will flash 11 full times plus one fast or half flash. At times, the light may appear to flicker or glow. This takes place when the control is communicating with the motor between cycles.

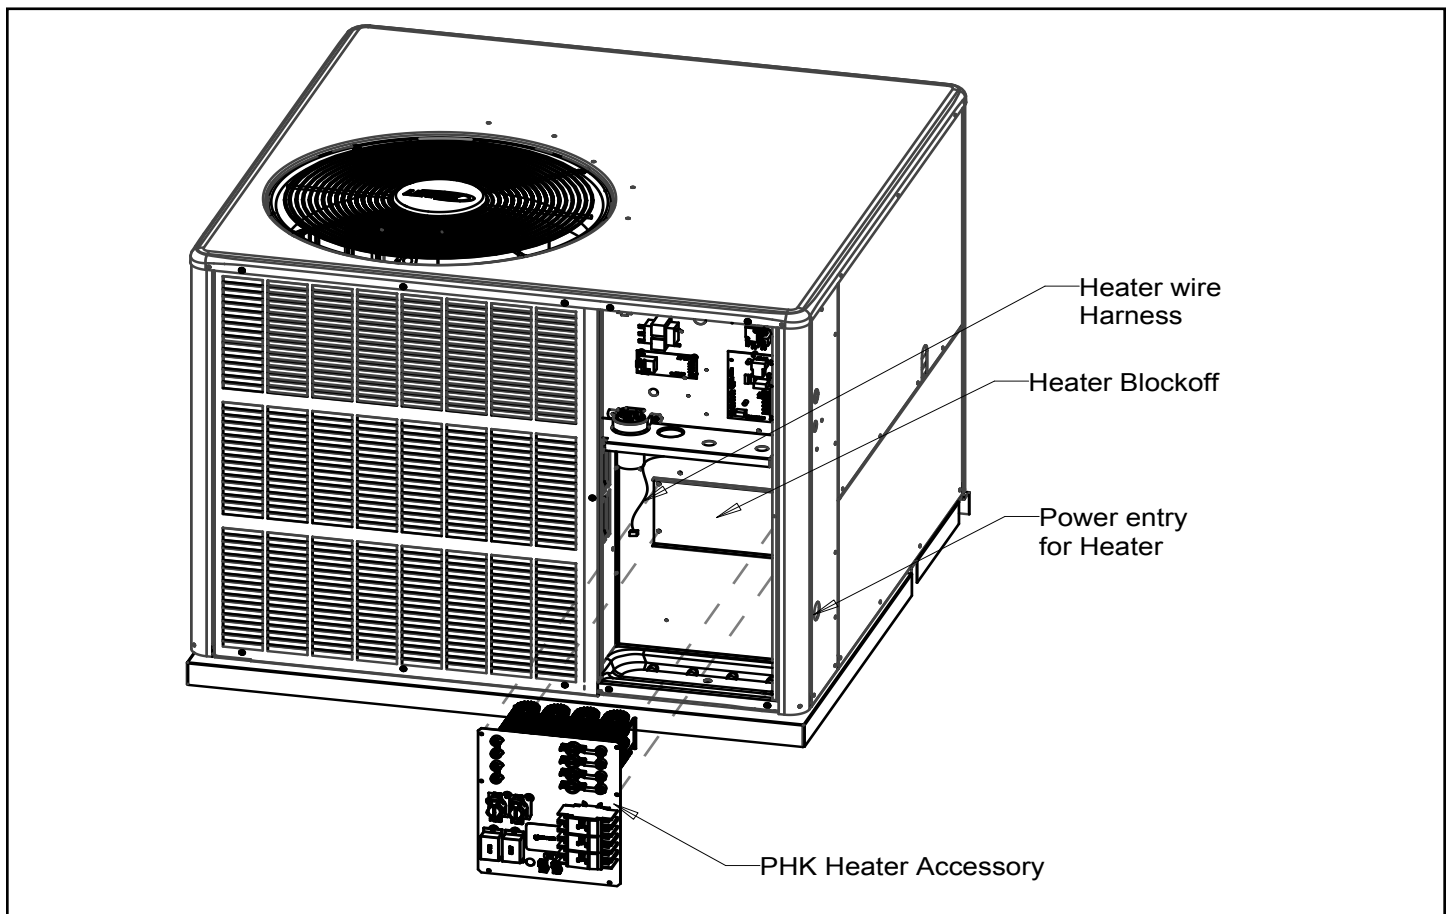


Figure 4.

This is normal operation. Read through the jumper settings section before adjusting the jumper to obtain the appropriate blower speed. To change jumper positions, gently pull the jumper off the pins and place it on the desired set of pins. The following section outlines the different jumper selections available and conditions associated with each one. Refer to Figure 5. From the engineering handbook and/or specification sheet, determine which row most closely matches the desired CFM. Once a specific row has been chosen (+, NORMAL, or -), CFM volumes from other rows cannot be used. Below are descriptions of the jumper selections. The variable speed motor slowly ramps up to and down from the selected air flow during both cooling and heating demand. This minimizes noise and eliminates the initial blast of air when the blower is initially energized.

**ADJUST**

The ADJUST pins allow the motor to run at normal speed, approximately 10 percent higher, or approximately 10 percent lower than normal speed.

The TEST pin is available to bypass the blower control and run the motor at approximately 70 percent to make sure that the motor is operational. This is used mainly in troubleshooting. The G terminal must be energized for the motor to run.

**COOL**

The COOL jumper is used to determine the CFM during cooling operation. In AC units, this jumper selection is activated for cooling when Y1/Y2 is energized. In heat pump units, the selection is activated for cooling when Y1/ Y2 and O are energized.

The blower motor runs at 80 percent of the selected air flow for the first 7-1/2 minutes of each cooling demand. This feature allows for greater humidity removal and saves energy.

In the cooling mode, the blower control delays blower operation for 5 seconds after the compressor starts. The

blower continues to operate for 90 seconds after the compressor is de-energized. The delay is 5 minutes on the first start.

**HEAT**

The HEAT jumper is used to determine CFM during electric heat operation only. These jumper selections are activated only when W1/W2 is energized.

**CONTINUOUS FAN**

When the thermostat is set for “Continuous Fan” operation and there is no demand for heating or cooling, the blower control will provide 50 percent of the COOL CFM selected.

**DEHUMIDIFICATION**

The blower control includes an HUM terminal, which provides for connection of a humidistat. The JV1 resistor on the blower control must be cut to activate the HUM terminal. The humidistat must be wired to open on humidity rise. When the dehumidification circuit is used, the variable speed motor will reduce the selected air flow rate by 25 percent when humidity levels are high. An LED (D1) lights when the blower is operating in the dehumidification mode.

**Cooling System**

The cooling system is factory-charged with R-454B. The compressor is hermetically sealed and base-mounted with rubber-insulated bolts.

**Cooling**

When the thermostat calls for cooling, R is closed to Y1 and O (see the wiring diagrams starting on Page 30). This action completes the low voltage control circuit, energizing the compressor, condenser fan motor, and blower motor. Second-stage cooling is initiated by the thermostat energizing Y2 in AC units and Y2 and O in heat pumps.

Unit compressors have internal protection. In the event there is an abnormal rise in the temperature of the compressor, the protector will open and cause the compressor to stop.

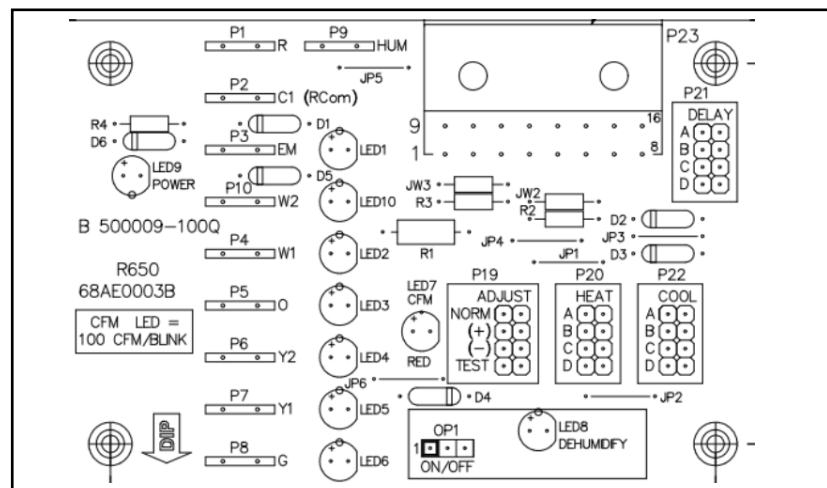


Figure 5.

The thermostat automatically closes the R to G circuit, which brings on the indoor blower. Upon satisfying cooling demand, the thermostat will open the above circuits and open the main contactor, stopping the compressor and outdoor fan. If the unit is equipped with a delay timer, the blower will continue to operate for 60 to 90 seconds, which improves system efficiency.

### Heating - Heat Pump Stage

Upon heating demand, the thermostat closes circuit R to Y1, which closes the unit contactor, starting the compressor and outdoor fan. Second-stage heating is initiated when the thermostat energizes Y2, or when the outdoor ambient temperature is below the lock-in temperature (see Second-Stage Lock-In section). The reversing valve is not energized in the heating mode. The thermostat again automatically brings on the indoor fan at the same time. Upon satisfying heating demand, the thermostat opens above circuits and stops unit operation.

**NOTE:** *O is de-energized in heating mode.*

### Heating - Auxiliary Electric Heat

Upon heating demand for auxiliary electric heat, the thermostat closes circuit R to W, which energizes the heater sequencers as well as the indoor blower. Upon satisfying auxiliary heat demand, the thermostat opens above circuits and heating elements sequence off; the blower continues to operate until all heating elements have turned off.

Auxiliary electric heat can be staged using W1, W2 on 10, 15 and 20 kW models. Staged wiring diagrams are included with the installation instructions of electric heater kits.

**NOTE:** *Only field installed.*

### Heating - Emergency Mode

When the thermostat calls for emergency heat, the R to W circuit is closed. Upon satisfying heat demand, the circuit is open and the blower continues to operate through an off delay period. The primary function of emergency mode is to provide emergency heat should the heat pump operation fail.

## Defrost System

### Defrost System

This section addresses:

- Emergency Heat
- Defrost System Overview
- Defrost Control Connections, Jumper Settings and Features
- Operational Mode Overview (Calibration, Normal and Defrost)
- Defrost Cycle Actuation

### EMERGENCY HEAT (AMBER LIGHT)

An emergency heat function is designed into some room thermostats. This feature is applicable when isolation of the outdoor unit is required, or when auxiliary electric heat is staged by outdoor thermostats. When the room thermostat is placed in the emergency heat position, the outdoor unit control circuit is isolated from power and field-provided relays bypass the outdoor thermostats. An amber indicating light simultaneously comes on to remind the homeowner that he is operating in the emergency heat mode.

Emergency heat is usually used during an outdoor unit shutdown, but it should also be used following a power outage if power has been off for over an hour and the outdoor temperature is below 50°F (10°C). System should be left in the emergency heat mode at least six hours to allow the crankcase heater sufficient time to prevent compressor slugging.

### DEFROST SYSTEM OVERVIEW

The control monitors ambient temperature, outdoor coil temperature, and total run time to determine when a defrost cycle is required. The coil temperature probe is designed with a spring clip to allow mounting to the outside coil tubing. The location of the coil sensor is important for proper defrost operation.

**NOTE** – *The demand defrost control accurately measures the performance of the system as frost accumulates on the outdoor coil. This typically will translate into longer running time between defrost cycles as more frost accumulates on the outdoor coil before the demand defrost control initiates defrost cycles.*

### DEFROST CONTROL CONNECTIONS, JUMPER SETTINGS AND FEATURES

#### Defrost Temperature Termination Jumper Settings (P1)

The demand defrost control selections are: 50, 70, 90 and 100°F (10, 21, 32 and 38°C). The shunt termination pin is factory set at 50°F (10°C). If temperature shunt is not installed, default termination temperature is 90°F (32°C).

#### Test Pins (P1) Function

Placing the jumper on the field test pins (P1) allows the technician to:

- Clear short cycle lockout
- Clear five-strike fault lockout
- Cycle the unit in and out of defrost mode
- Place the unit in defrost mode to clear the coil

### Nominal Defrost Time Selection Input

(Replaces High Stage Lock-in Temperature Selection Input) [BE1]

The nominal defrost time selection input is provided by the position of a selection shunt on the P3 header. If the nominal defrost time shunt is not installed, the default nominal defrost time shall be 140 seconds. The control shall be provided from the factory with the shunt installed in the 140 position. The nominal defrost time selection is used as the value for the Nom\_def\_time variable.

Position Definitions for P3 Header:

- Connecting P3-1 and P3-2 will set the nominal defrost time to 140 seconds.
- Connecting P3-2 and P3-3 will set the nominal defrost time to 100 seconds.
- Connecting P3-3 and P3-4 will set the nominal defrost time to 60 seconds.
- Connecting P3-4 and P3-5 will set the nominal defrost time to 165 seconds.

[BE1] Modifying the function of the shunt on the P3 header to select the nominal defrost time. The high stage lock in function is not needed for this product since it is only single stage.

### DEMAND DEFROST CONTROL (A108) DIAGNOSTIC LEDES

The state (Off, On, Flashing) of two LEDs on the demand defrost control (DS1 [Red] and DS2 [Green]) indicate diagnostics conditions that are described in table 4.

| TABLE 4<br>DEMAND DEFROST CONTROL (A108) DIAGNOSTIC LEDES                       |            |         |                                 |   |  |
|---|------------|---------|---------------------------------|---|--|
| DS1 and DS2 System Status, Fault and Lockout Codes                              |            |         |                                 |   |  |
| DS2 Green   | DS1 Red    | Type    | Condition/Code                  | Possible Cause(s)   | Solution   |
| OFF   | OFF        | Status  | Power problem                   | No power (24V) to demand defrost control terminals R and C or demand defrost control failure.   | 1-Check control transformer power (24V).<br>2-If power is available to demand defrost control and LED(s) do not light, replace demand defrost control.   |
| Simultaneous SLOW Flash   |            | Status  | Normal operation                | Unit operating normally or in standby mode.   | None required.   |
| Alternating SLOW Flash  |            | Status  | 5-minute anti-short cycle delay | Initial power up, safety trip, end of room thermostat demand.   | None required (jumper TEST pins to override)   |
| Simultaneous FAST Flash   |            | Fault   | Ambient Sensor Problem          | Sensor being detected open or shorted or out of temperature range. Demand defrost control will revert to time/temperature defrost operation. (System will still heat or cool).  |  |
| Alternating FAST Flash  |            | Fault   | Coil Sensor Problem             | Sensor being detected open or shorted or out of temperature range. Demand defrost control will not perform demand or time/temperature defrost operation. (System will still heat or cool.)  |  |
| ON  | ON         | Fault   | Demand Defrost Control Failure  | Indicates that demand defrost control has internal component failure. Cycle 24VAC power to demand defrost control. If code does not clear, replace demand defrost control.  |  |
| OFF   | SLOW Flash | Fault   | Low Pressure Fault              | <ul style="list-style-type: none"> <li>• Restricted air flow over indoor or outdoor coil.</li> <li>• Improper refrigerant charge in system.</li> <li>• Improper metering device installed or incorrect operation of metering device.</li> <li>• Incorrect or improper sensor location or connection to system.</li> </ul> | <ul style="list-style-type: none"> <li>• Remove any blockages or restrictions from coils and/or fans. Check indoor and outdoor fan motor for proper current draws.</li> <li>• Check system charge using subcooling method.</li> <li>• Check system operating pressures and compare to unit subcooling tables in this instruction or located on unit access panel.</li> <li>• Make sure all pressure switches and sensors have secure connections to system to prevent refrigerant leaks or errors in pressure and temperature measurements.</li> </ul> |
| OFF   | ON         | Lockout | Low Pressure Lockout            |   |  |
| SLOW Flash  | OFF        | Fault   | High Pressure Fault             |   |  |
| ON  | OFF        | Lockout | High Pressure Lockout           |   |  |
| (Each fault adds 1 strike to that code's counter; 5 strikes per code = LOCKOUT) |            |         |                                 |   |  |

### Compressor Delay Mode (P5)

The demand defrost control has a field-selectable function to reduce occasional sounds that may occur while the unit is cycling in and out of the defrost mode. When a jumper is installed on the DELAY pins, the compressor will be cycled off for 30 seconds going in and out of the defrost mode. Units are shipped with jumper installed on DELAY pins.

**NOTE** – The 30 second off cycle is NOT functional when jumpering the TEST pins.

### HIGH PRESSURE SWITCH (S4)

This unit is equipped with a high pressure switch which is located on the liquid line. The SPST, normally closed pressure switch opens when liquid line pressure rises above the factory setting of 590 + 15 psig and automatically resets at 418 + 15 psig.

### LOW PRESSURE SWITCH (S87)

This unit is equipped with a low pressure switch which is located on the suction line. The SPST, normally open pressure switch remains open when suction line pressure is low and closes when pressure rises above 40 ± 5 psig.

### **Coil Sensor**

The coil temperature sensor considers outdoor temperatures below -35°F (-37°C) or above 120°F (48°C) as a fault. If the coil temperature sensor is detected as being open, shorted or out of the temperature range of the sensor, the board will not perform demand or time/temperature defrost operation and will display the appropriate fault code. Heating and cooling operation will be allowed in this fault condition.

**NOTE:** *The coil temperature probe is designed with a spring clip to allow mounting to the outside coil tubing. Coil sensor location is important for proper defrost operation.*

### **Ambient Sensor**

The ambient sensor considers outdoor temperatures below -35°F (-37°C) or above 120°F (48°C) as a fault. If the ambient sensor is detected as being open, shorted or out of the temperature range of the sensor, the board will not perform demand defrost operation. The board will revert to time/temperature defrost operation and will display the appropriate fault code. Heating and cooling operation will be allowed in this fault condition.

| Sensor            | Temperature Range °F (°C) | Red LED (DS1)   | Pins / Wire Color |
|-------------------|---------------------------|-----------------|-------------------|
| Outdoor (ambient) | -35 (-37) to 120 (48)     | 280,000 to 3750 | 3 & 4 (black)     |
| Coil              | -35 (-37) to 120 (48)     | 280,000 to 3750 | 5 & 6 (brown)     |

**NOTE:** Sensor resistance decreases as sensed temperature increases.

**Table 5. Sensor Temp. / Resistance Range**

*Within a single room thermostat demand, if 5-strikes occur, the board will lockout the unit. Control board 24 volt power "R" must be cycled "OFF" or the "TEST" pins on board must be shorted between 1 to 2 seconds to reset the board.*

### **Defrost Temperature Termination Shunt (Jumper) Pins**

The defrost board selections are: 50, 70, 90, and 100°F (10, 21, 32 and 38°C). The shunt termination pin is factory set at 50°F (10°C). If the temperature shunt is not installed, the default termination temperature is 90°F (32°C).

### **Delay Mode**

The defrost system has a field-selectable function to reduce occasional sounds that may occur while the unit is cycling in and out of the defrost mode. When a jumper is installed on the DELAY pins, the compressor will be cycled off for 30 seconds going in and out of the defrost mode. Units are shipped with jumper installed on DELAY pins.

**NOTE:** *The 30 second compressor delay feature (known as the quiet shift) **must** be deactivated during any unit performance testing. The feature is deactivated by removing the jumper located on the compressor delay pins*

*on the control board mounted inside the unit control box. This feature is optional for the homeowner, but may impact testing performance.*

### **Defrost Operation**

The defrost control system has three basic operational modes: normal, calibration, and defrost.

- **Normal Mode**—The demand defrost system monitors the O line, to determine the system operating mode (heat/cool), outdoor ambient temperature, coil temperature (outdoor coil) and compressor run time to determine when a defrost cycle is required.
- **Calibration Mode**—The board is considered uncalibrated when power is applied to the board, after cool mode operation, or if the coil temperature exceeds the termination temperature when it is in heat mode.  
  
Calibration of the board occurs after a defrost cycle to ensure that there is no ice on the coil. During calibration, the temperature of both the coil and the ambient sensor are measured to establish the temperature differential which is required to allow a defrost cycle.
- **Defrost Mode**—The following paragraphs provide a detailed description of the defrost system operation.

### **Defrost Cycles**

The control board initiates a defrost cycle based on either frost detection or time.

- **Frost Detection**—If the compressor runs longer than 30 minutes and the actual difference between the clear coil and frosted coil temperatures exceeds the maximum difference allowed by the control, a defrost cycle will be initiated.  
  
**IMPORTANT** - *The control board will allow a greater accumulation of frost and will initiate fewer defrost cycles than a time/ temperature defrost system.*
- **Time**—If 6 hours of heating mode compressor run time has elapsed since the last defrost cycle while the coil temperature remains below 35°F (2°C), the control board will initiate a defrost cycle.

### **Actuation**

When the reversing valve is de-energized, the Y1 circuit is energized, and the coil temperature is below 35°F (2°C), the board logs the compressor run time. If the board is not calibrated, a defrost cycle will be initiated after 30 minutes of heating mode compressor run time. The control will attempt to self-calibrate after this (and all other) defrost cycle(s).

Calibration success depends on stable system temperatures during the 20-minute calibration period. If the board fails to calibrate, another defrost cycle will be initiated after 45 minutes of heating mode compressor run time. Once the control board is calibrated, it initiates

a demand defrost cycle when the difference between the clear coil and frosted coil temperatures exceeds the maximum difference allowed by the control OR after 6 hours of heating mode compressor run time has been logged since the last defrost cycle.

**NOTE:** *If ambient or coil fault is detected, the board will not execute the "TEST" mode.*

**Termination**

The defrost cycle ends when the coil temperature exceeds the termination temperature or after 14 minutes of defrost operation. If the defrost is terminated by the 14-minute timer, another defrost cycle will be initiated after 30 minutes of run time.

**5-Strike Lockout Feature**

The internal control logic of the board counts the pressure switch trips only while the Y1 (Input) line is active. If a pressure switch opens and closes four times during a Y1 (Input), the control logic will reset the pressure switch trip counter to zero at the end of the Y1 (Input). If the pressure switch opens for a fifth time during the current Y1 (Input), the control will enter a lockout condition.

The 5-strike pressure switch lockout condition can be reset by cycling OFF the 24-volt power to the control board or by shorting the TEST pins between 1 and 2 seconds. All timer functions (run times) will also be reset.

If a pressure switch opens while the Y1 Out line is engaged, a 5-minute short cycle will occur after the switch closes.

**Diagnostic LEDs**

The defrost board uses two LEDs for diagnostics. The LEDs flash a specific sequence according to the condition as shown in Table 6.

| Defrost Board Diagnostic LEDs |               |   |
|-------------------------------|---------------|---|
| Green LED (DS2)               | Red LED (DS1) | Condition                                 |
| OFF                           | OFF           | No Power to Control                       |
| Simultaneous Slow FLASH       |               | Normal Operation / Power to Control       |
| Alternating Slow FLASH        |               | 5-min Anti-Short-Cycle Delay              |
| ON                            | Slow FLASH    | Low Pressure Switch Ignored (Low Ambient) |
| Fault & Lockout Codes         |               |   |
| OFF                           | Slow FLASH    | Low Pressure Switch Fault                 |
| OFF                           | ON            | Low Pressure Switch Lockout               |
| Slow FLASH                    | OFF           | High Pressure Switch Fault                |
| ON                            | OFF           | High Pressure Switch Lockout              |

**Table 6. Defrost Control (CMC1) Diagnostic LEDs**

**System Performance**

This equipment is a self-contained, factory optimized refrigerant system, and should not require adjustments to system charge when properly installed. If unit performance is questioned, perform the following checks.

Ensure unit is installed per manufacturer's instructions and that line voltage and air flow is correct. Refer to Table 7 through Table 9 for proper performance value. The indoor metering device varies by model.


If the measured performance value varies from table value allowance, check internal seals, service panels and duct work for air leaks, as well as restrictions and blower speed settings. If unit performance remains questionable, remove system charge, evacuate to 500 microns, and weigh in refrigerant to nameplate charge. It is critical that the exact charge is re-installed. Failure to comply will compromise system performance.

If unit performance is still questionable, check for refrigerant-related problems, such as blocked coil or circuits, malfunctioning metering device or other system components.

**Approved Auxiliary Devices**

| Description                     | Where Used | Kit Number |
|---------------------------------|------------|------------|
| Electric Heater 5KW - PHK05BP   | All        | 10W47      |
| Electric Heater 7.5KW - PHK07BP | All        | 10W48      |
| Electric Heater 10KW - PHK10BP  | All        | 10W49      |
| Electric Heater 15KW - PHK15CP  | 36, 48, 60 | 10W50      |
| Electric Heater 20KW - PHK20CP  | 48, 60     | 10W51      |

**Maintenance**

|   |
|---|
|  <b>WARNING</b><br>Before performing maintenance operations on the system, shut off all electrical power to the unit. Turn off accessory heater power switch if applicable. Electrical shock could cause personal injury or death. |
|---|

Prior to service, safety checks are necessary to minimize risk of ignition.

Service will be undertaken under a controlled procedure to minimize risk of flammable gas or vapor being present during maintenance.

Prior to service, area will be checked with an appropriate refrigerant detector.

Periodic inspection and maintenance normally consists of changing or cleaning the filters and cleaning the evaporator coil. On occasion, other components may also require cleaning.

**Filters**

Filters are not supplied with the unit. Inspect once a month. Replace disposable or clean permanent type as necessary. Do not replace permanent type with disposable.

**Motors**

Indoor and outdoor fan and vent motors are permanently lubricated and require no maintenance.

Some models may be equipped with a permanent magnet, constant torque indoor blower motor. These motors remain energized and are controlled by 24V signals. For high static applications, use tap 3 for cooling speed and tap 5 for heating speed. Refer to the heater installation label for limitations to blower tap selection on heating speeds.

**Evaporator Coil**

Dirt and debris should not be allowed to accumulate on the evaporator coil surface or other parts in the air circuit. Cleaning should be as often as necessary to keep coil clean. Use a brush, vacuum cleaner attachment, or other suitable means. If water is used to clean the coil, be sure the power to unit is shut off prior to cleaning. **Care should be used when cleaning the coil so that the coil fins are not damaged.**

**Do not permit the hot condenser air discharge to be obstructed by overhanging structures or shrubs.**

**Condenser Coil**

Clean condenser coil annually with water and inspect monthly during the cooling season.

Condenser coil may need to be cleaned at startup in case oil from the manufacturing process is found on the condenser coil.

**Table 7. Cooling Performance - AC Models**

| 80 DB / 67 WB Deg. Return Air |                          | Air Temperature Entering Evaporator Coil, Degree F |     |     |     |     |     |     |      |      |      |      |
|-------------------------------|--------------------------|--|-----|-----|-----|-----|-----|-----|------|------|------|------|
| COOLING INPUT (1000 BTU)      | Pressure                 | 65°  | 70° | 75° | 80° | 85° | 90° | 95° | 100° | 105° | 110° | 115° |
| 24                            | Suction<br>+/-2 PSIG     | 136  | 138 | 139 | 139 | 140 | 141 | 141 | 143  | 144  | 146  | 147  |
| 36                            |                          | 128  | 129 | 130 | 131 | 133 | 134 | 135 | 136  | 138  | 139  | 140  |
| 48                            |                          | 127  | 129 | 130 | 131 | 132 | 133 | 136 | 136  | 137  | 139  | 138  |
| 60                            |                          | 128  | 129 | 129 | 130 | 132 | 135 | 134 | 135  | 136  | 137  | 139  |
| 24                            | Liquid+/-4<br>PSIG       | 224  | 241 | 260 | 280 | 301 | 324 | 348 | 372  | 399  | 426  | 456  |
| 36                            |                          | 224  | 247 | 271 | 304 | 318 | 342 | 365 | 392  | 419  | 446  | 473  |
| 48                            |                          | 246  | 265 | 285 | 307 | 330 | 353 | 375 | 398  | 425  | 453  | 483  |
| 60                            |                          | 244  | 262 | 282 | 302 | 323 | 346 | 370 | 392  | 419  | 445  | 472  |
| 24                            | Subcooling<br>+/-2 DEG F | 14   | 13  | 13  | 13  | 13  | 13  | 13  | 13   | 13   | 13   | 13   |
| 36                            |                          | 13   | 13  | 13  | 13  | 13  | 13  | 13  | 13   | 13   | 13   | 13   |
| 48                            |                          | 11   | 11  | 11  | 11  | 10  | 10  | 10  | 10   | 10   | 10   | 10   |
| 60                            |                          | 7  | 7   | 7   | 7   | 6   | 6   | 6   | 6    | 6    | 6    | 5    |



**Table 8. Cooling Performance - HP / DF Models**

| 80 DB / 67 WB Deg. Return Air |                          | Air Temperature Entering Evaporator Coil, Degree F |     |     |     |     |     |     |      |      |      |      |
|-------------------------------|--------------------------|--|-----|-----|-----|-----|-----|-----|------|------|------|------|
| COOLING INPUT (1000 BTU)      | Pressure                 | 65°  | 70° | 75° | 80° | 85° | 90° | 95° | 100° | 105° | 110° | 115° |
| 24                            | Suction<br>+/-2 PSIG     | 131  | 133 | 135 | 137 | 138 | 139 | 141 | 142  | 144  | 145  | 147  |
| 36                            |                          | 128  | 129 | 130 | 131 | 132 | 134 | 135 | 136  | 137  | 138  | 139  |
| 48                            |                          | 129  | 131 | 132 | 133 | 134 | 135 | 136 | 137  | 137  | 139  | 140  |
| 60                            |                          | 126  | 128 | 129 | 131 | 132 | 132 | 132 | 135  | 136  | 136  | 138  |
| 24                            | Liquid+/-4<br>PSIG       | 205  | 228 | 251 | 283 | 296 | 319 | 342 | 365  | 387  | 410  | 432  |
| 36                            |                          | 223  | 246 | 269 | 292 | 315 | 338 | 362 | 385  | 408  | 431  | 454  |
| 48                            |                          | 230  | 249 | 269 | 290 | 311 | 334 | 356 | 380  | 407  | 434  | 462  |
| 60                            |                          | 244  | 264 | 283 | 304 | 326 | 350 | 373 | 399  | 425  | 452  | 481  |
| 24                            | Subcooling<br>+/-2 DEG F | 8  | 8   | 8   | 8   | 8   | 8   | 8   | 8    | 8    | 8    | 8    |
| 36                            |                          | 9  | 9   | 8   | 8   | 8   | 8   | 8   | 7    | 7    | 7    | 7    |
| 48                            |                          | 6  | 6   | 6   | 6   | 6   | 6   | 6   | 6    | 6    | 6    | 6    |
| 60                            |                          | 9  | 9   | 9   | 9   | 8   | 8   | 8   | 8    | 8    | 8    | 8    |

**Table 9. Heating Performance - HP / DF Models**

| 70 Deg. F Return Air     |                          | Air Temperature Entering Evaporator Coil, Degree F |     |     |       |     |     |     |     |     |     |     |     |
|--------------------------|--------------------------|--|-----|-----|-------|-----|-----|-----|-----|-----|-----|-----|-----|
| COOLING INPUT (1000 BTU) | Pressure                 | 0°   | 5°  | 10° | 17°   | 20° | 25° | 35° | 40° | 47° | 50° | 55° | 60° |
| 24                       | Suction<br>+/-2 PSIG     | 24   | 32  | 39  | 48    | 53  | 62  | 78  | 87  | 99  | 104 | 112 | 121 |
| 36                       |                          | 29   | 36  | 42  | 47    | 51  | 58  | 72  | 80  | 90  | 95  | 101 | 109 |
| 48                       |                          | 25   | 33  | 40  | 48    | 53  | 64  | 79  | 84  | 97  | 99  | 111 | 119 |
| 60                       |                          | 25   | 33  | 40  | 48    | 55  | 62  | 77  | 84  | 91  | 95  | 107 | 114 |
| 24                       | Liquid+/-4<br>PSIG       | 239  | 244 | 249 | 256   | 260 | 267 | 281 | 289 | 299 | 303 | 310 | 317 |
| 36                       |                          | 267  | 274 | 281 | 290   | 294 | 301 | 315 | 322 | 332 | 336 | 343 | 350 |
| 48                       |                          | 261  | 270 | 280 | 289   | 294 | 303 | 320 | 319 | 335 | 336 | 352 | 361 |
| 60                       |                          | 276  | 285 | 293 | 302   | 309 | 317 | 333 | 341 | 353 | 357 | 365 | 374 |
| 24                       | Subcooling<br>+/-2 DEG F | 8  | 8   | 8   | 8     | 8   | 9   | 10  | 10  | 11  | 11  | 11  | 12  |
| 36                       |                          | 21   | 20  | 19  | 17.89 | 17  | 16  | 14  | 13  | 12  | 11  | 10  | 9   |
| 48                       |                          | 22   | 22  | 23  | 24    | 25  | 25  | 25  | 25  | 25  | 24  | 24  | 24  |
| 60                       |                          | 28   | 28  | 29  | 30    | 30  | 30  | 30  | 30  | 33  | 32  | 31  | 31  |

**Table 10. Blower Performance - AC**

| Model | 0 through 0.80 in. w.g. External Static Pressure Range |                                       |      |      |      |                    |      |      |      |                              |     |     |     |
|-------|--|---------------------------------------|------|------|------|--------------------|------|------|------|------------------------------|-----|-----|-----|
|       | "ADJUST"<br>Jumper<br>Setting                          | Blower Control Jumper Speed Positions |      |      |      |                    |      |      |      |                              |     |     |     |
|       |  | "COOL" Speed - cfm                    |      |      |      | "HEAT" Speed - cfm |      |      |      | "CONTINUOUS FAN" Speed - cfm |     |     |     |
|       |  | A                                     | B    | C    | D    | A                  | B    | C    | D    | A                            | B   | C   | D   |
| 24    | +  | 1100                                  | 880  | 660  | 440  | 1100               | 1000 | 900  | 815  | 550                          | 440 | 330 | 220 |
|       | NORM   | 1000                                  | 800  | 600  | 400  | 1100               | 1000 | 900  | 815  | 500                          | 400 | 300 | 200 |
|       | —  | 900                                   | 720  | 540  | 360  | 1100               | 1000 | 900  | 815  | 450                          | 360 | 270 | 180 |
| 36    | +  | 1540                                  | 1320 | 1100 | 880  | 1400               | 1200 | 1100 | 975  | 770                          | 660 | 550 | 440 |
|       | NORM   | 1400                                  | 1200 | 1000 | 800  | 1400               | 1200 | 1100 | 975  | 700                          | 600 | 500 | 400 |
|       | —  | 1260                                  | 1080 | 900  | 720  | 1400               | 1200 | 1100 | 975  | 630                          | 540 | 450 | 360 |
| 48    | +  | 1980                                  | 1760 | 1540 | 1320 | 1350               | 1200 | 1100 | 1000 | 990                          | 880 | 770 | 660 |
|       | NORM   | 1800                                  | 1600 | 1400 | 1200 | 1350               | 1200 | 1100 | 1000 | 900                          | 800 | 700 | 600 |
|       | —  | 1620                                  | 1440 | 1260 | 1080 | 1350               | 1200 | 1100 | 1000 | 810                          | 720 | 630 | 540 |
| 60    | +  | 2200                                  | 1980 | 1760 | 1540 | 1480               | 1380 | 1280 | 1180 | 1100                         | 990 | 880 | 770 |
|       | NORM   | 2000                                  | 1800 | 1600 | 1400 | 1480               | 1380 | 1280 | 1180 | 1000                         | 900 | 800 | 700 |
|       | —  | 1800                                  | 1620 | 1440 | 1260 | 1480               | 1380 | 1280 | 1180 | 900                          | 810 | 720 | 630 |

**Table 11. Blower Performance - HP**

| Model | 0 through 0.80 in. w.g. External Static Pressure Range |                                       |      |      |      |                    |      |      |      |                              |     |     |     |
|-------|--|---------------------------------------|------|------|------|--------------------|------|------|------|------------------------------|-----|-----|-----|
|       | "ADJUST"<br>Jumper<br>Setting                          | Blower Control Jumper Speed Positions |      |      |      |                    |      |      |      |                              |     |     |     |
|       |  | "COOL" Speed - cfm                    |      |      |      | "HEAT" Speed - cfm |      |      |      | "CONTINUOUS FAN" Speed - cfm |     |     |     |
|       |  | A                                     | B    | C    | D    | A                  | B    | C    | D    | A                            | B   | C   | D   |
| 24    | +  | 1100                                  | 880  | 660  | 440  | 1150               | 1035 | 690  | 690  | 550                          | 440 | 330 | 220 |
|       | NORM   | 1000                                  | 800  | 600  | 400  | 1000               | 900  | 600  | 600  | 500                          | 400 | 300 | 200 |
|       | —  | 900                                   | 720  | 540  | 360  | 1000               | 900  | 600  | 600  | 450                          | 360 | 270 | 180 |
| 36    | +  | 1430                                  | 1320 | 1100 | 880  | 1495               | 1380 | 1150 | 1150 | 715                          | 660 | 550 | 440 |
|       | NORM   | 1300                                  | 1200 | 1000 | 800  | 1300               | 1250 | 1000 | 1000 | 650                          | 600 | 500 | 400 |
|       | —  | 1170                                  | 1080 | 900  | 720  | 1300               | 1200 | 1000 | 1000 | 585                          | 540 | 450 | 360 |
| 48    | +  | 1980                                  | 1760 | 1540 | 1320 | 2070               | 1840 | 1610 | 1610 | 990                          | 880 | 770 | 660 |
|       | NORM   | 1800                                  | 1600 | 1400 | 1200 | 1800               | 1600 | 1400 | 1400 | 900                          | 800 | 700 | 600 |
|       | —  | 1620                                  | 1440 | 1260 | 1080 | 1800               | 1600 | 1400 | 1400 | 810                          | 720 | 630 | 540 |
| 60    | +  | 2200                                  | 1980 | 1760 | 1540 | 2300               | 2070 | 1840 | 1840 | 1100                         | 990 | 880 | 770 |
|       | NORM   | 2000                                  | 1800 | 1600 | 1400 | 2000               | 1800 | 1600 | 1600 | 1000                         | 900 | 800 | 700 |
|       | —  | 1800                                  | 1620 | 1440 | 1260 | 2000               | 1800 | 1600 | 1600 | 900                          | 810 | 720 | 630 |

NOTE - 1st Stage airflow is 70% of 2nd Stage airflow (full capacity) in cooling mode.

**NOTE:** This appliance is tested to 0.58 static with a filter and 0.5 static without a filter.

**Table 12. Minimum Circulation Airflow**

| Charge (oz) | 60 - 80 | 80 - 100 | 100 - 120 | 120 - 140 | 140 - 160 |
|-------------|---------|----------|-----------|-----------|-----------|
| Qmin (CFM)  | 135     | 169      | 203       | 237       | 271       |

## Refrigerant Detection System



**FIGURE 6. Example of Clear, Unobstructed Sensor Inlet**

### Sensor Maintenance

It is recommended to check the state of the sensor every 6 months, at the beginning of each cooling and heating season.

- Ensure that the sensor opening is clear and free of debris.
- Check that the sensor cable is in good condition.
- DO NOT use abrasive cleaning solutions or detergents to clean sensor opening.
- DO NOT use flammable compressed air solutions to clean the sensor opening.
- DO NOT vacuum sensor inlet opening, as this could cause damage to the sensor internal components.
- Replace sensor if the opening is not clean or free of debris.
- When cleaning the evaporator coil, remove sensor from the coil. Follow recommended coil cleaning guidelines as described in installation instructions.

### Modes of Operation

The modes of operation for the RDS Non-Communicating Blower Control Board are Initializing, Normal, Leak Detected, and Fault.

#### Initializing

The RDS Non-Communicating Blower Control Board is establishing connection with the refrigerant detection sensor and is completing an initial five (5) minute purge sequence.

#### Normal

The HVAC system is functioning normally. The RDS Non-Communicating Blower Control Board has not detected a refrigerant leak.

### Leak Detected

When the RDS Non-Communicating Blower Control Board detects a refrigerant leak:

The RDS Non-Communicating Blower Control Board shuts off the (R) input (24VAC power) to the thermostat, which de-energizes the outdoor unit compressor and heat sources, such as gas and/or electric strip heat. No heating or cooling demands will be met.

The RDS Non-Communicating Blower Control Board activates the blower (high speed). The blower purges refrigerant from the cabinet, plenum, and ductwork.

After the RDS Non-Communicating Blower Control Board determines the refrigerant levels are below the safety threshold, the blower will continue to function for an additional seven (7) minutes.

After the blower sequence is complete, the HVAC system resumes normal operation.

**NOTE** – The HVAC system may not maintain a cooling or heating setpoint if a significant leak exists. Any refrigerant leaks that remain unaddressed for an extended time may cause the HVAC system to shut down on a low refrigerant pressure limit condition.

### Fault

When a fault is detected within the RDS Non-Communicating Blower Control Board, the indoor blower engages and remains engaged at a constant output until the fault is cleared.

### Diagnostic Codes

The RDS Non-Communicating Blower Control Board is equipped with a multi color LED within its enclosure. The LED signals the state of the RDS Non-Communicating Blower Control Board.

See Table 13 to review the diagnostic codes.

**Table 13. LED Diagnostic Codes**

| State                      | LED Diagnostic Code                         | Action   |
|----------------------------|---|--|
| Initializing               | Flashing green <sup>1</sup>                 | Not Applicable   |
| Monitoring                 | Solid green with blue flash <sup>2</sup>    | Not Applicable   |
| Mitigating (Leak Detected) | Flashing blue                               | Check coil tubes for leak. Repair the issue and restart the equipment. |
| Fault/Service              | Solid blue, interrupted by issue flash code | Refer to Table 14 for troubleshooting steps.                           |

1. A rapid flash indicates the RDSC is in the process of sensor enumeration

2. A blue flash indicates the mitigation process has previously occurred.

## Red LED Diagnostic Codes

Red diagnostic codes indicate a specific RDS Non-Communicating Blower Control Board issue. Yellow diagnostic codes indicate the sensor's position (if applicable).

**Table 14. Red LED Diagnostic Codes**

| Red Flash | Applies to Individual Sensor(s) | Issue                                 | Action  |
|-----------|---------------------------------|---------------------------------------|---|
| 1         | Yes                             | Sensor indicates fault                | Replace the sensor (Cat. # 27J27)   |
| 2         | No                              | Float Switch Active                   | Check if drain line float switch is installed.  |
| 3         | Yes                             | Incompatible sensor type              | Replace with a compatible sensor (Cat. # 27J27)   |
| 4         | Yes                             | Sensor communications issue           | Check sensor connection. Ensure connection is clean and tight.  |
| 5         | No                              | R-input not available                 | Check for 24VAC power connection to the R terminal inputs on the RDSC. R-inputs must be energized for the RDSC to function. |
| 6         | No                              | Invalid configuration of sensor count | Verify the DIP switch setting is correct and matches the number of sensors being used.                                      |

## Test Button Functionality

The RDS Non-Communicating Blower Control Board is equipped with a Test/Reset button. The Test button can be used to complete several functions, depending on the mode of operation of the RDS Non-Communicating Blower Control Board.

Table 15 lists the functions of the Test button during each mode of operation.

**Table 15. Test Button Function**

| Mode of Operation | Press the Test Button to...   |
|-------------------|---|
| Normal            | Trigger a leak detection response. Verify all equipment is wired correctly into the RDSC (after installation).                                |
| Leak Detected     | Reset the RDSC to a normal mode of operation after a previous leak has been detected and purged from the HVAC system.                         |
| Fault             | Reset the RDSC after troubleshooting and resolving a fault condition. If the fault is not resolved, the RDSC will enter the Fault mode again. |

## Test Button - Additional Functions

Table 16 lists the additional functions of the Test Button while the RDS Non-Communicating Blower Control Board is functioning within the states of Initializing, Monitoring, Leak Detection, Servicing and Fault. Refer to "Table 13. LED Diagnostic Codes" on the page previous to this one.

**Table 16. Additional Button Functions**

| State        | Press | Action   |
|--------------|-------|--|
| Initializing | Short | Skips remaining pre-purge after sensors are recognized by the RDSC                       |
| Initializing | Long  | Reset control  |
| Monitoring   | Short | Clear purge-counter if prior mitigation has occurred; Test mitigation                    |
| Monitoring   | Long  | Reset control  |
| Mitigating   | Short | If testing mitigation, end test  |
| Servicing    | Short | Reevaluate fault condition - if cleared return to monitoring, otherwise update indicator |
| Servicing    | Long  | Reset control  |
| Fault        | Short | Reevaluate fault condition - if cleared return to monitoring, otherwise update indicator |
| Fault        | Long  | Reset control  |

## Thermostat Compatibility

Thermostats that preserve memory settings are compatible with the RDS Non-Communicating Blower Control Board. Examples include:

- Battery-powered thermostats
- Analog thermostats
- Smart thermostats
- Late-model programmable thermostats
- *Early-generation digital and programmable thermostats may not retain the operation mode and temperature setpoints after a power outage.*

The following scenarios are likely to occur when home occupants are not available to adjust the thermostat setpoints as the system is recovering from leak detection and resuming normal operation:

- Heating could be lost during a cold night
- Cooling could be lost during a hot day
- The thermostat could reset to an incorrect temperature setpoint

## Compatibility Verification

Complete the following process to determine whether the thermostat is compatible with the RDS Non-Communicating Blower Control Board.

- 1 - Change the thermostat's current setpoint and operating mode.
- 2 - Power cycle the breaker to the furnace.

**NOTE** – Wait five (5) minutes before supplying power to the furnace breaker.

- 3 - Note whether the thermostat maintained its setpoints and operating mode.

- a. If the thermostat maintained the settings, the thermostat is compatible with the RDS Non-Communicating Blower Control Board.
- b. If the thermostat did not maintain its setpoint and/or operating mode, the thermostat is not compatible with the RDS Non-Communicating Blower Control Board. Recommend replacing with a compatible thermostat.

## Additional Applications

In zoned applications, all dampers will remain open when the RDS Non-Communicating Blower Control Board is in Fault or Leak Detected mode. Normal heating and cooling demands are permissible, but the blower will remain engaged until the fault condition is addressed.

### Zone HVAC System

If the RDS Non-Communicating Blower Control Board is installed in a zone HVAC system, the RDS Non-Communicating Blower Control Board will open all zone dampers if a leak is detected.

**NOTE** – *Proper wiring of the zone panel to the RDS Non-Communicating Blower Control Board is required for all zone dampers to open.*

After the purge sequence is complete, the zone system will resume normal operation.

### External Alarm

*(For applications with external alarms wired directly to the RDS Non-Communicating Blower Control Board.)*

The RDS Non-Communicating Blower Control Board triggers the external alarm system when it enters Leak Detected mode. For alarm notifications, the RDS Non-Communicating Blower Control Board provides a dry relay contact that is rated 3A at 30 VAC/DC.

## Start Up Test Procedure

The RDS Non-Communicating Blower Control Board is equipped with a Test/Reset button, see “Test Button Functionality” on page 28. The system will then run through a purge sequence for five (5) minutes. After the purge sequence is complete, proceed to testing cooling demand and heating demand.

### Cooling Demand

- 1 - Prompt a cooling demand at the thermostat.
- 2 - Press the Test button on the RDS Non-Communicating Blower Control Board.  
The system then executes a leak detection response.
- 3 - Observe the following sequence:
  - a. The LED indicator flashes the sequence for leak detection (flashing blue).
  - b. The blower powers up.
  - c. The outdoor compressor powers down.
- 4 - Press the Test button to terminate the simulated Leak Detected mode upon test completion.

### Heating Demand

- 1 - Prompt a heating demand at the thermostat.
- 2 - Press the Test button on the RDS Non-Communicating Blower Control Board.  
The system then executes a leak detection response.
- 3 - Observe the following sequence:
  - a. The LED indicator flashes the sequence for leak detection (flashing blue).
  - b. The blower powers up.
  - c. The outdoor compressor powers down.
- 4 - Press the Test button to terminate the simulated Leak Detected mode upon test completion.

The installation of the RDS Non-Communicating Blower Control Board is complete after both sequences are successfully completed.



## Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely.

Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before starting decommissioning.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure, ensure that:
  - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
  - all personal protective equipment is available and being used correctly;
  - the recovery process is supervised at all times by a competent person;
  - recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with instructions.
- h) Do not overfill cylinders (no more than 80% volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another REFRIGERATING SYSTEM unless it has been cleaned and checked.

**NOTE:** Equipment shall be labelled stating that it has been decommissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing FLAMMABLE REFRIGERANTS, ensure that there are labels on the equipment stating the equipment contains FLAMMABLE REFRIGERANT.