

POD

ASSEMBLY INSTRUCTIONS



Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.



www.babyjogger.com

For the sake of your precious cargo, please read these warnings before using the POD.

WARNING:

- Avoid serious injury from falling or sliding out. Always use safety harness(es). Always use the crotch strap(s) in combination with the waist belt(s).
- Do not install a car seat or any other seating device not approved by the manufacturer inside this chassis.
- Make no modifications to this chassis.
- Do not allow any of the child's body, clothing, shoe laces, or toys to come in contact with moving parts.
- Never leave child unattended in the chassis.
- Not for use during inclement weather such as snow or ice.
- Use extra caution and slower speed when using on wet or uneven surfaces.
- Check passenger(s) frequently, during use in extreme hot or cold weather to avoid heat exhaustion or hypothermia. Ensure the seating compartment is properly ventilated and the child/children stay adequately hydrated.
- Recommended temperature limits are 32°F to 100°F (0°C-38°C).
- Do not use with children who exceed the weight limitations.
- Do not use cleaning solvents; clean only with mild soap and water.
- Do not use the POD on stairs. Resulting damage to the POD will not be covered under warranty.
- This unit sits one or two passengers. When used with one passenger, the passenger must be seated in the center position.
- Maximum weight capacity – 100lbs (45 kg) (combined passenger(s) and baggage weight.)
- Maximum baggage weight – 8lbs (3.6 kg)
- Children must be at least 12 months and able to sit upright unassisted to ride in chassis.
- Check tire pressure before each use. Your tires should be filled to a maximum of 50 psi.

FRAME



1 Remove chassis from box and set wheels aside.



2 Insert handlebar into handlebar attachment brackets until both sides click into place.



3 To unfold the chassis: Lift handle up and away from the lower frame until it clicks into place.



4 Turn chassis upright and attach red safety strap to snap located just below the fold mechanism on right side of chassis.

CANOPY



1 Lay chassis back so the handle is resting on the ground. Locate the white support rod at the top rear of the POD seating compartment.



2 Insert support rod into black canopy brackets located on each side of the frame.




3 Locate the white support rod at the top center of the POD seating compartment.



4 Insert support rod into black canopy brackets located on each side of the frame.





REAR WHEELS & PARKING BRAKE

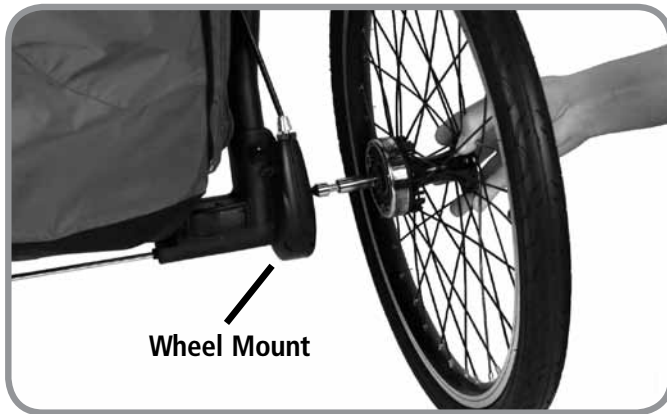

1 To install rear wheels: Insert wheel axle into wheel mount on chassis frame until it clicks into place.

NOTE: Ensure the wheel is properly secured to frame, test by gently trying to pull the wheel out after installing.

2 To remove rear wheels: Press the wheel release button while sliding the wheel away from the wheel mount.

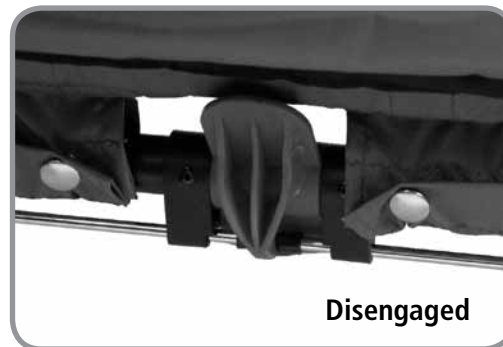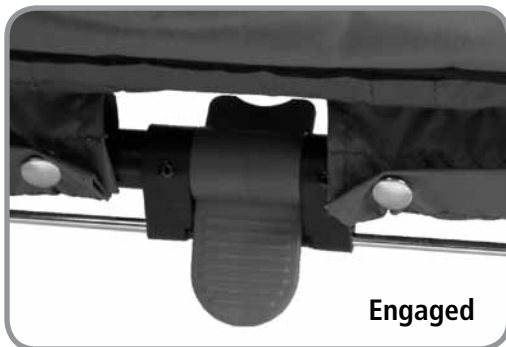

1 Push the brake pedal down to engage the parking brake.

2 Lift up on the brake pedal to disengage the parking brake.



WARNING: Engage parking brake before loading and unloading passenger(s).

SAFETY HARNESS

ATTACHMENT & CONFIGURATION


For use with a single passenger:



1 Buckle shoulder straps of harness yoke into center two buckles on back of seat.



2 Place child in center seating position. Buckle harness yoke to center crotch strap buckle.

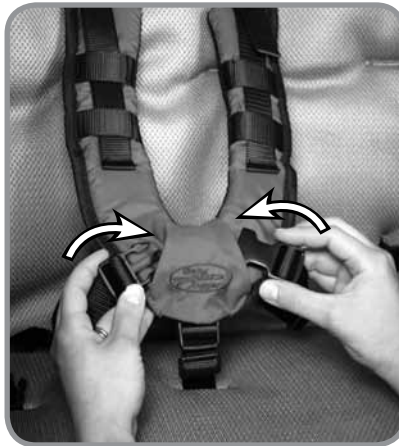

3 Buckle center waist belt.



WARNING:
When used with only one child, the child must be seated in the center seating position.

For use with two passengers:



1 Buckle shoulder straps of harness yoke into two right buckles on back of seat.



2 Place child in right seating position. Buckle harness yoke to the crotch strap buckle. (The center crotch buckle will not have a harness yoke attached.)



3 Buckle the waist belt.

4 Repeat steps 2 and 3 to secure second child into safety harness on the left side of the seat.

SAFETY HARNESS

SAFETY HARNESS ADJUSTMENT

To adjust shoulder harness length:



1 Thread webbing strap through plastic guide on upper buckle to lengthen or shorten.



2 Rethread webbing strap through front of harness yoke to hold in place.

To adjust crotch strap:



1 Thread webbing strap through plastic guide on lower buckle to lengthen or shorten.

To adjust waist belt:



1 Thread webbing strap through waist buckle to lengthen or shorten.

To adjust shoulder harness height:



1 Pull mesh seat back down to expose upper harness buckles.




2 Unclip harness yoke from seat back.



3 Slide the buckle down to desired height.



4 Thread harness yoke through lower opening on mesh seat back.

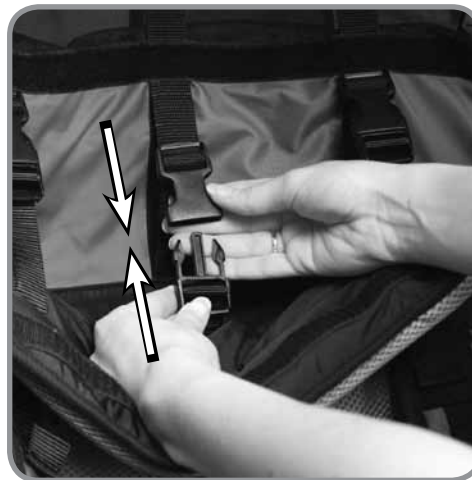


5 Fasten harness buckle to seat back and repeat on other side.

ADJUSTABLE HANDLEBAR

The handlebar on the POD has two height adjustments.

To adjust the height of the handlebar:

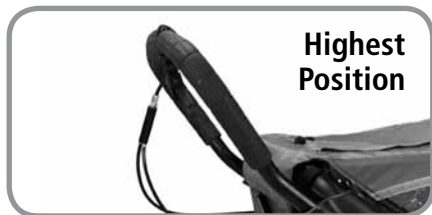


1 Press buttons on each side of the handlebar attachment brackets while pulling the handle tubing out.



2 Flip the handlebar over and reinsert into handlebar attachment brackets until both sides click into place.

HAND BRAKE

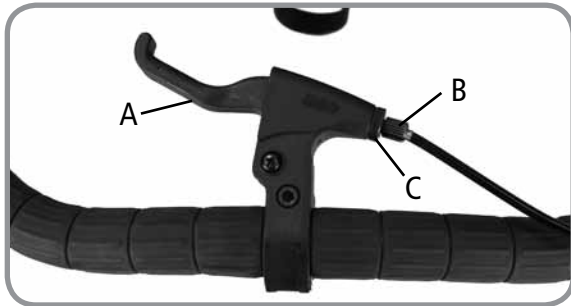

- The POD Chassis is equipped with a hand brake for use with the Jogging Kit and Stroller Kit.

Adjusting the hand brake: If you do not have good braking action, simply squeeze the brake handle (A) five or six times. If the problem persists, loosen the brake's cylinder ring (B) to adjust the small ring (C) and then move the small ring away from the handle to tighten the cable. (Please do not over tighten!) To lock the rings, tighten the cylinder ring (B) against the handle while holding the small ring (C) in place.



- 1** Squeeze the hand brake to give you better control over your stroller while jogging or running or while strolling on uneven terrain.



- 2** To rotate the hand brake's position on the handle bar, loosen the bolt using the supplied Allen wrench. Rotate the hand brake assembly on the handlebar until it is in a comfortable position. Tighten the bolt to secure hand brake.

BUG CANOPY STORAGE & FOLDING

To store the bug canopy:



1 Completely unzip bug canopy.



2 Roll bug canopy up to the top of the POD.



3 Secure bug canopy in place by using the provided loops and barrels.

To fold POD:



1 Unsnap red safety strap. Stand in front of chassis. Pull fold handles and lift up to fold.



2 Connect storage strap to underside of chassis frame.

CHASSIS CARE & MAINTENANCE



Seat and Frame Care

- The chassis seat and frame can be wiped cleaned using a soft, damp cloth.

Windows

- Plastic windows can crack at low temperatures. If chassis is stored or left in cold weather you will need to let it warm up before folding or unfolding.

Wheels and Axles

- Check wheels for loose spokes and axles before every use. Moisture – especially from the beach – can rust the wheels, footbrake and parts of frame. Spraying regularly with a silicone lubricant will keep your chassis and wheels clean and safe.

Storage

- Store your POD in a dry, well ventilated area. To avoid mildew, make sure fabric is dry before storing. Sunshine can fade fabric and dry out tires, so storing your POD indoors will prolong its good looks. However if you do store it outside, using a tarp will help protect against weather wear. If using the POD as a trailer, do not store attached to your bicycle.

POD CONVERSION KITS

The POD offers three different conversion kits for Stroller, Jogger, or Trailer mode (sold separately) allowing you to choose how you want to use your POD. All conversion kits are easy to install with no tools necessary so you are free to change your activity on the go. The POD Rain Canopy is also sold separately.



Trailer Kit



Jogger Kit



Stroller Kit

PRODUCT REGISTRATION ON-LINE AT

www.babyjogger.com/register

Baby Jogger's Warranty:

Baby Jogger warrants that the frame is free of manufacturer defects for 5 years from date of purchase. Manufacturer's defects include but are not limited to the breaking of welds and frame tube damage. Textile or soft side materials and all other components shall be warranted for one year from the date of purchase (except for tubes and tires). Proof of purchase is required to make a warranty claim and the warranty is only extended to the original purchaser.

THIS WARRANTY DOES NOT COVER:

- Normal wear and tear
- Corrosion or rust
- Incorrect assembly, or the installation of third party parts or accessories not compatible with the original design
- Accidental or intentional damage, abuse or neglect
- Commercial Use
- Improper storage/care of the unit
- Accidents or injuries related to leaving your child(ren) unattended

This warranty specifically excludes claims for indirect, incidental, or consequential damages. The implied warranties of merchantability and fitness for a particular purpose is according to the specific warranty period for this model unit at time of purchase. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

E-MAIL: customerservice@babyjogger.com

CALL: 1-800-241-1848 between 9am – 6pm EST, Mon. – Fri.

FAX: 1-804-262-6277

MAIL: THE BABY JOGGER COMPANY
8575 Magellan Parkway
Suite 1000
Richmond, VA 23227

Thank You!

We wish you many happy journeys with your new POD! Your POD is a great product, and we are proud to manufacture it. If you have any questions or comments, please give us a call at:

1.800.241.1848



Baby Jogger is a Division of Dynamic Brands

8575 Magellan Parkway, Suite 1000 • Richmond, VA 23227
T: 800.241.1848 • F: 804.262.6277 • www.babyjogger.com