 
 


**36-Gallon Aquarium &
Stand Combo
SKU # 5292480**

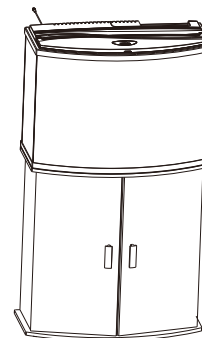


COMPONENTS

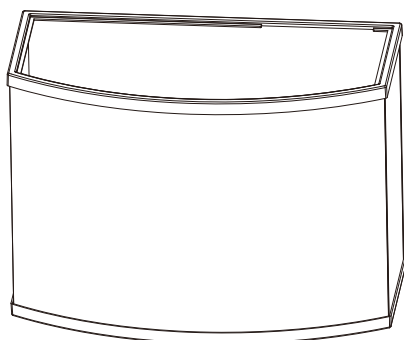


A

**36-Gallon Glass Aquarium
(x1)**

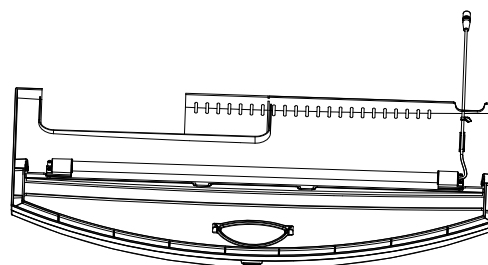


B

**Lid with Lighting & Feeding Door
(x1)**

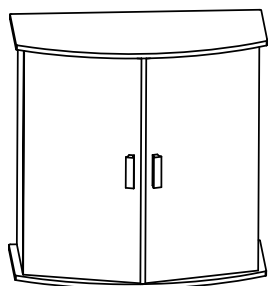

C

**Aquarium Stand with Two
Adjustable Shelves
(x1)**

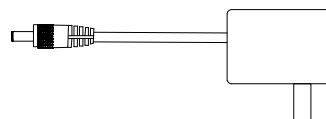

D

**AC Adapter
(x1)**

PLEASE READ IMPORTANT WARNING AND CAUTION STATEMENTS

IMPORTANT SAFETY INSTRUCTIONS


WARNING:

To guard against injury, basic safety precautions should be observed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER: To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following water is employed in the use of aquarium equipment. For each of the following authorized service facility for service or discard the appliance:

1. If the appliance shows any sign of abnormal water leakage, immediately unplug it from the power source.
2. Carefully examine the appliance after installation. It should not be plugged in if there is water on the parts not intended to be wet.
3. Do not operate any appliance if it has a damaged cord or plug, if it is malfunctioning, or if it has been dropped or damaged in any manner.
4. To avoid the possibility of the appliance plug or outlet getting wet, position aquarium stand and tank to one side of a wall-mounted outlet. This will prevent water from dripping onto the plug or outlet. A drip-loop, shown in the figure to the right, should be arranged by the user for each cord connection of an aquarium appliance to an outlet. The drip-loop is that part of the cord below the level of the outlet, or the connector if an extension cord is used, to prevent water traveling along the cord and coming in contact with the outlet.
5. If the plug or outlet does get wet, DO NOT unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then, unplug and examine for presence of water in the outlet.
6. Close supervision is necessary when any appliance is used by or near children.
7. To avoid injury, do not touch moving or hot parts, such as heaters, reflectors, lamp bulbs, and the like.
8. Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.
9. Do not use an appliance for anything other than its intended use. The use of attachments that are not recommended or sold by the manufacturer may be dangerous.
10. Do not install or store the appliance where it will be exposed to weather or to temperatures below freezing.
11. Make sure an appliance mounted on a tank is securely installed before operating it.
12. Read and observe all the important notices on the appliances.
13. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
14. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to defeat this safety feature.
15. Before installing, cleaning, and maintenance, disconnect the tank from the main power supply. Every time you unplug the appliance from the power socket, make sure your hands and receptacle are dry. Not for use by the elderly or children.
16. Operate the appliance under the rated voltage and frequency. Failure to do so may cause the product to break or cause danger to the human body.
17. Never place polystyrene under the bottom frame of this aquarium.
18. Your aquarium must be located on a surface that is flat and level and able to withstand the weight of the aquarium when filled with water, gravel, etc.
19. All aquarium and stand locations should take into account the position of floor boards/joists, etc., bearing in mind the weight to be supported.
20. When cleaning the aquarium tank, please DO NOT use any organic solvent or sharp objects such as rocks and razor edged algae scrapers.
21. Never place an aquarium on top of electrical appliances. This guarantee covers leakages arising from either faulty materials or workmanship. We cannot be responsible for breakage of glass.
22. Never try to move a full or partially full aquarium. Never lift an aquarium with wet hands.
23. Choose the appropriate quantity of compatible fish.

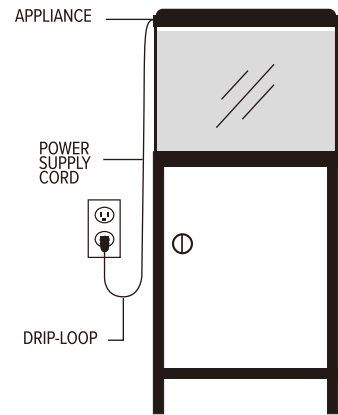

SAVE THESE INSTRUCTIONS


ASSEMBLY

STEP 1

Lightly spray inside and outside of glass tank (Component A) with water and wipe with a soft cloth. Consider where you are going to place the aquarium and corresponding stand. Keep away from direct light such as windows and any areas with large temperature fluctuations. Place tank and stand on a flat, level surface strong enough to support its weight.


STEP 2

Place the lid on the tank and connect the LED light to the AC adapter.

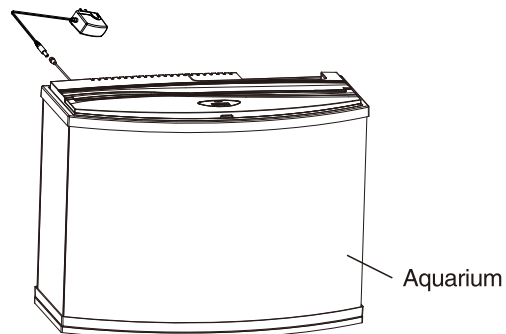


STEP 3

Adjust the included shelves to fit your desired setup. The height of each shelf is adjustable and they can be placed on both the left and right sides of the stand.

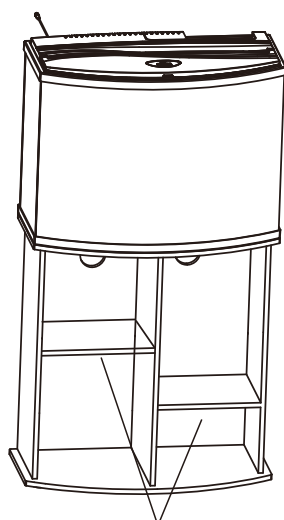

The shelves can be adjusted up and down.

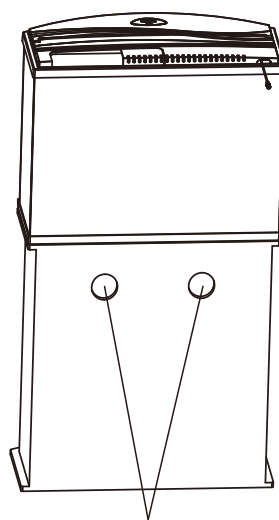

If using a canister filter, cords exit through here.

STEP 4

Rinse gravel and desired décor in water and add to inside of tank. It is recommended you add about one pound of gravel per gallon of water. Fish are happiest when they have décor and plants to hide, play, and sleep in.


STEP 5

Install a filter (sold separately). **You must include a filter and its corresponding media (filter cartridge) in order to cycle water correctly and before you add fish.** Do not plug in the filter before filling the tank.

Recommended Filter: Top Fin® PF40 Silenstream™ Power Filter

Recommended Filter Media: Top Fin® PF-L Silenstream™ Filter Cartridge

If using a larger power filter, the rear filter opening on the lid can be expanded. Use scissors or a safety blade to remove the desired portion.

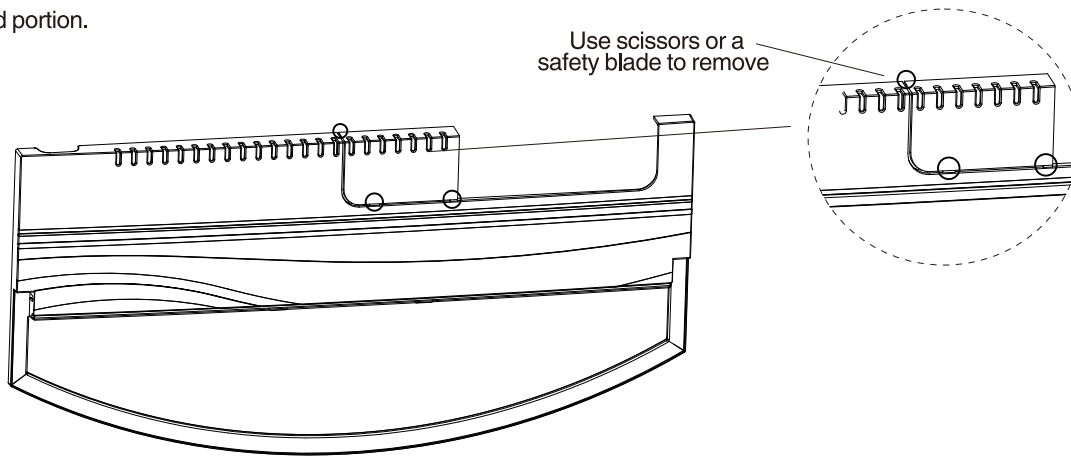

STEP 6

Fill your tank with room temperature water and add Top Fin® water conditioner (sold separately) according to the directions on the bottle. Using a water conditioner helps remove harmful chlorine and chloramines from tap water. **This is a necessary step.** Adding Top Fin® bacteria starter can also help with successful fish introduction.


STEP 7

DO NOT introduce fish into your tank immediately. Let water sit for 24 hours before introducing your fish. Follow the water conditioner instructions to make sure that the water is safe enough for fish before introducing fish into the tank. Talk to a pet-care associate or refer to a pet-care guide about the proper way to acclimate your fish to their new environment. Ensure you are choosing the appropriate quantity of compatible fish.



STEP 8

Plug in the LED light and filter (filter sold separately) and check that they are working normally. Use the inline switch to turn the LED light on/off. Be sure to leave a drip loop in both cords to prevent a shock hazard. Refer to page 2 for more details regarding drip-loop safety information.

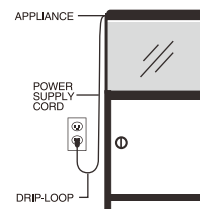

CONTACT US

If you are not satisfied with this product, return it with your valid proof of purchase for a refund. Conditions apply see store or PetSmart.com for details. For more information, please call 1-888-839-9638.

Dist. by/par: Pacific Coast Distributing, Inc., 19601 N. 27th Ave., Phoenix, AZ USA 85027
Made in China