


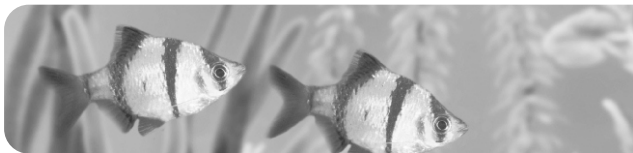

Automatic Feeder
Instruction Guide



Caution:

Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

KEY FEATURES:

- **Feeding time can be set to once or twice daily**
- **Feeding drum is ideal for flakes or granulates**
- **Battery powered**

INSTRUCTIONS:

See product diagram for clarification (Fig .I)

Batteries

Remove battery cover by applying light pressure to the locking clip. Insert batteries (2 x AA 1.5v alkaline batteries) according to the diagram located in the battery compartment.

Attention:

- Do not use rechargeable batteries.
- Remove batteries if consumed or if product is to be left unused for a long time.
- Clean the battery contacts and also those of the devices prior to battery installation.
- Do not mix old and new batteries.

- 
- Do not mix alkaline, standard (Carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Ensure that the battery compartment is fully closed and sits flush with the rest of the housing.

Filling the Feeding Drum

Adjust the slider to the closed position. Remove the drum by gently pulling it away from the feeder. Fill the drum with the desired amount of food and attach it to the feeder by matching up the two flat edges.

Selecting the Amount of Food to Feed

Adjust the slider located on the front of the feeding drum to dispense the desired amount of food.

Feeding Interval

Program the feeding interval to once or twice per day by adjusting the time switch to the 24H or 12H position.

Manual Operation

For feeding outside the pre-programmed times, press the manual button to operate the feeder a single time.

Positioning the Feeder Onto Your Tank


Attach the support bracket to your tank by sliding it down over the edge of your tank and tightening the adjustment screw until the bracket is firmly attached to tank edge. Slide the feeder onto



the bracket by aligning the raised edge located along the bottom of the feeder with the bracket slot. Slide the feeder into the slot until it stops. Once complete, make sure the drum is directly over the water

Cleaning

Do not use any soaps or detergents. Remove the feeding drum and thoroughly clean and rinse with warm water. Make sure the drum is completely dry before adding food.

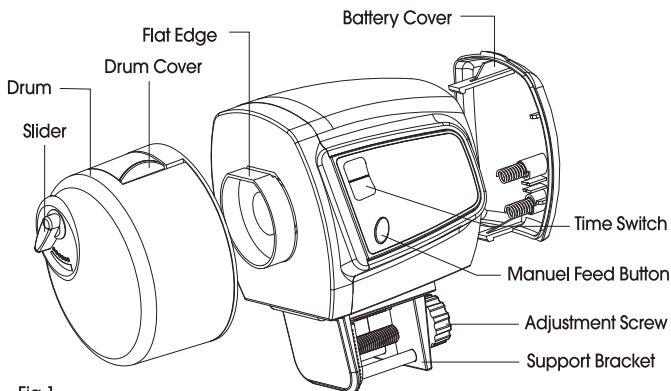

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Dist. par: Pacific Coast Distributing, Inc.
19601 N. 27th Ave., Phoenix, AZ USA 85027
Tel.: 1-888-839-9638