



# ***Instruction Manual***

## ***Programmable Lighting Timer***



If you are not satisfied with this product, return it with your valid proof of purchase for a refund. Conditions apply. See store or [PetSmart.com](http://PetSmart.com) for details.

For more information, please call 1-888-839-9638.

Dist. by/par: Pacific Coast Distributing, Inc.  
19601 N. 27th Ave., Phoenix, AZ USA 85027

### **Features**

1. Rated: 125VAC/60HZ/15Amps/1800Watts.
2. The Programmable Lighting Timer has two outlets which can control two electric devices.
3. The timer is certified to ETL, UL, & CSA.
4. Extension cord can be used with this device, but the total wattage must not exceed 1800W.

### **Operating Instructions**

This timer can be programmed for three different scenarios: when the appliance should “turn on”, when the appliance should “turn off” or with the appliance “always on”

1. Appliance “turn on” time setting:

Step 1: Turn the dial clockwise to have the arrow point to current local time (see fig. 1)

Step 2: Slide the side switch to the right ☺ icon (see fig. 2)

Step 3: Select the time period (or periods) you would like home appliance to turn on, make sure the segments within this time period (or periods) are all pushed in, then pull up all the remaining segments (see fig. 3). Each segment represents 30 minutes.



fig. 1



fig. 2



fig. 3

2. Appliance “turn off” time setting:

Step 1: Turn the dial clockwise to have the arrow point to current local time (see fig. 1)

Step 2: Slide the side switch to the right ☹ icon (see fig. 2)

Step 3: Select the time period (or periods) you want the home appliance to turn off, make sure the segments within this time period (or periods) are all pulled up, then push in all the remaining segments (see fig. 3). Each segment represents 30 minutes.



fig. 1

fig. 2

fig. 3

3. Appliance "always on" setting:

Slide the side switch to the left ☹ icon, all timer settings will be cancelled and the appliance will be always on, no matter which segments are pushed in or pulled up (see fig. 1)

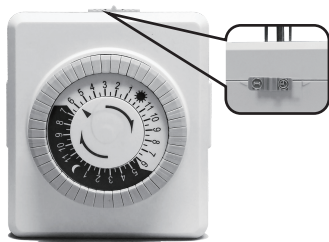


fig. 1

Notes

1. Plug the timer into the wall outlet and plug the appliance into the timer before changing any timer settings.
2. This timer can support two home appliances to both be on or off at the same time.
3. Adjust the arrow to current local time after an electrical interruption to reset the timer.

Safety Instructions

1. Before use, carefully inspect your new timer for damage. Do not operate timer if there is any damage.
2. Unplug appliances when not in use or when moving timer to another outlet. Unplug timer when not in use.
3. Unplug the appliance before cleaning or servicing.
4. Do not exceed the electrical rating. The timer is rated for 15Amps/1800Watts.
5. Do not attempt to modify this timer in any way. This timer has no user serviceable parts. Examine the timer periodically for damage.
6. For indoor use only.
7. Keep out of reach of children and pets.
8. Extension cord may be used with this device. However, the total wattage should not exceed 1800W.

Consignes de sécurité

1. Avant l'utilisation, inspecter soigneusement votre nouvelle minuterie afin de vous assurer qu'elle ne présente pas de dommages. Evitez de faire fonctionner la minuterie si vous constatez des dommages.
2. Débrancher les appareils ainsi que la minuterie lorsqu'ils ne sont pas utilisés. Vous devez également débrancher la minuterie lors du changement de prise.
3. Débrancher l'appareil avant le nettoyage ou l'entretien.
4. Ne jamais dépasser la puissance électrique. La minuterie est évaluée à 15 Amps/1800Watts.
5. Ne jamais essayer de modifier de quelque manière que ce soit la présente minuterie. Cette minuterie ne comporte aucune pièce susceptible d'être réparé par l'utilisateur. Examiner la minuterie périodiquement pour détecter les dommages.
6. Pour une utilisation intérieure uniquement.
7. Tenir hors de la portée des enfants et des animaux de compagnie.
8. La rallonge pourrait être utilisée avec cet appareil. Cependant, la puissance totale ne doit pas dépasser 1800W.

