

INSTRUCTION MANUAL

AQUARIUM WATER CHANGER

25/50'



WARNING

When filling aquarium, make sure the water temperature is the same as the water in the aquarium. Fill tank slowly so that any temperature adjustment can be made.


If you are not satisfied with this product, return it with your valid proof of purchase for a refund. Conditions apply. See store or petsmart.com for details. For more information about Top Fin® products,

please call 1-888-839-9638.

Dist. by/par: Pacific Coast Distributing, Inc. 19601 N. 27th Ave., Phoenix, AZ USA 85027

(Continued)

COMPONENTS

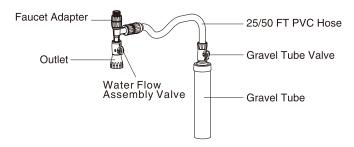

INSTRUCTIONS



Connect Faucet Adapter to faucet for both siphoning and filling the aquarium.



 
Connect Gravel Tube to Gravel Tube Valve. Fully submerge the Gravel Tube in the aquarium.




To fill turn the faucet on. Please be sure Water Flow Assembly Valve is turned off.



When the aquarium is full, close the Gravel Tube Valve and turn off the faucet.



 To siphon turn on the Water Flow Assembly Valve. Water will begin to siphon from the aquarium and flow from the outlet.



When connecting the 25/50 FT PVC Hose to the Gravel Tube Valve, make sure the tube firmly attaches to the hose barb. Tighten the compression nut over the 25/50 FT PVC Hose.

ADVICE FOR USE

To help maintain a healthy aquarium, change 10% of the water weekly or 25% monthly. Use a water conditioner (sold separately) every time you add fresh tap water to your aquarium.