



**VIVID VIEW
AQUARIUM 3G**



INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS


WARNING:

To guard against injury, basic safety precautions should be observed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER: To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt repairs by yourself. Return the appliance to an authorized service facility for service or discard the appliance.

1. If the appliance shows any sign of abnormal water leakage, immediately unplug it from the power source.
2. Carefully examine the appliance after installation. It should not be plugged in if there is water on the parts not intended to be wet.
3. Do not operate the appliance if it has a damaged cord or plug, the appliance is malfunctioning, or the appliance has been dropped or damaged in any way.
4. To avoid the possibility of the appliance, plug, or outlet getting wet, position aquarium stand and tank to one side of a wall-mounted outlet. This will prevent water from dripping onto the plug or outlet. A drip-loop, shown in the figure to the right, should be arranged by the user for each cord connection of an aquarium appliance to an outlet. The drip-loop is the part of the cord below the level of the outlet, or the connector if an extension cord is used, to prevent water traveling along the cord and coming in contact with the outlet.

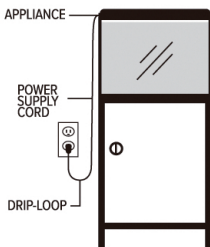

5. If the plug or outlet does get wet, DO NOT unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then, unplug and examine for presence of water in the outlet.
6. Close supervision is necessary when any appliance is used by or near children.
7. To avoid injury, do not touch moving or hot parts such as heaters, reflectors, lamp bulbs, and the like.
8. Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.
9. Do not use an appliance for anything other than its intended


use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.

10. Do not install or store the appliance where it will be exposed to weather or to temperatures below freezing.
11. Make sure an appliance mounted on a tank is securely installed before operating it.
12. Read and observe all the important notices on the appliances.
13. If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for less amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
14. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to tamper with this safety feature.
15. Before installing, cleaning, and maintenance, disconnect the tank from the main power supply. Every time you unplug the appliance from the power socket, make sure your hands and receptacle are dry. Not for use by the elderly or children.
16. Operate the appliance under the rated voltage and frequency. Failure to do so may cause the product to break or cause danger to the human body.
17. Never place polystyrene under the bottom frame of this aquarium.
18. Your aquarium must be located on a surface that is flat and level and able to withstand the weight of the aquarium when filled with water, gravel, etc.
19. All aquarium and stand locations should take into account the position of floor boards/joists, etc., bearing in mind the weight that needs to be supported.
20. When cleaning the aquarium tank, please DO NOT use any organic solvent or sharp subjects such as rocks and razor edged algae scrapers.
21. Never place an aquarium on top of electrical appliances. This guarantee covers leakages arising from either faulty materials or workmanship. We cannot be responsible for breakage of glass.
22. Never try to move a full or partially full aquarium. Never lift an aquarium with wet hands.
23. Choose the appropriate quantity of compatible fish for your aquarium.

SAVE THESE INSTRUCTIONS

FEATURES

- Capacity: 3 Gallons
- LED light with easy-touch light switch on lid
- Convenient feeding door

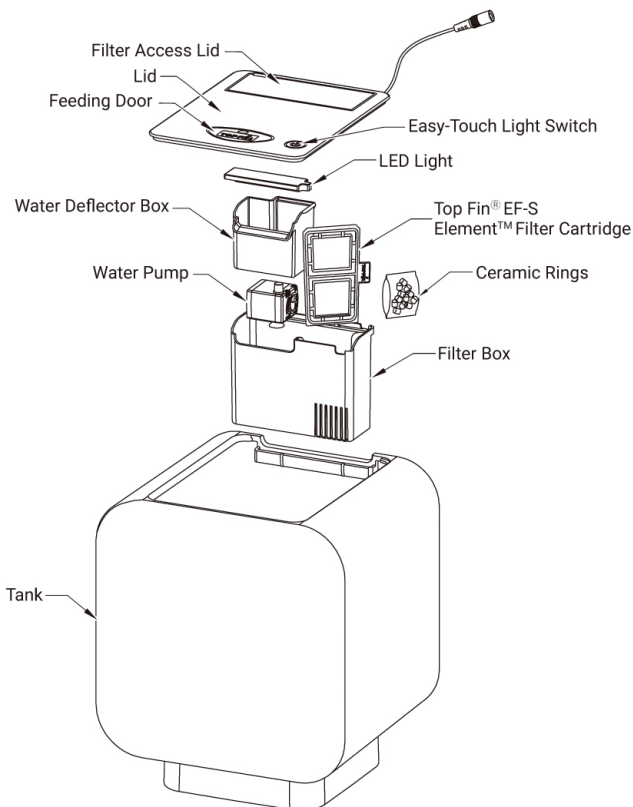

OPERATING INSTRUCTIONS

1. Consider where you are going to place the aquarium. Keep it away from an area with direct light and large temperature fluctuations.
2. Place the aquarium on a flat, level surface strong enough to support its weight.

3. Thoroughly rinse aquarium with water. Do not use soap or detergent as they may harm fish.
4. Place the rinsed gravel into the tank and then set up your desired ornaments and plants.
5. Install the filter box and carefully fill the tank with water, making sure not to disturb the gravel and decor.
6. DO NOT plug in before proper installation. Switch on only after the installation is completed and checked.
7. Use the proper water conditioner to remove harmful chlorin and chloramines from top water. DO NOT introduce fish into your tank immediately. Let water sit for 24 hours before introducing your fish. Follow the water conditioner instructions to make sure that the water is safe enough for fish before introducing fish into the tank.
8. Plug the adapter into the outlet. Connect the water pump plug to the outlet. Create a drip-loop for both of the filter and aquarium. (Fig. 1)
9. Use touch switch on aquarium hood to turn LED light off and on.

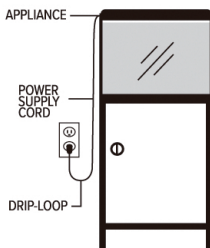


Fig. 1

MAINTENANCE

WARNING: DO NOT use any abrasive cleaning solutions, spones, or pads. These abrasive surfaces can scratch the plastic fish tank.

Change the filter media

The filter cartridge will get dirty. Change the cartridge every 3 to 4 weeks.

Maintaining proper water quality is an important part of keeping your fish.

Without clean water, fish can become stressed and more susceptible to diseases and parasites. Follow these water care guidelines to keep your fish and aquarium healthy:

- Tap water is toxic to fish. Make water safe with water conditioners and beneficial bacteria.
- Water conditioners and beneficial bacteria are needed for new aquarium setup and with every water change.
- Water conditioners remove harsh chemicals and minerals from tap water.
- Beneficial bacteria boost healthy levels of good bacteria to

remove harmful ammonia and nitrites.

- Keep your fish and aquarium healthy by testing the water.
- Test water every 1-2 weeks to monitor aquarium health.
- Partially change water every 2-4 weeks to keep it balanced.

If you're experiencing water issues in your aquarium, troubleshoot these common problems:

- Reduce algae
- Manage ammonia levels
- Improve water clarity
- Balance pH levels
- Care for sick fish

After you have properly set up your aquarium and established good water quality, follow these steps:

- Only add about three new fish at a time.
- Take fish home immediately after purchasing.
- Float the sealed bag of fish on top of the water for about 15 minutes to balance the water temperature.
- Carefully add the fish to their new home, and be careful to avoid adding water from the bag to the aquarium.
- Feed the new fish 1-2 hours after adding them to their new home.
- Do not overfeed your fish! It is one of the most common mistakes.

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

If you are not satisfied with this product, return it with your valid proof of purchase for a refund. Conditions apply. See store or PetSmart.com for details. For more information about TOP FIN ® products, please call 1-888-839-9638.

Dist. by/par: Pacific Coast Distributing, Inc.
19601 N. 27th Ave., Phoenix, AZ USA 85027

TF-21-958155 IM