 


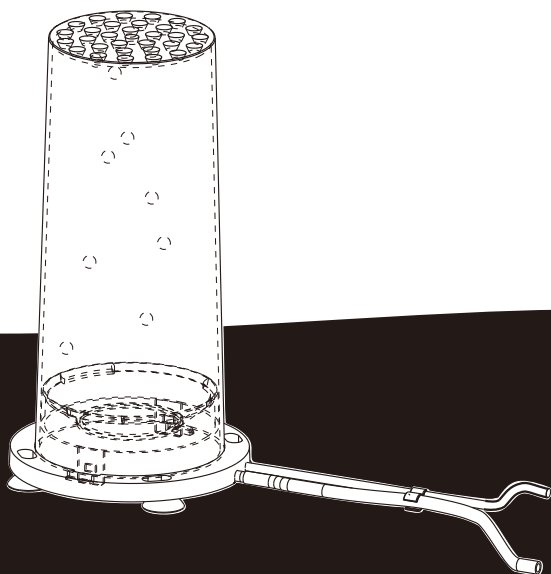

Gettin' Groovy Aeration Décor



INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS

WARNING:

 
To guard against injury, basic safety precautions should be observed, including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER:

To avoid possible electric shock, special care should be taken since water is employed in the use of aquarium equipment. For each of the following situations, do not attempt repairs by yourself. Return the appliance to an authorized service facility for service or discard the appliance.

1. Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to be wet.
2. Do not operate any appliance if it has a damaged cord or plug, or if it is malfunctioning or has been dropped or damaged in any manner.
3. To avoid the possibility of the appliance, plug, or outlet getting wet, position aquarium stand and tank to one side of a wall-mounted outlet to prevent water from dripping onto the outlet or plug. A drip-loop, shown in the figure below, should be arranged by the user for each cord connecting an aquarium appliance to an outlet. The drip-loop is the part of the cord below the level of the outlet, or the connector if an extension cord is used, to prevent water traveling along the cord and coming in contact with the outlet.
4. Close supervision is necessary when any appliance is used by or near children.
5. Always unplug an appliance from an outlet when not in use, before putting on or taking off parts, and before cleaning. Never yank the cord to pull the plug from the outlet. Grasp the plug and pull to disconnect.
6. Do not use an appliance for anything other than its intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
7. Do not install or store the appliance where it will be exposed to weather or temperatures below freezing.
8. Make sure an appliance mounted on a tank is securely installed before operating it.
9. Read and observe all the important notices on the appliances.
10. The appliance is intended FOR HOUSEHOLD USE ONLY.
11. This appliance has no user serviceable parts.

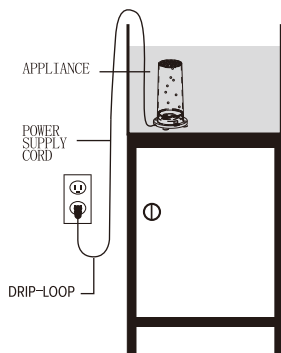

SAVE THESE INSTRUCTIONS

 
IMPORTANT SAFETY INSTRUCTIONS

FEATURES:

- 4 cord management clips
- 1 air tube and 1 air valve
- 4 suction cups
- Aeration décor with cylinder attachment and Custom ColorFlow® Lighting
- Decorative gems

INSTALLATION:

1. Connect the aeration décor to the airline tubing and the airline tubing to the air pump (pump sold separately). Add gems to cylinder before placing the accessory inside the aquarium. For best performance, we recommend using with a Top Fin AIR-2000 Air Pump or larger. Air valve (included with décor) can also be used to customize and control the amount of air flow pumped into your décor. See diagram below for appropriate setup. A check valve (sold separately) can also be added to prevent accidental back flow. It may take up to 24 hours for this product to achieve full air flow.
2. Move aquarium gravel away from desired decor placement to expose bottom of tank. Place aeration décor inside the aquarium and firmly press down to ensure suction cups on base stick to the bottom of your tank. Ensure all air has left the accessory. This accessory may need to be tilted on its side to release all air bubbles. Put decorative gems inside. Remove cylinder attachment with a quarter turn, add gems, and replace attachment onto base.
3. Connect the plug to an appropriate outlet. Create a drip loop to prevent water from traveling along the cord and contacting the plug or outlet.

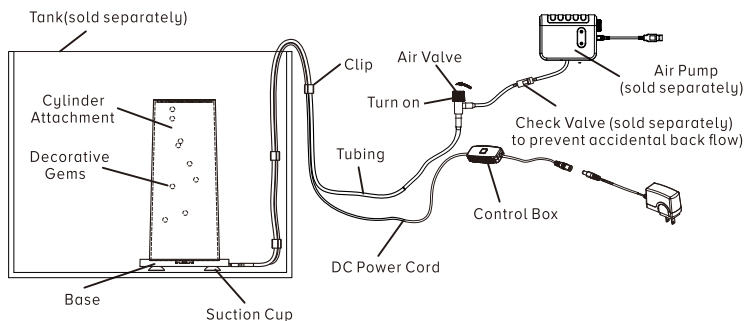


CUSTOM COLORFLOW® LIGHTING:

The decoration will begin to flow through the available color spectrum once it's turned on. Click the button on the light control box to stop on a single color. Click the button again to switch to white light. Pressing the button a third time will cause the decor to begin flowing through the full color spectrum again. Hold button down for three seconds to turn the lights off.

SAFETY, CLEANING & MAINTENANCE

 1. Contains small parts. This is not a toy. Keep out of reach of children.
2. Unplug from the main power source whenever product is moved.
3. Twist to remove cylinder attachment carefully to add decorative gems or to clean.
Rotate cylinder and loosen suction cups on base before removal. Otherwise, gems will be scattered in tank.
4. May take up to 24 hours to achieve full air flow.

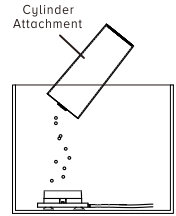

TROUBLESHOOTING:

If you experience with this accessory, please read through the troubleshooting section below before contacting customer service.

1. **Problem:** The LED light is dim or not functioning

Solution:

- a. Check if the power plug is connected correctly and securely and that the power switch is powered on
- b. Check if the control box is switched on

2. **Problem:** There are no bubbles

Solution:

- a. Check if the air pump is powered on
- b. Adjust the air pump flowrate switch to the maximum to increase the air volume
- c. Check if air valve is turned on
- d. Check if the air tubing is squeezed or bent
- e. Check if the vent on the base of the air pump is blocked

3. **Problem:** The bubbles are too small

Solution:

- a. Make sure you are using a suitable air pump. It is recommended to use the Top Fin Air-2000 or larger
- b. Adjust the air valve to maximum output
- c. If bubbles are still smaller than desired, consider upgrading to a larger air pump

4. **Problem:** The decorative gems are not floating correctly

Solution:

- a. Check if the air pump is powered on, refer to the operating instructions of the air pump
- b. Check if the air valve switch is not adjusted to the appropriate position, resulting in insufficient air pressure
- c. Check if the base vent is blocked
- d. If equipped with a one-way valve(not included in this product,sold separately), check if the direction of the check valve is reversed

5. **Problem:** The decorative gems are floating at the top of the accessory

Solution:

- a. Ensure that your water is clean and remove any excess particulates through appropriate water changes

FCC INSTRUCTIONS

CAUTION:

Please note that changes or modifications of this product not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

If you are not satisfied with this product, return it with your valid proof of purchase for a refund. Conditions apply.

See store or PetSmart.com for details.

For more information about Top Fin® products, please call 1-888-839-9638.



Dist. by/par: Pacific Coast Distributing, Inc.
19601 N. 27th Ave., Phoenix, AZ USA 85027

TF-21-1123750IM