

INSTRUCTION MANUAL



Electronic Highland Cow Toy SKU # 5350306



COMPONENTS



A

Plush cover



B

Electronic Ball



C

Screwdriver

PRODUCT OVERVIEW

Recording/Speaker



 
Power Button On/Off

PLEASE READ IMPORTANT WARNING AND CAUTION STATEMENTS ON Pg. 3


BATTERY INSTALLATION



1
Locate the hook and loop fastener at the back of the plush cover. Pull apart and remove the electronic ball.

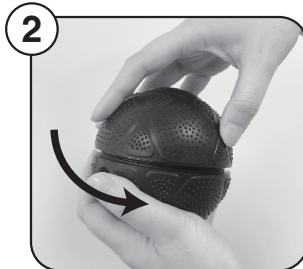

2
Unscrew the ball housing.

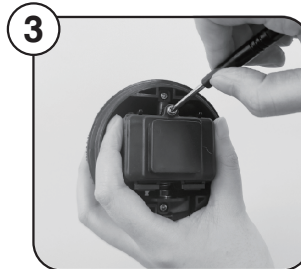

3
Locate the battery housing by finding the side of the internal motor with a single screw. Remove the screw using the included screwdriver.




4
Install 3 AAA batteries (sold separately). Replace the battery cover and secure tightly with the included screwdriver. Reverse the steps to reassemble the ball.

- Correct installation with regard to polarity (+ and -)
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries
- Remove batteries when product is not in use for an extended period of time
- Exhausted batteries are to be removed from the product


MATCHING PLUSH



Find the bottom opening of the plush jacket.

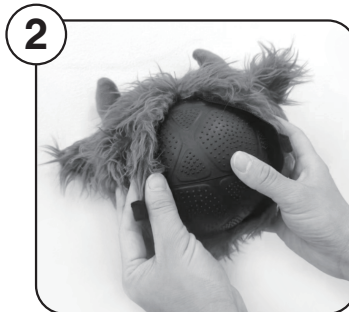

Put the ball inside the plush jacket.

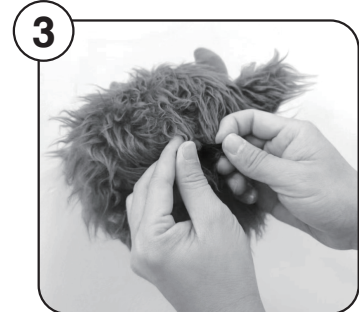

Match both sides of the hook and loop fastener to close.

- There are pull loops on both sides for easy opening and closing.
- Keep the fastener free of hair and debris.

INSTRUCTIONS FOR USE

STEP 1

This toy has 3 modes:

Mode 1: The ball will shake and make cow noises.

With the ball off, long press the power button until the ball beeps once and then release it.

Mode 2: The ball will shake and make no noise.

With the ball off, long press the power button until the ball beeps once. Continue to hold the power button until the ball beeps twice and then release it.

Mode 3: The ball will shake and mimic any audio it hears.

With the ball off, long press the power button until the ball beeps once. Continue to hold the power button until the ball beeps twice. Continue to hold the power button until the ball beeps three times.

The ball will record any sound it hears, replay that sound while jumping, stop jumping to record new audio, and then repeat.

STEP 2

The product will automatically standby after running for about 70 seconds, and will not trigger operation again within 5 seconds of standby. After 5 seconds, the product can be triggered again by voice control or tapping the ball.

STEP 3

In any mode, long press the button to hear a long "beep" sound and the product shuts down.

CLEANING & MAINTENANCE

1. The electronic ball cannot be cleaned with water, it can be wiped with a towel/wet towel.
2. If damaged, please do not give it to pets again.

WARNINGS

- Do not give this toy to aggressive chewers. This toy is great for medium and medium/large dogs. This toy is specifically designed for dog use only. Your dog may be afraid to approach an unfamiliar toy and may need your guidance.
- If the toy starts to slow down, Please prepare to replace the battery. Remove and replace the toy if it becomes damaged.
- Observe your pet's behavior with the toy for suitability. Some toys may be inappropriate for your pet.
- Ingestion of this product can result in serious injury. Contains small parts.
- Batteries can explode or cause injury if installed backward, disassembled, charged, crushed, mixed with used or other battery types, or exposed to fire or high temperatures.
- Remove all packaging and dispose of properly.
- Keep out of reach of children. Do not store near heat or flame.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

CONTACT US

For more information, please call 1-888-839-9638.

Dist. by/par: Pacific Coast Distributing, Inc., 19601 N. 27th Ave., Phoenix, AZ USA 85027

Made in China