

 
TOP·PAW[®]

for the love of dogs[™]

INSTRUCTION MANUAL

FLOWING FOUNTAIN 50 OZ
FLOWING FOUNTAIN 150 OZ
FLOWING FOUNTAIN 300 OZ

SKU # 5366720 , 5366721 , 5366865

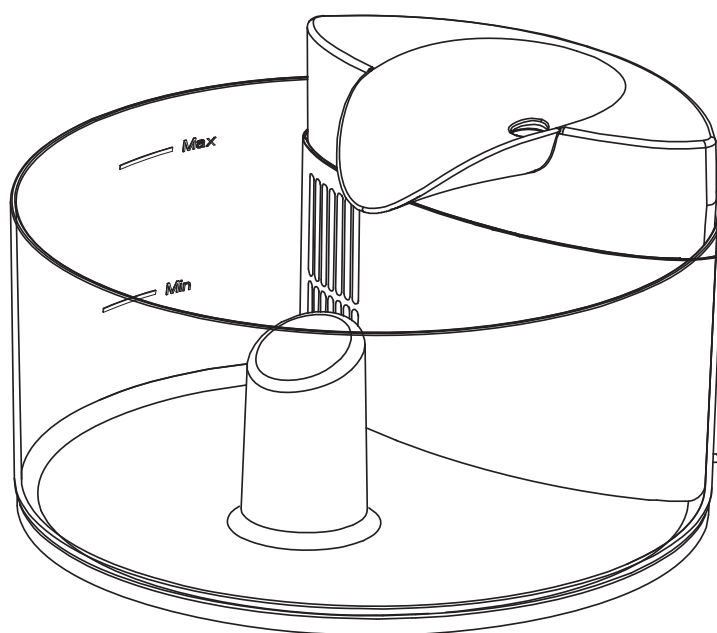

WARNING: When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:

- 1) Read all the instructions before using the appliance.
- 2) To reduce the risk of injury, supervise children closely when the appliance is in use.
- 3) To protect against electric shock, do not submerge adapter and USB connector in water or other liquids.
- 4) Only use attachments recommended or sold by the manufacturer.
- 5) This appliance is for indoor household use only. Do not use outdoors.
- 6) Do not unplug by pulling on cord. Grasp the adapter to disconnect.
- 7) If the cord, plug, or appliance has been damaged, dropped or malfunctions in any way, do not operate appliance. Call Customer Service immediately for further instructions.
- 8) To reduce the risk of electric shock, do not place or store portable appliance where it can fall or be pulled into a tub or sink.
- 9) Always unplug the appliance when not in use, before putting on or taking off parts, and before cleaning. Never pull on the cord to remove the adapter from the wall outlet.
- 10) Do not use this appliance for anything other than its intended use.
- 11) If the plug of this appliance gets wet, turn off the electricity to that electrical outlet. Do not attempt to unplug.
- 12) Examine this appliance after installation. Do not plug into electrical outlet if there is water on the electrical power cord or plug.

CAUTION

Do not allow pets to chew on or swallow any parts. If you are concerned your pet may chew the power cord, purchase a cord conduit (a hard plastic protector) at a hardware store.


The plastic fountain parts are BPA free. However, some animals have been known to be sensitive to plastic food and water containers. If your pet shows signs of an allergic reaction to the plastic, please discontinue use until you have consulted with your veterinarian.

NOTICE

- This fountain is intended to run continuously (always plugged into an electrical outlet), as long as the water level is maintained and the fountain is cleaned regularly. Even though the fountain is supplied with low water detection for protection, be sure to check the water level regularly to help prevent damage to the pump, as your pet will drink the water and some may evaporate.
- Check the power voltage and frequency and match those on the nameplate of the adaptor.
- Do not attempt repairs on the pump.
- Do not pull on the electrical power cord to remove the plug from the electrical outlet.
- To avoid the possibility of the plug or electrical outlet getting wet, the electrical outlet should be always above the level of the fountain.
- If an extension cord is necessary, an extension cord with a proper rating should be used.
- The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the appliance.
- Do not install or store the appliance where it will be exposed to weather or temperatures below 40°F.
- Read and observe all important notices listed on the appliance and in the packaging.
- Never wash the filter cartridge with soapy water as the soap residue will seep into the filter cartridge and cannot be removed. Only rinse the filter cartridge with water.
- Use only Top Paw® brand authorized replacement filter cartridges. If unauthorized filter cartridges are used, the warranty may be voided.
- Do not use outdoors. Do not run dry. For indoor household use only.

SAVE THESE INSTRUCTIONS

FLOWING FOUNTAIN 50 OZ
FLOWING FOUNTAIN 150 OZ
FLOWING FOUNTAIN 300 OZ

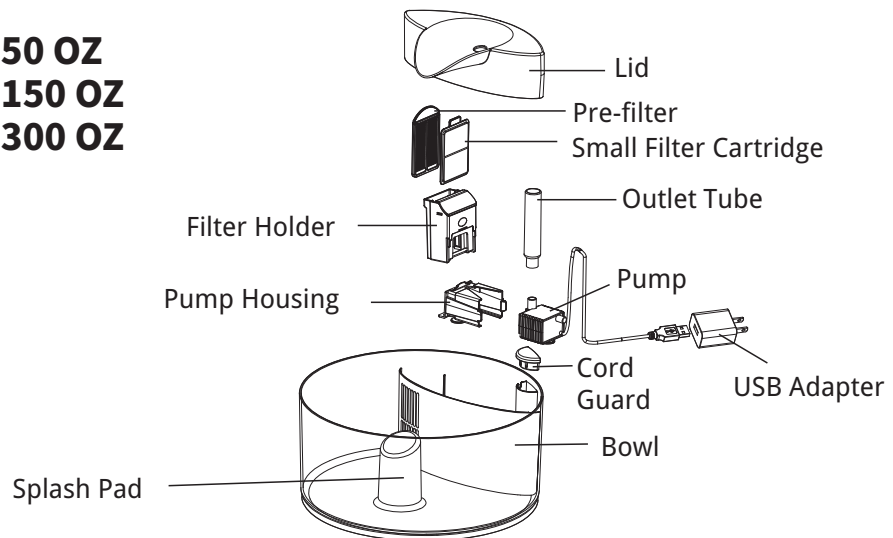





OPERATING INSTRUCTIONS

DO NOT RUN DRY - FOR INDOOR HOUSEHOLD USE ONLY

Important: Rinse the carbon filter thoroughly under clean water before use. This will remove any loose carbon dust, which is harmless to your pet.

NOTE: Always keep the water filled higher than the "Min" line to maintain better performance. Noise may arise or the pump may not work properly if fountain is lacking adequate water, or the pump, outlet tube and lid are out of alignment.

    - 1) Carefully remove all of the fountain components from the packaging and set aside prior to assembly.
- 2) As with any electrical device, check the electrical cord for any tears or damage before use.
- 3) The Top Paw® Flowing Fountain is assembled completely for immediate use. It is suggested that you rinse all fountain components (except for the adapter) with warm water before use. This will remove any residue from the manufacturing process. The pump housing, filter holder, and outlet tube are assembled as one removable part. Before use, ensure the bottom suction cups are secured in place and the outlet tube aligns with the lid. (Fig.1)
- 4) Place the fountain in a desired location. If placing on carpet, tile, or wood flooring, use a protective mat or other durable water-resistant surface. This will help protect your floor from any splashing or spills caused by your pet.
- 5) Insert the USB plug through the cable passage in the bowl. (Fig. 2)
- 6) Insert the USB cable through the edge slot and then insert the cord guard. (Fig. 3)
- 7) Once the fountain is securely positioned, fill in place with water. Do not run dry. Water must be filled to the "Min" line for pump to prime and operate. Do not fill past the "Max" fill line.
- 8) Make sure the cord, the adapter, and your hands are completely dry before you plug the fountain in. Connect the USB plug to the adapter, then plug the adapter into an electrical outlet. (Fig. 4)
- 9) Add water as needed. Do not let the water level fall below the "Min" line or the pump will shut off automatically. To properly pick up the fountain, use both hands to grip underneath the sidewalls of the bowl and lift.

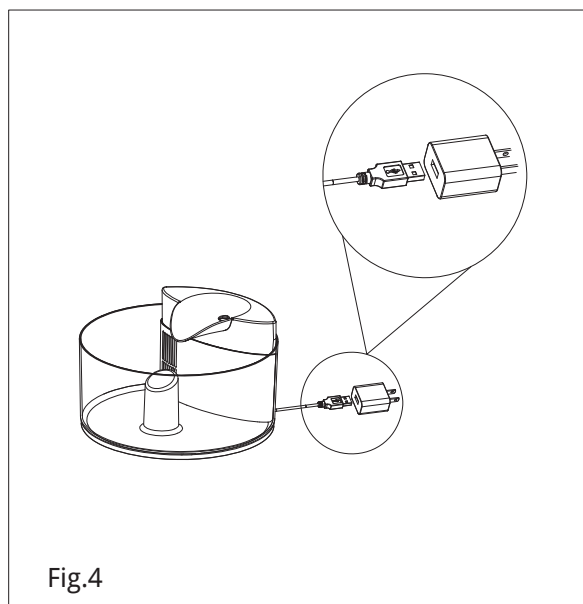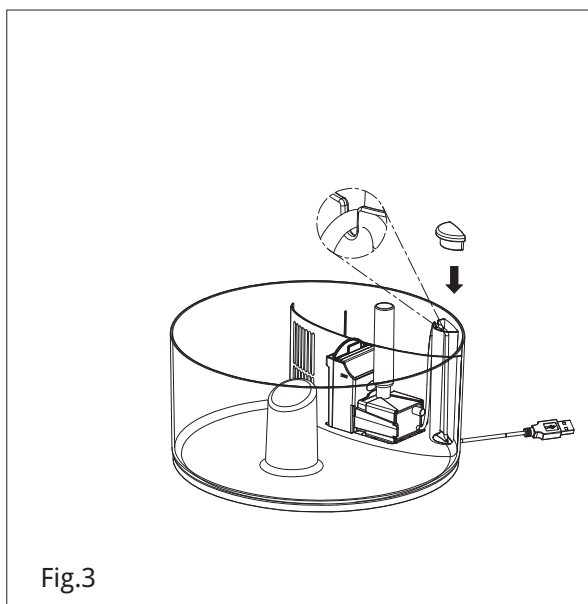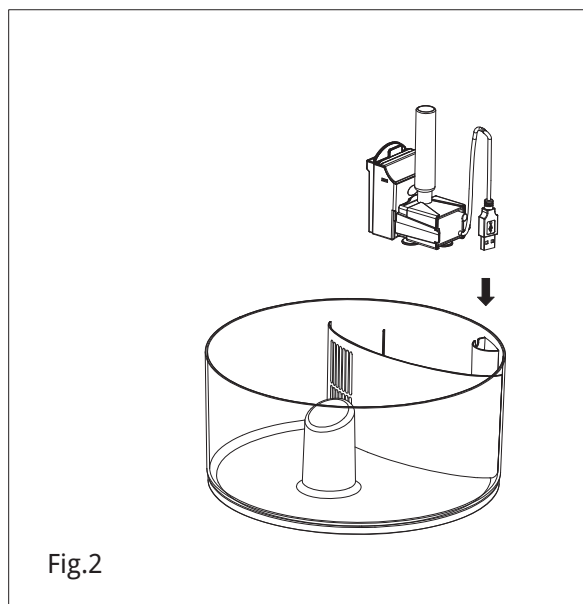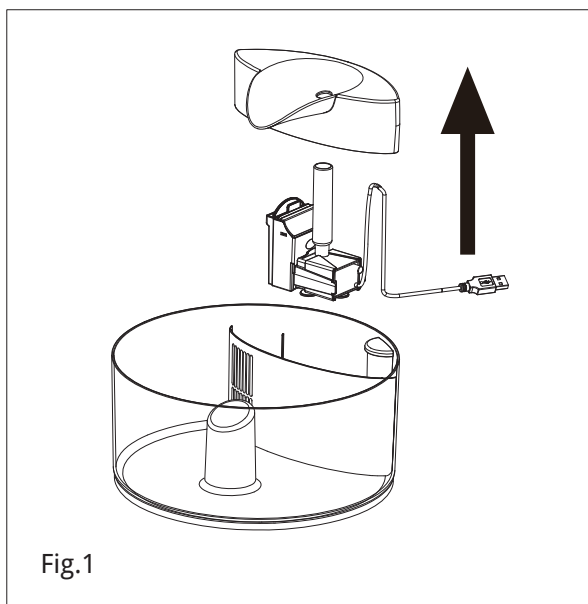

TOP PAW® FLOWING FOUNTAIN CARE AND CLEANING

Unplug the power cord before cleaning the fountain or replacing the filter.

Replace the Top Paw® Filter Cartridge every 2 weeks. Replace filters more frequently when using the fountain for multiple pets that produce a lot of saliva. The pre-filter is reusable. Rinse the pre-filter of debris regularly.

The fountain should be cleaned on a regular basis to continue working properly:

- 1) Once unplugged, pick the fountain up by the bottom of the bowl and carry it to the sink.
- 2) Remove and set aside the lid. Ensure the pump housing is still suctioned cupped securely to the bowl and pour out the water.
- 3) Take off the cord guard and remove the cord from the cord passage.
- 4) Pull the filter and pump housing suction cups free from the bowl and remove the assembly.
- 5) The filter and pump assembly fully dis-assembles for brush cleaning of all parts if needed. (Fig. 5)
- 6) Wash all parts in warm water and mild dish soap using a soft cloth.
DO NOT PLACE PARTS IN THE DISHWASHER.

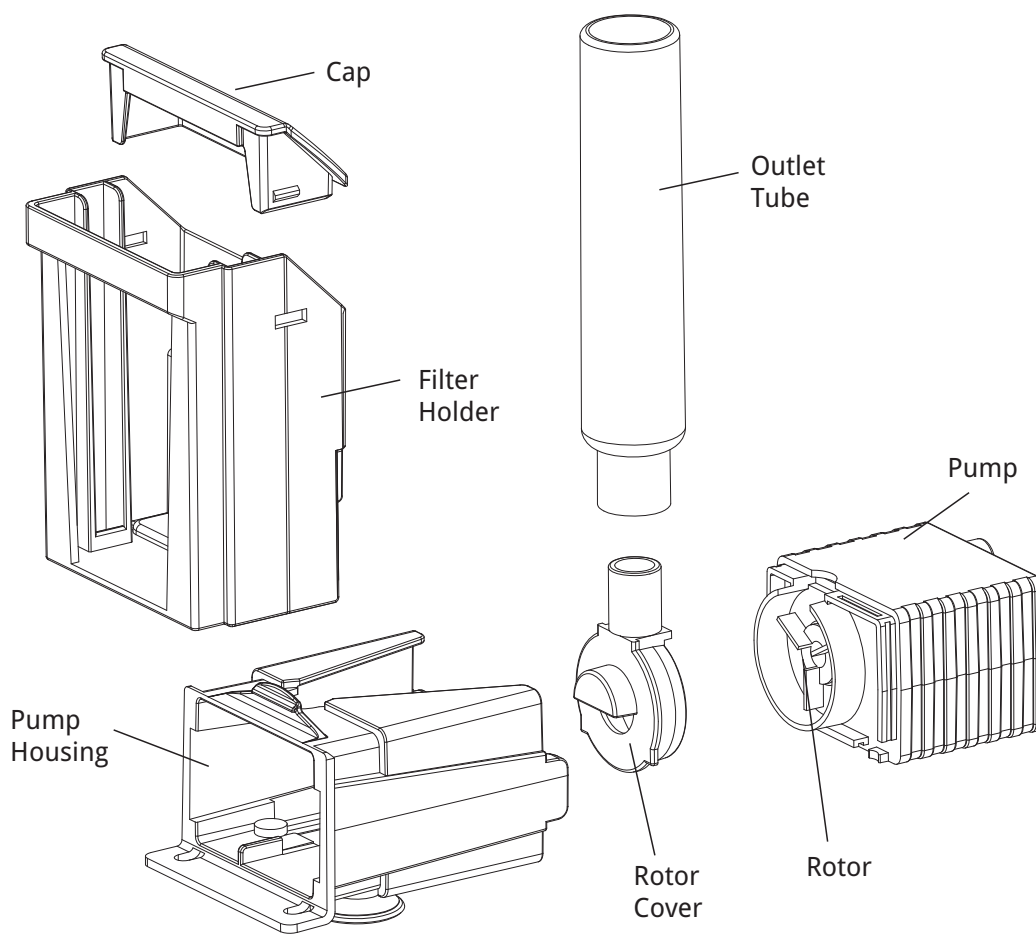


Fig.5

TROUBLE SHOOTING

Problem	Solutions
Fountain does not run when plugged in.	1. Check and ensure power source has a good connection. 2. Check and ensure water level is at least to the "Min" line for proper performance. 3. Ensure the pump bottom suction cups are in place, and the outlet tube aligns with the lid. 4. Fill with water and plug back in.
Fountain stops running after a period of time.	1. Check and ensure power source has a good connection. 2. Check and ensure water level is at least to the "Min" line for proper performance. 3. Clean the filter cartridge, or replace with a new one if needed. 4. Clean the pre-filter and remove all debris. 5. Dis-assemble, clean, and re-assemble the filter and pump assembly as illustrated in Fig. 5. 6. Fill with water and plug back in.
Fountain is noisy and acting abnormal.	1. Check and ensure power source has a good connection. 2. Check and ensure water level is at least to the "Min" line for proper performance. 3. Check to ensure the lid is positioned properly on the bowl. 4. Clean the filter cartridge, or replace with a new one if needed. 5. Clean the pre-filter and remove all debris. 6. Dis-assemble, clean, and re-assemble the filter and pump assembly as illustrated in Fig. 5. 7. Fill with water and plug back in.

FCC INSTRUCTIONS

CAUTION:

Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the use's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For more information, call 1-888-839-9638.

**Dist.by/par: Pacific Coast Distributing LLC
19601 N. 27th Ave., Phoenix, AZ USA 85027**

**TP-24-2551065 IM
MADE IN VIETNAM**