

Brands That Matter

Rubbermaid[®] Brilliance[™] Product Line

Guaranteed not to leak, Rubbermaid Brilliance food storage containers are intelligently crafted and beautifully designed. These BPA-free plastic containers are built with an airtight leak-proof seal and secure latches. Crystal-clear lids and bases make it easy to see what's inside and are stain- and odor- resistant, which helps them stay looking like-new. Featuring a splatter-free lid design, built-in vents allow steam to escape so you can conveniently microwave food without removing the lid. These food storage containers also save space, with a modular design that perfectly stacks in your fridge or lunch bag.

Care & Use

To keep your new containers performing at their best, please read the following:

- Remove packaging and wash before use.
- Made of microwave safe materials that can be used to reheat precooked foods to the proper recommended temperature. These containers are not intended for cooking.
- Excessive reheating time in the microwave may damage the container. Open latches to allow steam to vent when microwaving, this will also prevent splatter.
 - Reheating implies the maximum short term service temperature of a Rubbermaid container is 165°F followed by a cool down period. Maintaining temperatures at 165°F or higher for more than 30 seconds is considered cooking, and is outside the intended use of these products.
- Use care when handling container with hot contents or after reheating in the microwave.
- To avoid damage to the wiper seal, remove lid after microwaving and allow to cool.
- To avoid severe damage to the container, do not reheat food high in salt, oil, fat or sugar.
- Reheating and/or melting butter or foods with high sugar content (i.e. chocolate, candies, jelly, syrup) could lead to severe damage and potentially melt the container.
- Avoid using plastic wrap on or inside the container during microwave use. The plastic wrap could heat, melt and adhere to the container walls.
- Follow your microwave manufacturer's recommendation when defrosting or reheating foods.
- Brilliance is designed to resist stains from tomato based foods.
- Reheating foods containing curry seasoned with the herb turmeric may stain the containers.
- Do not use in a conventional oven, convection oven, under browning elements or on a stovetop.
- This item is made of materials that are safe for normal household dishwashers. Be sure that the item is secured so that it does not come in contact with the dishwasher element to avoid melting.
- This item is made of materials that are safe for freezer use. Please note that plastics are less flexible when cold or frozen and may break if dropped. Also note that water expands when frozen, so when filled to capacity the container could expand and crack and the wiper seal could be deflected.
- Do not use utensils with sharp edges (i.e. knives) in the container, as they could scratch or scuff the container surface.