

Shaker Bottle

1W29, 1W30

Shake things up with Rubbermaid Shaker Bottle! The Rubbermaid Shaker Bottle provides a unique bottle solution with a mixing mechanism for mixing protein shakes and remixing juices or smoothies.



Care & Use

To keep your new bottles looking their best, we recommend the following:

- Remove label and wash before use.
- Do not use abrasive cleansers or scrubbers since they may dull the finish.
- This item is made of materials that are safe for normal household dishwashers. Be sure that the item is secured in the top rack so that it does not come in contact with the dishwasher element to avoid melting.
- This item is made of materials that are safe for freezer use. Please note that plastics are less flexible when cold or frozen and may break if dropped. Also note that water expands when frozen, so when filled to capacity the container could expand and crack.
- Do not use utensils with sharp edges (i.e. knives) in the container, as they could scratch or scuff the container surface.
- Dairy, Juice, or other liquids that spoil easily should not be kept in product for prolonged periods. Juice may start to ferment in as little as a day.
- **CAUTION:** Not intended for use with hot liquids or carbonated beverages. Hot liquids may cause the sides of the bottle to get very hot to the touch, and any pressure build-up in the container could cause the lid to pop open unexpectedly, leading to injury or spills. Do not subject to high temperatures for long periods of time, do not boil or fill bottle with boiling water.