

Charcoal Grill Assembly Instructions

Tips and Features for Safe and Easy Usage

Verify that all parts are included with your grill BEFORE beginning assembly by checking the Parts lists. If all parts are not included, do not attempt to assemble grill and call customer service at (888)-922-2336.

USE DIAGRAM(S) PROVIDED FOR ASSEMBLY.

SAFETY GUIDELINES

1. Do not leave grill unattended once charcoal is lit. **Keep children and pets away from the lit grill at all times.**
2. This grill is intended for OUTDOOR USE ONLY. Do not attempt to use grill in an enclosed area or under an overhead cover of any kind, including a tent or patio cover. Grill should never be used closer than 36" from a wall, either on the back or side(s) of grill.
3. Place grill outside on a firm, level surface. Do not use this grill on a surface that will burn or melt, such as a plastic artificial surface or wood table. Keep grill away from wooden fences, overhanging trees, or other flammable objects.
4. **DO NOT USE GASOLINE, ALCOHOL, OR KEROSENE IN THIS GRILL.** Use only commercial charcoal lighter fluid with charcoal briquettes or pre-soaked charcoal briquettes.
5. To prevent harm to people, pets or property, do not move the grill once the charcoal has been lit.
6. Once charcoal is lit, the grill and surrounding surfaces will become very hot. Use proper outdoor cooking mitts and utensils, and avoid skin contact with all hot surfaces on the grill.
7. To extinguish charcoal after cooking, douse the charcoal with sand or spray with a fine mist of water.
8. After grill has cooled, remove ashes from the ash catcher, cover, and store the grill while not in use.

Parts List

1. Attach the carrying handle to the top of the body of unit.
2. Attach the small handle to the outside of the lid.
3. Attach dampers to both ends of the body.
4. Place wire fire grate in bottom of grill.

