



## **Owner's Manual Double Burner Fish Fry Cart**








**LP GAS TANK NOT INCLUDED**

### **⚠ WARNING:**

**FOR OUTDOOR USE ONLY. DO NOT LEAVE UNATTENDED WHILE IN USE.  
ADULT ASSEMBLY REQUIRED.**

**For customer service or replacement parts, please call 1-888-922-2336**
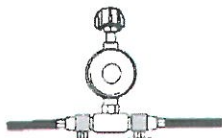
# Parts List


No.	Description	Qty	No.	Description	Qty
A	Top Part	1	D	Rectangle Frying Pan with Single Basket/Thermometer	1
				Rectangle Frying Pan with Double Basket/Thermometer	1
B	Bottom Part	1	E	Hose Assembly	1
					
C	Wheel	2	F	Set of Nut and Bolt	4
					

# ASSEMBLY INSTRUCTIONS


## TOOLS REQUIRED:

### ADJUSTABLE WRENCH AND TORQUE WRENCH (NOT INCLUDED)

1. Wrench tighten two wheels to the bottom half.
2. Place top half of unit (with burners) on bottom half of unit (with wheels).
3. Insert four 1/4 x 1" bolts through holes in top and bottom of unit.
4. Wrench tighten with four 1/4 x 1" nuts.
5. Refer to Figure 1 below for hose assembly instructions.
6. Go to the Use and Care Section of this manual for further instructions.

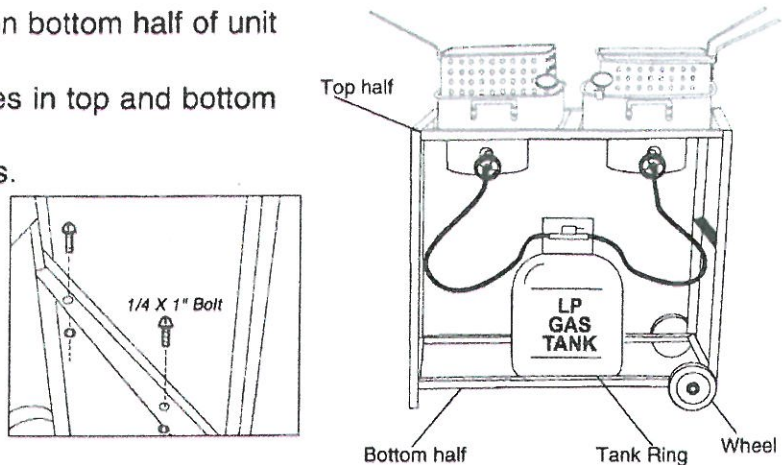


**Figure 1** DOUBLE HOSE WITH MALE FITTINGS AND NEEDLE VALVES WITH NON-ADJUSTABLE PRESSURE REGULATOR.

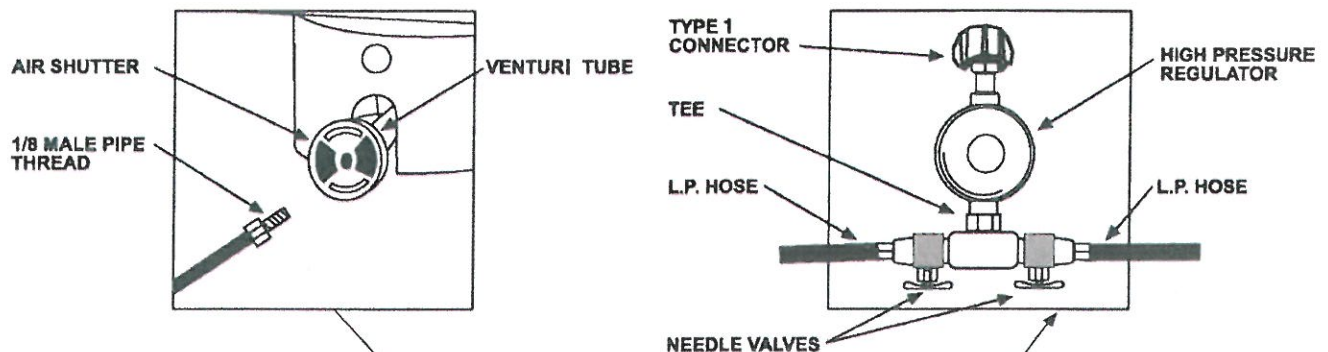

Tighten the hose fittings into the venturis with a torque wrench, up to a torque of 95 to 105 lb./in.

Alternatively, hand tighten securely and then, using the torque wrench, tighten an additional 1-1 1/2 turns.

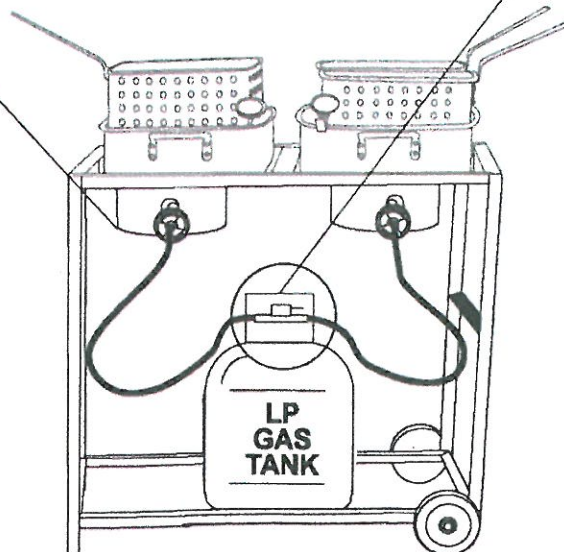



# USE AND CARE

---

1. Check that your 20 lb. LP gas cylinder is not over-filled. The maximum weight of a properly filled cylinder is approximately 38 lbs.
2. Verify that the cylinder valve has the proper connection for a Type 1 Connection.
3. Check that your hose assembly is set to restrict gas flow. If you have an adjustable regulator, turn the regulator control counterclockwise until it stops. This is the OFF position. If you have a non-adjustable regulator with manual valve(s), turn the manual valve(s) clockwise until it stops. This is the OFF position.
4. Attach the regulator to the cylinder valve by turning the Type 1 fitting clockwise. Hand tighten with the regulator positioned upright. Refer to the appropriate assembly diagram for the appliance, page 3, Figure 1.
5. Perform the leak test as shown on page 5.
6. Before lighting the cooker, check that the venturi tubes are free of obstruction and that the male pipe thread are properly threaded into the venturi tubes. Failure to do so before lighting could result in a flashback.

# Leak Test

1. Ensure the LP cylinder valve and all burners are space "OFF".
2. Ensure the LP cylinder is connected to the regulator.
3. Mix up a solution of 50% water and 50% liquid dish soap. Do not use any household cleaning solution.
4. Open the LP tank valve by turning the needle valves counterclockwise. If you hear a rushing sound, turn the gas off immediately. In that case, there could be a leak at the connection. Reconnect the cylinder to the regulator.
5. Spray or brush on the solution covering the following areas: burner welds, regulator and cylinder connection, gas hose connections to the regulator, and all gas hose connections to the burners.
6. Growing bubbles on any of the parts and connections listed above indicate a gas leak. Immediately shut off the LP tank valve by turning the needle valves clockwise. Retighten the connections or order replacement parts as needed. Continue to test as necessary until no leaks are detected.

## **WARNING**

1. DO NOT USE if you cannot stop a leak. Be sure the LP cylinder valve is closed. If the LP cylinder is still leaking, contact your LP dealer or local fire department.
2. Do not use any match or open flame, or smoke, during leak testing.
3. Do not light a burner during leak testing.