

CANADA GOOSE FLUTE

U.S. Patent No. 5,910,039

Model No. 811

Flute calls typically take a little time to master. Primos® Flex-End makes mastering the Goose Flute easy. In the past, reproducing the basic honk of the Canada Goose took manipulating your hands to break the calls honk from a low to a high note. Now the Flex-End does it all for you. You can reproduce the Canada's language with ease.

- Flex End for Easy Control
- EXTRA Volume

Speak The Language®,

Will Primos

Will Primos

IMPORTANT: Please read all instructions & warnings before using this product to ensure proper and safe use.

INSTRUCTIONS & EXERCISES

HOLDING THE CALL: Place the call between your thumb and index finger where the hose attaches to the call. Place your call hand in the palm of your other hand forming a sound chamber. (See Diagram 1.)

This call works best when you bring air up from your lungs by tightening your stomach muscles or by blowing the call as you would a whistle. Pitch or tone is regulated by the pressure and volume of air you put into the call.

BREAKING THE CALL: To break the call from low to high, blow into the call producing the low note. Then increase air pressure while moving your tongue forward enough to partially block the bottom half of the call's opening. This technique channels the air and forces it faster across the reed, breaking it into the high note. Now, take a breath of air and follow the exercises below.

GREETING CALL or HONK: Use this call as geese approach your position to get their attention. Say, "Too-it, Too-it, Too-it" or "Grr-it, Grr-it, Grr-it," growling at first and ending it with a clear voice.

INTERMEDIATE GREETING CALL: Use this call to appeal to their basic instinct to join the flock. It is simply a shorter, more excited greeting call or honk. Cast the sounds right and left with your non-call hand. Start low and slow. Say, "To-it, To-it, To-it," into the call.



CLUCKS: Short, choppy honks. Say "To-it, To-it," quickly into the call, casting the sound left and right.

DOUBLE CLUCKS: Alternate Clucks so that your hands are open for one note and closed for the next. Alternate each note low to high.

COME BACK CALLS: Use this if the geese turn away from your spread. Hold this note for about 1 second. Say, "E-E - Ah" or "To - it - ha." Repeat this 2 - 3 times or until the geese turn toward your spread.

LAY DOWN CALLS: Use this call as geese are closing in on your spread, but don't seem quite convinced. Use a low voice and say, "Grr-Grr-Grr." You can also do a continuous growl to make this call. Make this sound when geese are close. Continuously make this sound when they're on approach. Also add some short, low Clucks to these Lay Down Calls.

NOTCHED REED SYSTEM: Allows you to take the call apart, clean, and reassemble it without worrying about tuning. Reassemble by pointing the end of the trough away from you. Be sure that the cut edge is on the left. Line the notches in the reed up with the pins on the trough. Place the wedge onto the trough with its holes lined up with the trough pins. Push this entire assembly back into the barrel and you are ready to go again. (See Diagram 2.) The design allows you a slight flexibility in the position of the reed so you can tune the call to match your personal calling style.

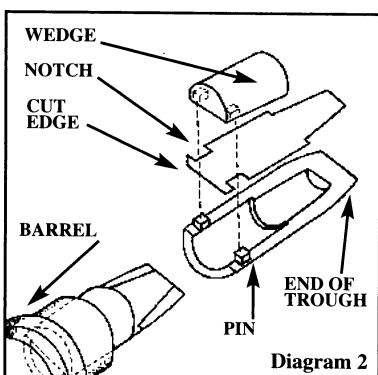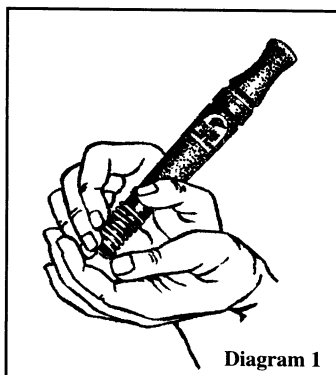

WARNING: Primos® game calls are so accurate that you might attract other hunters as well as game. The user of this product assumes all risk of injury in association with the use of this product.



All Primos® game calls come with a Limited Lifetime Service Guarantee. For warranty or service information email service@primos.com or call customer service at (601) 366-1288.



MADE IN U.S.A.

PRIMOS®
HUNTING CALLS

primos.com