




AKS 74 U

KALASHNIKOV


SOFTAIR
ELECTRIC POWERED
A.E.G.
6mm PLASTIC BBs

THE MOST FAMOUS WEAPON OF THE 20th CENTURY


Instructions Manual

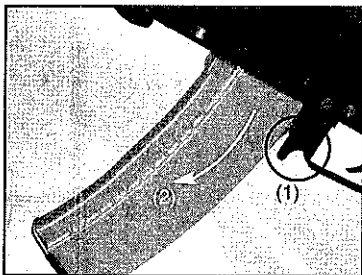


Release magazine by pushing on the lever (1) located in front of the trigger guard and slide the magazine out of receptacle (2).

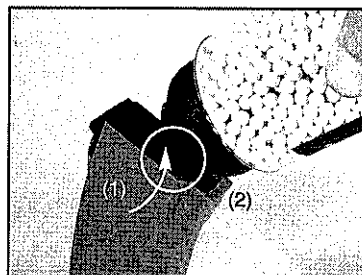


To load the magazine, open the tab on top (1) and fill the compartment with recommended BBs (about 430 BBs) into storage compartment (2).

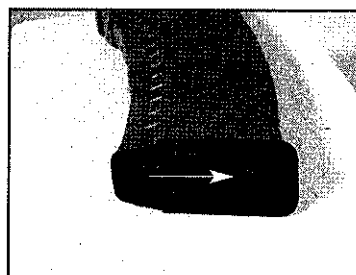


Spin the wheel located at the bottom of the magazine anticlockwise for about 1 minute. Repeat operation every 150 shots.

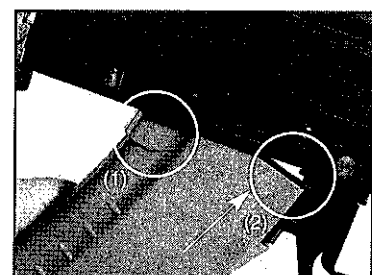



Insert magazine in receptacle. If you notice some dry firing during burst, wind the wheel again.

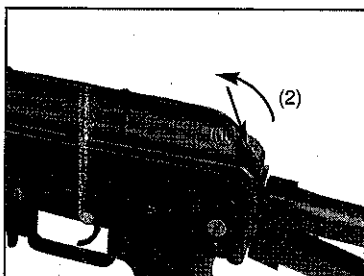

Push the release (1) as shown on the picture to open the receiver top (2).

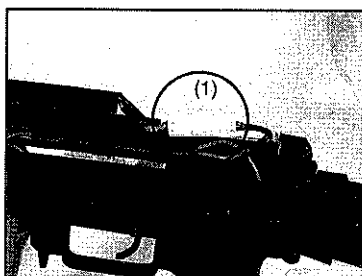

Plug the charged battery to the connector (1) and slide it into compartment. Make sure to place the wires in a right position.

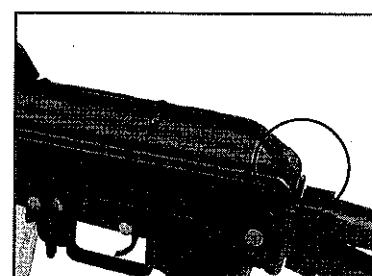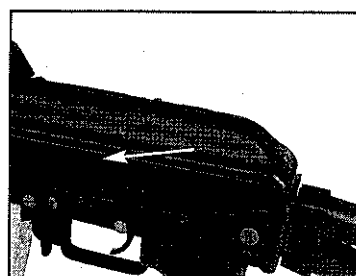

Lock cover back in place as shown in picture.



Mikhail Kalashnikov

KALASHNIKOV


AKS 74 U

SOFTAIR
ELECTRIC POWERED


REG

6mm PLASTIC BBs


THE MOST FAMOUS WEAPON OF THE 20th CENTURY

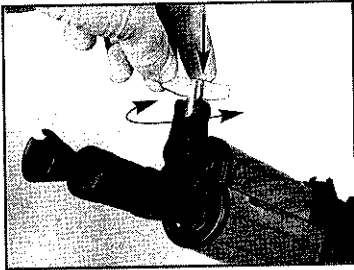


Front sight can be adjusted in elevation.

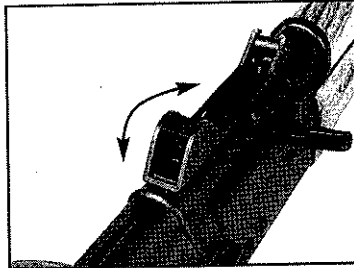


Rear Sight offers 2 positions

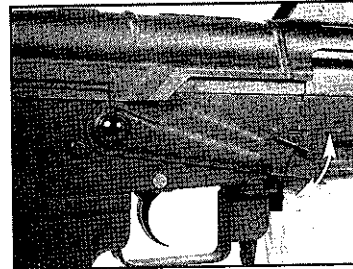


To start shooting, aim at a target, put the selector on one of two low positions (Semi or Full Auto)

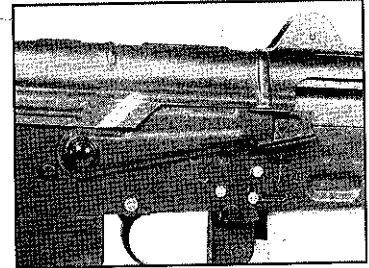

Once finished shooting, put the shooting selector back on the "Safe" position. Make sure the rifle is stored empty of any ammunition, magazine removed.

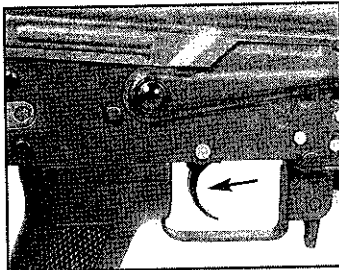


Pull the trigger.




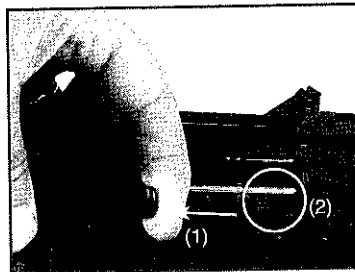


Access the Spin Up system by pulling on the charging handle (1). Move the cursor to adjust firing system (2). Adjust according to weight of BBs used.

CHARGE OF BATTERIES - CHARGE DES BATTERIES.

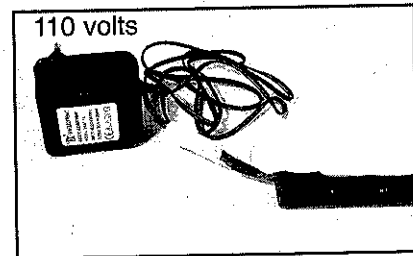

Plug your battery pack on the small charger and plug this small charger on 110 volts. If your pack is empty, it will need between 4 and 5 hours to be fully charged. TIP : do not forget that any pack which begins to rise in temperature (lukewarmness) after a certain period of charge is a battery pack fully charged.

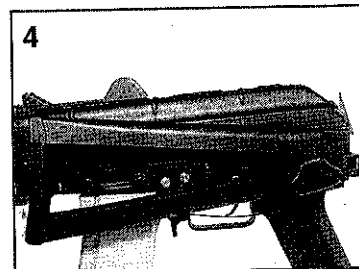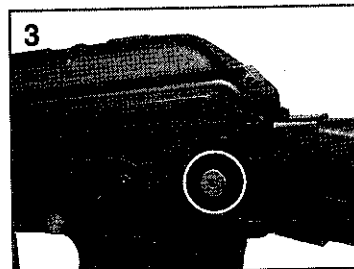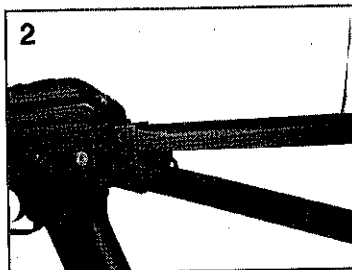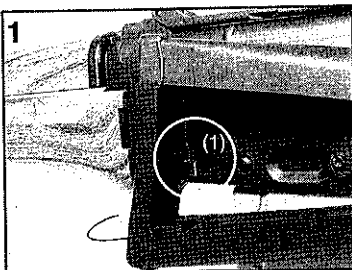

Press the release (1) and push the stock firmly to unfold it in the right position. To fold it, press on the release shown on picture 3 and fold it.

CAUTION

**DISASSEMBLING (TAKING APART) THIS SOFTAIR
PRODUCT VOIDS ALL WARRANTY.
PRODUCT MUST BE RETURNED IN
ITS ORIGINAL PACKAGING.**

**FEDERAL LAW PROHIBITS ALTERING OR
REMOVING THE ORANGE MARKING
OR PAINTING OVER THE TRANSPARENT
PART OF THIS PRODUCT.**

**Do NOT use 6 mm paintballs with this
SOFTAIR PRODUCT. Shooting paintballs with this
unit will result in jamming and will void any
warranty. For a proper operation, use following
Cybergun and /or Palco 6mm .20 & .25g BBs**



AKS 74 U

AIRSOFT
ELECTRIC POWERED

R.E.G.



6mm PLASTIC BBs

KALASHNIKOV

THE MOST FAMOUS WEAPON OF THE 20th CENTURY

FULL METAL VERSION



WARNING



Sale restricted to ADULTS ONLY, 18 years of age or older. Proof of age required at the moment of purchase SALES PERSONNEL- CHECK PICTURE ID PRIOR TO SALE OF THIS PRODUCT. This softair gun is intended for recreational or training purposes. Do not aim or shoot at other people or domestic animal. Protective goggles and mouth protection MUST be worn when operating this SOFTAIR gun by the user and any person within range. Misuse may cause serious injury, especially to the eyes. The owner /user should adhere to all federal and state laws governing the ownership and use of softair guns. CONSULT YOUR LOCAL LAW ENFORCEMENT AGENCY PRIOR TO USE. MISUSE OR UNSAFE USE MAY RESULT IN SEVERE INJURIES OR DEATH. THIS IS NOT A TOY. THIS IS AN AIR OPERATED SOFTAIR GUN 6MM CALIBER INTENDED FOR USE ONLY BY ADULTS OR MINORS UNDER CLOSE ADULT SUPERVISION. READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USE. ANY ALTERATION AS TO THE COLORATION AND/OR MARKING OF THIS PRODUCT TO MAKE THIS PRODUCT LOOK MORE LIKE A FIREARM IS DANGEROUS, MAY CAUSE CONFUSION, MAY BE MISTAKEN TO BE A REAL FIREARM BY LAW ENFORCEMENT OFFICERS OR OTHERS AND MAY BE A CRIME. IT IS DANGEROUS AND MAY BE A CRIME TO BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC. PARENTS MUST NOT ALLOW MINORS TO TAKE THIS PRODUCT TO SCHOOL. HAVING THIS PRODUCT AT SCHOOL MAY BE A CRIME.

PALCOSPORTS

DISTRIBUTED in the USA BY :
 PALCOSPORTS, 8575 MONTICELLO LANE NORTH,
 MAPLE GROVE, MN, 55369-4546 USA



Mode d'emploi - Notice for use



- Don't look inside the barrel.
- Ne pas regarder dans le canon.
- Nunca hacia los ojos.
- Non guardare mai nella canna.
- Gehen Sie sicher, das die Waffe nicht geladen ist und schauen Sie niemals direkt in den Lauf!




- Never aim at the creature
- Ne viser personne
- Nunca apuntar a una persona
- Non puntare mai l'arma su persone
- Niemals in die richtung einer person




- Be careful to avoid rebounding
- Attention aux rebonds de billes
- Cuidado con los rebotes
- Fare attenzione al rimbalzi
- Achten Sie auf zurück prallende Kugeln. Verletzungsgefahr!



- Keep out of reach of children
- No pas laisser à portée des enfants
- No dejar a l'alcanze de ninos
- Bewahren Sie Waffe unzugänglich für Kindern auf! Entfernen Sie das Magazin und entfernen Sie evtl. das Gas aus der Waffe!

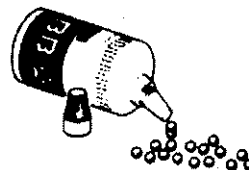

- Use only recommended Cybergun and / or Palco .20 & .25g BBs
- Utiliser uniquement les billes Cybegun et Palco 0,20 et 0,25g préconisées
- Utilizar unicamente las bolas Cybergun et Palco de 0,20 et 0,25 g
- Verwenden Sie ausschließlich 0,20 et 0,25 g Cybergun BB's

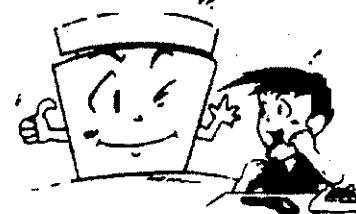

A question ?
info@palcospports.com